



ScreenBeam 1000 EDU Wireless Display Receiver with Classroom Commander

Firmware 11.0.8.0

User Manual

V1.3

For Catalog # SBWD1000EDU

ScreenBeam®

Table of Contents

Part I	Getting Started.....	1
1.1	Contents in the Box.....	1
1.2	Meet ScreenBeam 1000.....	1
1.2.1	ScreenBeam 1000	2
1.3	Minimum Requirements	2
1.3.1	System Requirements.....	2
1.3.2	Network Requirements	3
1.3.3	Setup Requirements.....	3
Part II	Installing the Receiver	4
2.1	Setting up ScreenBeam 1000 Receiver	4
2.2	Connecting the Receiver to a Network	5
2.2.1	Wired Connection	6
2.2.2	Wireless Connection	8
Part III	Connecting Client Device	11
3.1	Overview of Wireless Display Network Modes.....	11
3.1.1	Local Wi-Fi.....	11
3.1.2	Wi-Fi Miracast	12
3.1.3	Wireless Display over existing LAN.....	12
3.2	Connect using Local Wi-Fi	13
3.3	Connect using Wi-Fi Miracast.....	19
3.4	Connect using Existing Wireless Network or LAN	23
Part IV	Display and Control Options	30
4.1	Projection Mode	30
4.2	USB over Network Control	31
4.3	Using Interactive Touch Display	32
4.3.1	System Requirements.....	32
4.3.2	Setup Requirements.....	32
4.3.3	Supported Features.....	33
4.3.4	Setup and Instructions	33
Part V	Device Management for IT Administrator.....	34
5.1	Using ScreenBeam CMS Software.....	34
5.2	Using Local Management on ScreenBeam.....	34
5.2.1	Method 1: ScreenBeam Local Wi-Fi Network	35
5.2.2	Method 2: Network Connection via DHCP.....	38
5.2.3	Method 3: Wireless P2P Direct Connection	38
5.3	Configuring ScreenBeam.....	39
5.3.1	General Settings	39
5.3.1.1	Renaming the Receiver	39
5.3.1.2	Setting up the Login Username and Password.....	40
5.3.1.3	Setting up the Receiver's Display Language	40
5.3.1.4	Modifying the Receiver's Host Name.....	41

ScreenBeam®

5.3.1.5	Setting up Time Zone	42
5.3.2	Setting up Wireless Display Mode.....	43
5.3.3	Wireless Display over LAN.....	44
5.3.3.1	Setting up Wireless Display over LAN for Windows 10 Devices	44
5.3.3.2	Setting up AirPlay Mirroring for macOS/iOS Devices	45
5.3.3.3	Setting up Wireless Display over LAN for Chrome OS Device and Device with Chrome Browser	47
5.3.4	P2P Wireless Settings	48
5.3.4.1	Setting up Miracast Connection	48
5.3.4.2	Setting up P2P Operating Channel	49
5.3.4.3	Setting up Transmit Power	50
5.3.5	Security Settings.....	51
5.3.5.1	Setting up PIN Pairing Method.....	51
5.3.6	Display Settings	54
5.3.6.1	Setting up Display Sharing Mode	54
5.3.6.2	Setting up Receiver Name Display for Quick Switch	55
5.3.6.3	Setting up Information Display on RTC Screen.....	56
5.3.6.4	Managing HDMI/VGA Port Output.....	59
5.3.6.5	Waking up the Receiver	60
5.3.6.6	Adjusting TV Screen Size	61
5.3.6.7	Updating the Receiver's Background Image	62
5.3.6.8	Updating the Receiver's Screen Saver Image	63
5.3.7	Digital Signage Settings	65
5.3.8	Network Settings.....	66
5.3.8.1	Setting up Local Wi-Fi Network Mode	66
5.3.8.2	Setting up an Interface for CMS Connection.....	67
5.3.8.3	Renaming Ethernet Interface's Network Name	68
5.3.8.4	Setting up the Receiver's IP Address.....	69
5.3.8.5	Specifying a DNS Server for the Receiver	70
5.3.9	Local Wi-Fi Settings	71
5.3.10	Receiver Management Access Settings.....	73
5.3.10.1	Specifying ScreenBeam CMS for the Receiver	73
5.3.10.2	Specifying a Port for the Receiver's LMI.....	74
5.3.10.3	Setting up Local Management Interface Access.....	74
Part VI	Updating Firmware for the Receiver	76
6.1	Firmware Update via LMI.....	76
6.1.1	Updating Firmware from a Local PC.....	76
6.1.2	Updating Firmware from the Internet	79
6.2	Firmware Update using a USB Flash Drive	81
Part VII	Receiver Maintenance	82
7.1	Setting up Receiver Logging	82
7.2	Exporting Receiver Log with LMI.....	83
7.3	Disabling the Reset Button.....	84
7.4	Viewing System Uptime	84

ScreenBeam®

7.5	Rebooting the Receiver	85
7.6	Resetting the Receiver to Default	85
7.7	Tips for Optimal Performance	87
Appendix I	Troubleshooting and FAQs	88
	Troubleshooting	88
	FAQs	90
Appendix II	Notices	93
	Warranty	93
	GPL Info.....	93
	Technical Support.....	93
	FCC Warning.....	94
	IC Warning.....	95
	CE Statement.....	96

Part I Getting Started

Thank you for your purchase of ScreenBeam 1000 EDU Wireless Display Receiver (hereinafter refer to as “ScreenBeam 1000”).

ScreenBeam 1000 wireless display receiver enables native screen mirroring from your Windows, Android, Apple, and Chromebook devices - without apps or wires. ScreenBeam 1000 enables the teachers and presenters to wireless display to the front of the room display.

The receiver boasts some great features, including fast connect, quick switch, multi-view support, digital signage, enhanced security, IT manageability, smooth video playback, 4K HDMI output, ultra-low delay, Windows 10 optimization, versatile compatibility, low power consumption, and more.

For optimal wireless display experience, we strongly recommend you update your receiver to the latest firmware. Check firmware update now on <https://support.screenbeam.com>.

1.1 Contents in the Box

Contents in the receiver’s package are listed below:

- ScreenBeam 1000 receiver (1)
- HDMI® Cable (1)
- AC Power Adapter (1)
- Magnetic Mounting Kit (1)
- Product documentation

1.2 Meet ScreenBeam 1000

This manual is applicable to the following catalog #s:

- SBWD1000EDU

1.2.1 ScreenBeam 1000



- Power Input (**12V/3A**), for power supply
- USB ports, (two USB 2.0 ports and one USB 3.0 port), for provisioning CMS connection data, firmware update, connecting to touch display, and USB over network control (UIBC)
- Ethernet Port (**ETHERNET**), for receiver management with ScreenBeam Central Management System (CMS) / Local Management Interface (LMI) or for multi-media streaming over infrastructure network
- HDMI Output (**HDMI OUT**), for connecting to HDTV/projector with an HDMI port for video and audio output
- VGA Output (**VGA OUT**), for connecting to an HDTV/projector with a VGA port for video output
- Audio Output (**AUDIO**), for outputting audio to speaker (available for both HDMI out and VGA out)
- Power Indicator, indicating power supply status
- Reset button, for resetting the receiver to default settings

1.3 Minimum Requirements

System requirements for ScreenBeam 1000 are shown below:

1.3.1 System Requirements

Client device from 2015 or newer with one of the following operating systems:

- Windows 10 build 1709 (and later)
- macOS X 10.10 (and later)
- iOS 9 (and later)
- Android 4.4 (and later) with Miracast
- Chrome OS 74.0.3729.159 (and later) with Cast

1.3.2 Network Requirements

For wireless display over the existing wireless network or LAN:

- Ethernet: 100BASE-T 10/100 connection (1 Gbps is recommended)
- Wireless: 802.11ac (5 GHz is strongly recommended)
- Multicast DNS (mDNS) support is required for auto-discovery of ScreenBeam
- Required ports
 - 5353 (UDP) for Multicast DNS (mDNS) discovery
 - 7100 (TCP) for macOS, iOS and Windows 10 mirroring
 - 7250 (TCP) for Miracast over LAN data stream
 - 47000 (TCP) for Airtunes in AirPlay
 - 18000-18009 (TCP) for macOS and iOS AV data

Note: Additional network configuration is not required for Wi-Fi Miracast enabled device to connect. Verify Group Policy and firewall settings allow Wi-Fi Direct groups or hosted networks.

1.3.3 Setup Requirements

- ScreenBeam 1000 receiver
 - Display with an available HDMI input or VGA input
 - (Optional) Touchscreen with USB touch cable
 - An Ethernet network connection with DHCP IP or a Wi-Fi router
- Note:** This is used for wireless display over LAN and management.

Part II Installing the Receiver

This chapter explains how to connect ScreenBeam 1000 to a display such as an HDTV or projector. Make sure you have all the contents from the receiver's package available before starting.

2.1 Setting up ScreenBeam 1000 Receiver

It is quite easy and fast to set up the receiver. You can easily complete the setup by your own.


To connect ScreenBeam 1000 to an HDTV:

1. Get the receiver, AC power adapter, and HDMI cable from the receiver's package, and place the receiver next to the display.
2. Plug one end of the HDMI cable into the HDMI port ("HDMI-OUT") on the receiver, and the other end into an available HDMI port on the display.
3. (Optional) If the display has USB HID touch capability, insert the HID USB connector into a USB port on the ScreenBeam receiver. (USB cable is not included).
4. (Optional) Connect one end of the Ethernet cable to the receiver's Ethernet port and connect the other end to the network switch with DHCP IP. (Ethernet cable is not included).

Note: Refer to **Section 2.2** for more information on setting up a network connection.

5. Plug the connector of the power cord to the receiver's power input port labeled "12V/3A", and plug the power adapter to a power outlet.

When the above steps are complete, the hardware should be connected as shown in the figure below:

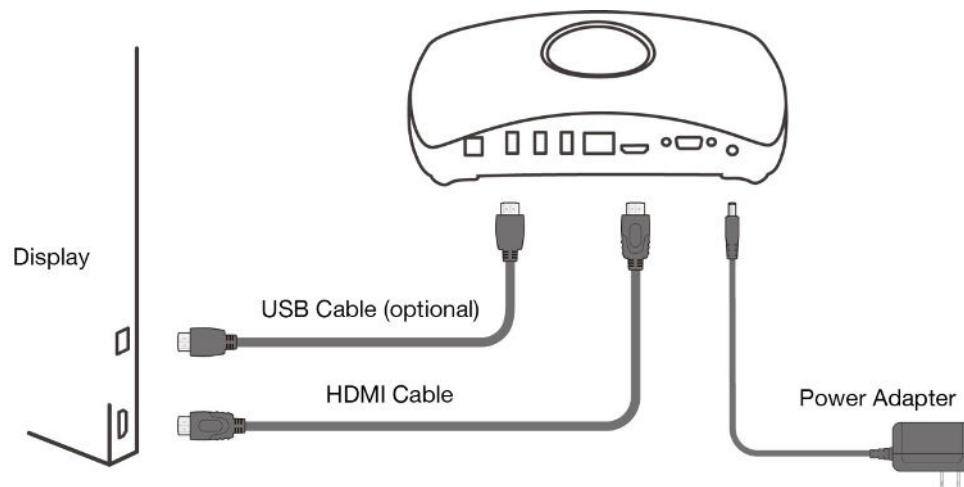

Note: Power adapter may vary in different region.


6. Turn on the display and set it to display the input from the correct HDMI port (the one you have plugged into in Step 2).

7. Verify that the “**Wireless Display Ready to Connect**” screen appears on the display.



The receiver is connected to the display, and it is ready for use.

8. (Optional) If your display/projector provides no HDMI input but VGA input, you can connect your ScreenBeam receiver to the display/projector via VGA output, as shown below:

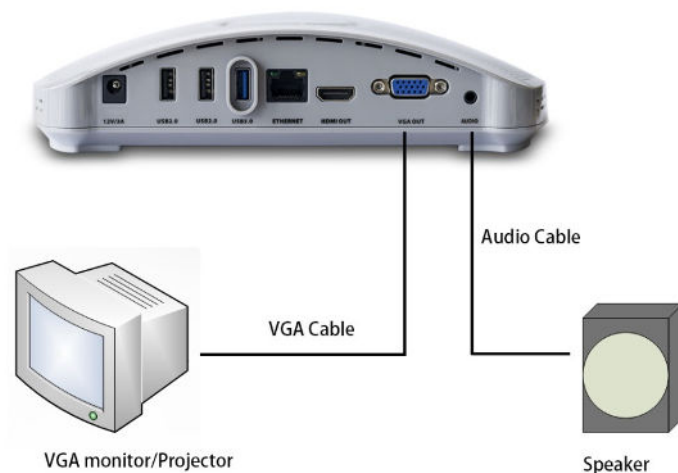

2.2 Connecting the Receiver to a Network

ScreenBeam 1000 receiver can connect to a network via wired or wireless connection. You can deploy ScreenBeam 1000 receivers based on your network requirements. If both Ethernet and wireless connections are configured, the Ethernet connection has higher priority.

Note: The setups in this section are optional.

2.2.1 Wired Connection

ScreenBeam 1000 receiver provides a built-in Ethernet port, allowing direct connection to an Ethernet network.

To connect the receiver to an Ethernet network, follow this procedure:

1. (Optional) If you are going to connect your receiver to your network with RADIUS authentication, you need to configure authentication parameters through LMI > **Network Settings** > **Network Interface Settings** > **Ethernet Interface** > **Connection Settings**.

Network Interface Settings

Ethernet Interface

Network Name

Internal network

Connection Settings

Authentication

Open
PEAP-MSCHAPV2
EAP-TLS

TCP/IP Settings

IP Assignment

☒ Auto ☐ Static

IP Address

0 0 0 0

Subnet Mask

0 0 0 0

Default Gateway

0 0 0 0

DNS Assignment

☒ Auto ☐ Static

Primary DNS Server

Secondary DNS Server

When **Authentication** is set to **PEAP/MSCHAPV2**,

- **User Name:** This is for authentication through a RADIUS server. It is RADIUS account User Name.
- **Password:** It is RADIUS account password.

When **Authentication** is set to **EAP-TLS**, the following items are available:

- **User Name:** It is the User Principal Name or RADIUS Identity (if necessary).
Note: The User Name supports these characters: a-z, A-Z, 0-9, @, ., and _.
- **Password:** It is the password of the Private Key.
- **System Date & Time:** It is used to set date and time for the receiver. Users should set the date and time according to the validity period of the certificates.
- **CA Certificate:** It is the root certificate. Click the **Browse** button to browse and add


the certificate.

- **User Certificate:** It is the user certificate. Click the **Browse** button to browse and add the certificate.
- **Private Key:** It is the user's private key. Click the **Browse** button to browse and add the certificate.
- **Validity Period:** It displays the effective period of the certificates.

Note:

- Currently, only certificates in “.pem” format are supported, and the certificates must be generated using the “DER encoded binary X.509” method.
- The length of the certificate file name must not exceed 64 bytes, and the file size must be less than 100 KB.
- All the three certificates are required for authentication.
- Users should select the right certificate file for each type of certificate.

2. Connect your ScreenBeam receiver to your network with a quality Ethernet cable.
3. The receiver will be assigned an IP address after a few seconds, if a DHCP server is available on your network.

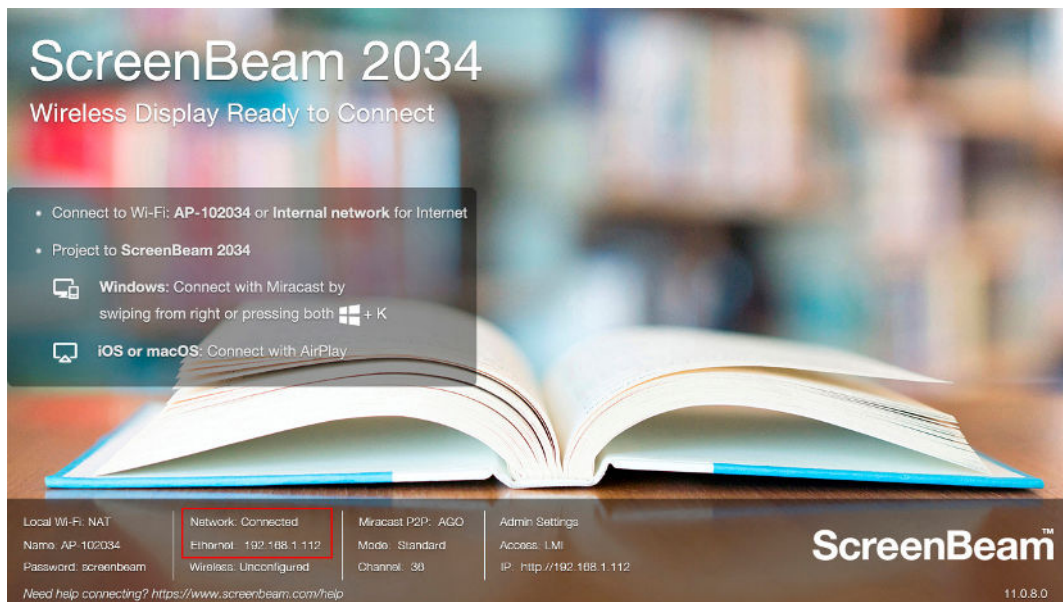

Note: ScreenBeam receiver is set to obtain an IP address automatically by default. If you want to set the receiver's IP address or DNS server to static, consult your network administrator.

- Refer to Section **5.2 Using Local Management on ScreenBeam** for detail on how to log into the receiver's LMI.
- Refer to Section **5.3.8.4 Setting up the Receiver's IP Address** for detail on how to set up the receiver's IP address.
- Refer to Section **5.3.8.5 Specifying a DNS Server for the Receiver** for detail on how to set up the receiver's DNS server.

2.2.2 Wireless Connection

ScreenBeam 1000 receiver provides a built-in WLAN adapter, which allows the receiver to wirelessly connect to your network. It is required to set up the wireless connection parameters before starting the connection.

To connect the receiver to a wireless network, follow this procedure:

1. Go to the receiver's Local Management Interface (LMI), and set IP address assignment and DNS assignment to auto in the **Remote Management** tab page.

Note:

- If you want to set the receiver's IP address or DNS server to static, consult your network administrator.
 - Refer to Section 5.2 Using Local Management on ScreenBeam for detail on how to log into the receiver's LMI.
 - Refer to Section 5.3.8.4 Setting up the Receiver's IP Address for detail on how to set up the receiver's IP address.
 - Refer to Section 5.3.8.5 Specifying a DNS Server for the Receiver for detail on how to set up the receiver's DNS server.
2. Go to LMI > **Network Settings** > **Network Interface Settings** > **Wireless Interface** > **Connection Settings**, and configure the parameters according to specific requirements.

Wireless Interface

Connection Settings

Network Name

Security Type

TCP/IP Settings

IP Assignment

IP Address

Subnet Mask

Default Gateway

DNS Assignment

Primary DNS Server

Secondary DNS Server

Open
Shared
WPA-PSK[TKIP]
WPA2-PSK[AES]
WPA-PSK[TKIP]+WPA2-PSK[AES]
PEAP-MSCHAPV2
EAP-TLS

0 0 0 0

0 0 0 0

0 0 0 0

☒ Auto ☐ Static

0 0 0 0

0 0 0 0

- **Network Name:** The SSID of the wireless router (AP).
- **Security Type:** Select a security type, the one you have selected on your wireless

router. Available security types are **Open**, **Shared**, **WPA-PSK[TKIP]**, **WPA2-PSK[AES]**, **WPA-PSK[TKIP]+WPA2-PSK[AES]**, **PEAP/MSCHAPV2**, and **EAP-TLS**.

When **Security Type** is set to **Shared**, **WPA-PSK[TKIP]**, **WPA2-PSK[AES]**, or **WPA-PSK[TKIP]+WPA2-PSK[AES]**,

- **User Name:** Not used.
- **Password:** The pre-shared password for the wireless SSID.

When **Security Type** is set to **PEAP/MSCHAPV2**,

- **User Name:** This is for authentication through a RADIUS server. It is RADIUS account User Name.
- **Password:** It is RADIUS account password.


When **Security Type** is set to **EAP-TLS**, the following items are available:

- **User Name:** It is the User Principal Name or RADIUS Identity (if necessary).
Note: The User Name supports these characters: a-z, A-Z, 0-9, @, ., and _.
- **Password:** It is the password of the Private Key.
- **System Date & Time:** It is used to set date and time for the receiver. Users should set the date and time according to the validity period of the certificates.
- **CA Certificate:** It is the root certificate. Click the **Browse** button to browse and add the certificate.
- **User Certificate:** It is the user certificate. Click the **Browse** button to browse and add the certificate.
- **Private Key:** It is the user's private key. Click the **Browse** button to browse and add the certificate.
- **Validity Period:** It displays the effective period of the certificates.


Note:

- Currently, only certificates in “.pem” format are supported, and the certificates must be generated using the “DER encoded binary X.509” method.
- The length of the certificate file name must not exceed 64 bytes, and the file size must be less than 100 KB.
- All the three certificates are required for authentication.
- Users should select the right certificate file for each type of certificate.

3. Click the **Apply** button, and then click **OK** on the pop-up message box to save the network connection parameters. The adapter will connect to the wireless router (AP) in a few seconds if the receiver is not connected to an Ethernet network.

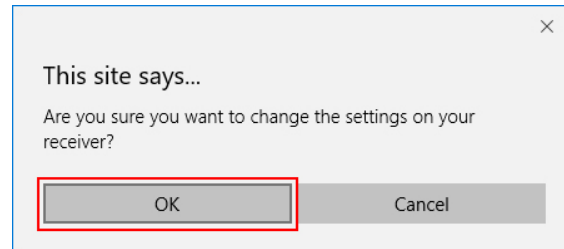

Note: The WLAN adapter may take some time to connect to your network, depending on your network environment.

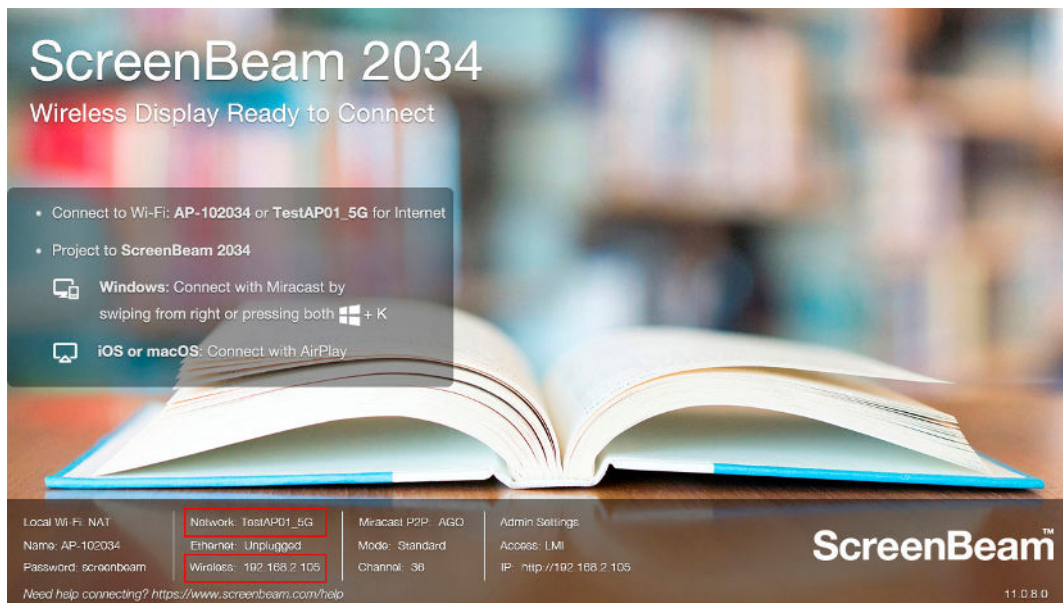

Part III Connecting Client Device

This section provides the instructions on how to connect to ScreenBeam using the native screen mirroring from the most common operating systems.

Refer to www.screenbeam.com/setup for details and instructions for common operating systems.


Note: The web page will display instructions based on the client-device OS. Use the links at the bottom of the web page to select OS-specific instructions.

3.1 Overview of Wireless Display Network Modes

The ScreenBeam 1000 allows presenters with Windows 10, macOS, iOS, Android, or Chromebook device to wirelessly display without requiring any apps. ScreenBeam 1000 offers a variety of secured network modes to support connection from internal users on different subnets and external guest users. ScreenBeam 1000 supports local Wi-Fi, Wi-Fi Miracast, and wireless display over existing infrastructure network. Two or more modes can operate concurrently to support various scenarios where both internal and guest users could simply connect and project.

3.1.1 Local Wi-Fi


The ScreenBeam Wi-Fi mode provides the simplest form of network for client devices to connect and project. In this mode, user needs to connect the client device Wi-Fi to the ScreenBeam Wi-Fi and then select the receiver to mirror. This mode is ideal for guest client devices that need wireless display and/or Internet access. Internet is available if the ScreenBeam receiver is connected to the existing network, wired or wireless, and the receiver's local Wi-Fi is set to NAT or Bridge. Mobile device with cellular service can access the Internet and wireless display if bridge mode is disabled.

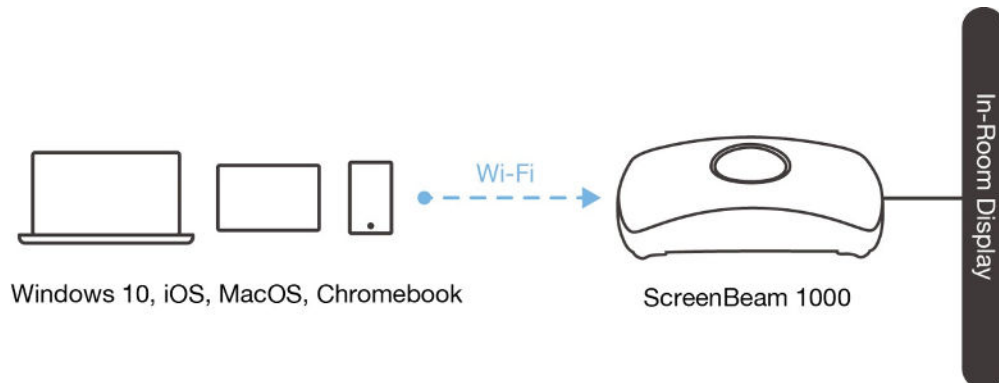

Note: ScreenBeam Wi-Fi is fully secured and manageable via ScreenBeam CMS with options to tune the wireless transmission power, channel and encryption type.


3.1.2 Wi-Fi Miracast

The Wi-Fi Miracast mode allows compatible Wi-Fi Miracast devices to connect directly to ScreenBeam, even when connected to an infrastructure wireless network. Miracast is commonly available on Windows 10/8.1 and Android 4.4 (and later) devices since 2015. Users can enjoy wireless display and Internet access if the client device is already connected to Wi-Fi.

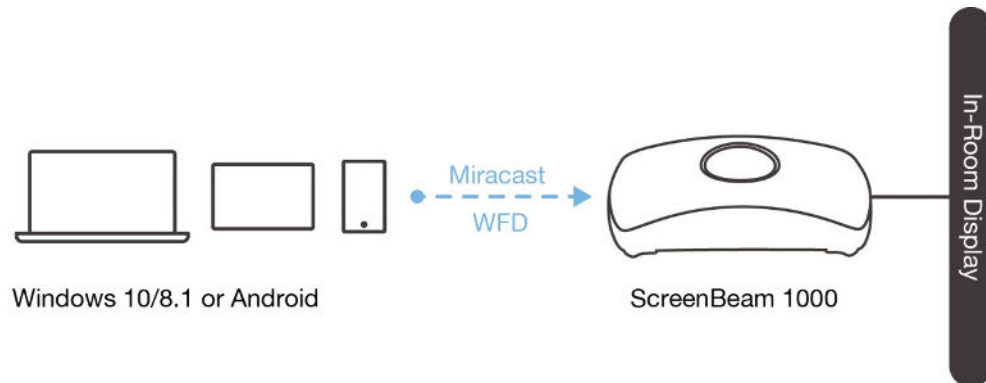

3.1.3 Wireless Display over existing LAN

ScreenBeam 1000 can be connected to the existing wireless or wired network and supports wireless display for client devices on either network. This is a common setup to support client devices that need access to network resources. Additional port and network configurations may be required for this mode to work seamlessly.

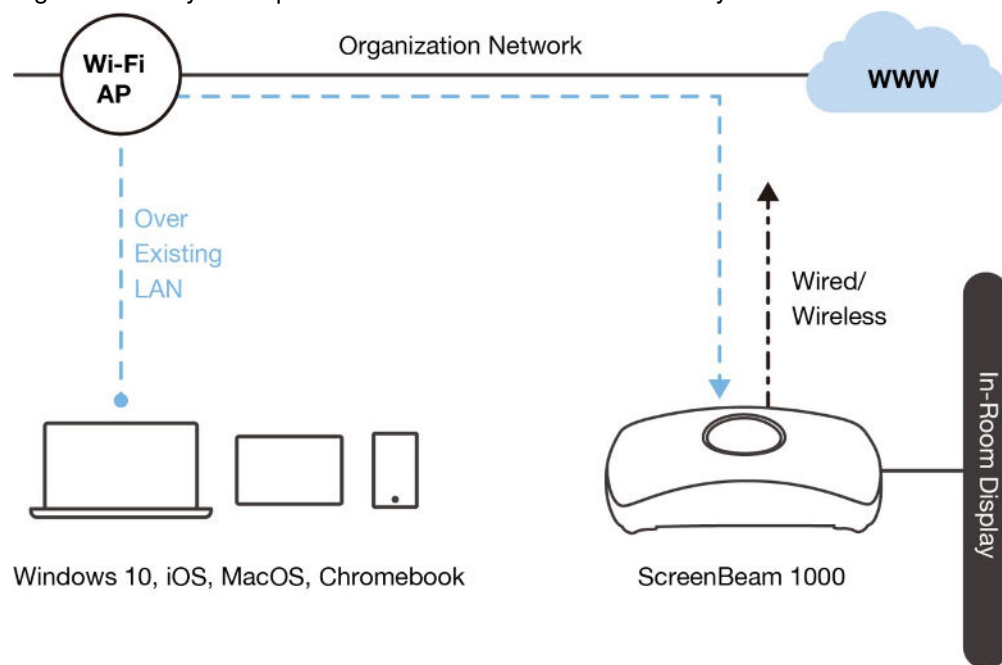

3.2 Connect using Local Wi-Fi

This section explains how to connect a client device to ScreenBeam 1000 using the local AP on ScreenBeam 1000.

1. Make sure that the **Wireless display over LAN** feature is enabled for Windows 10, macOS/iOS AirPlay and/or Google Cast screen mirroring. Refer to section **5.3.3 Wireless Display over LAN** for detail.

Note: You can also configure your receiver with CMS.

Wireless display over LAN

Wireless display over LAN allows client devices to project over the local network connection. ScreenBeam receiver must be connected to the local network (recommended) or via Wireless.

Windows 10	☒ Enable	☐ Disable
macOS/iOS native screen mirroring	☒ Enable	☐ Disable
iOS push mode	☐ Enable	☒ Disable
ChromeOS/Chrome native screen mirroring	☒ Enable	☐ Disable

2. Connect the client device's Wi-Fi to the wireless network (AP SSID) as shown on the TV display. And enter the password for the wireless network. By default, the password is **screenbeam** (case-sensitive).

Note: For Windows 10/8.1 or Android devices with Miracast, you can skip to Section **3.3 Connect using Wi-Fi Miracast**.



3. Select the ScreenBeam receiver name as shown on the TV display.



- For Windows 10
Select **Connect** from the Action Center by swiping from right or simultaneously pressing the Windows key  and K.

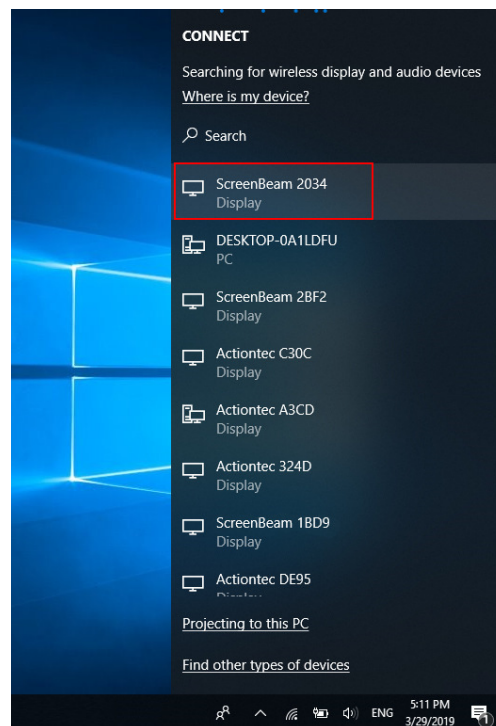


Figure: Selecting receiver on Windows 10 device

- For iOS or macOS
Connect with AirPlay  from the menu bar or control center.

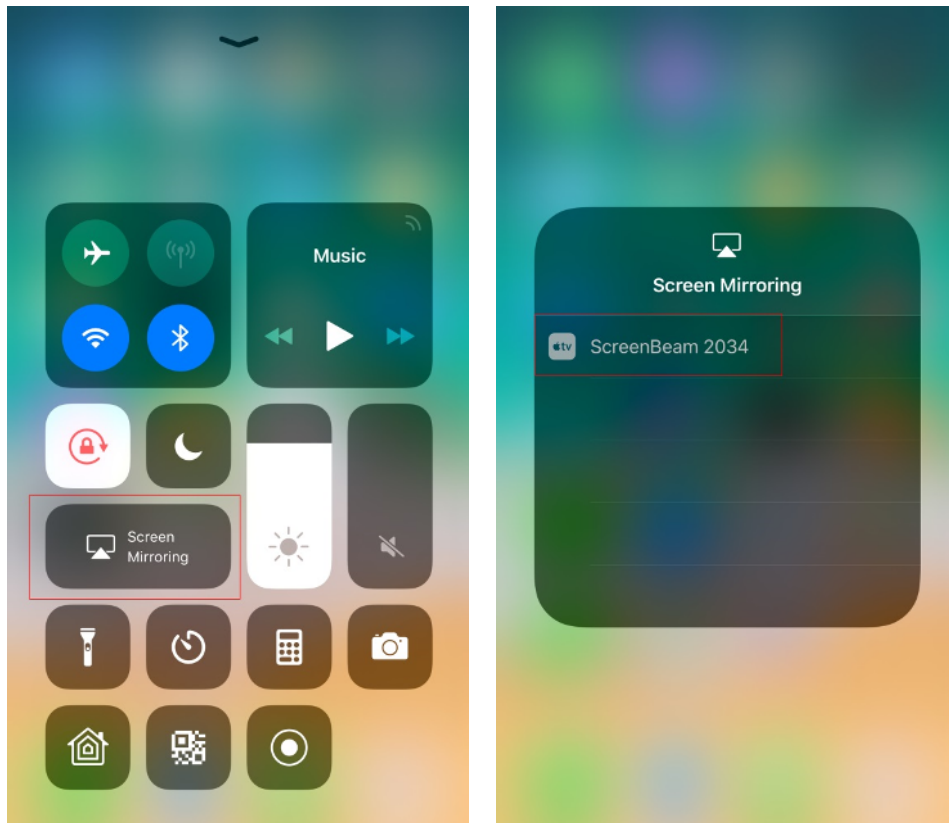


Figure: Selecting receiver on iOS device

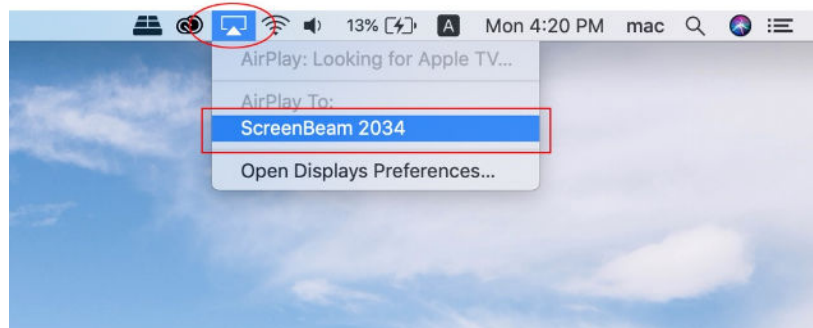


Figure: Selecting receiver on macOS device

- For Chrome OS or Chrome browser
Connect with **Cast** from the status area on Chrome OS or Chrome browser menu.

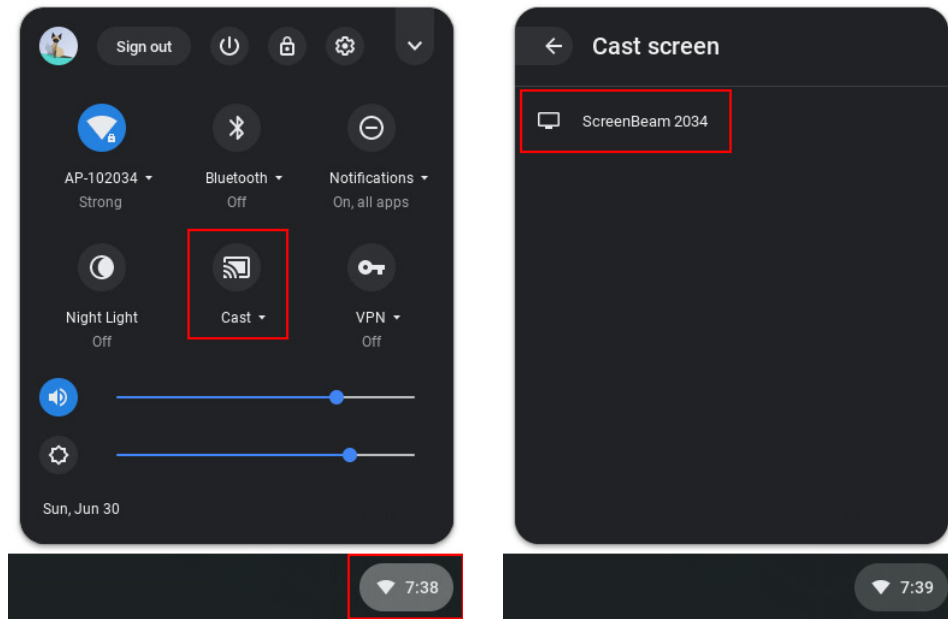


Figure: Selecting receiver on Chrome OS


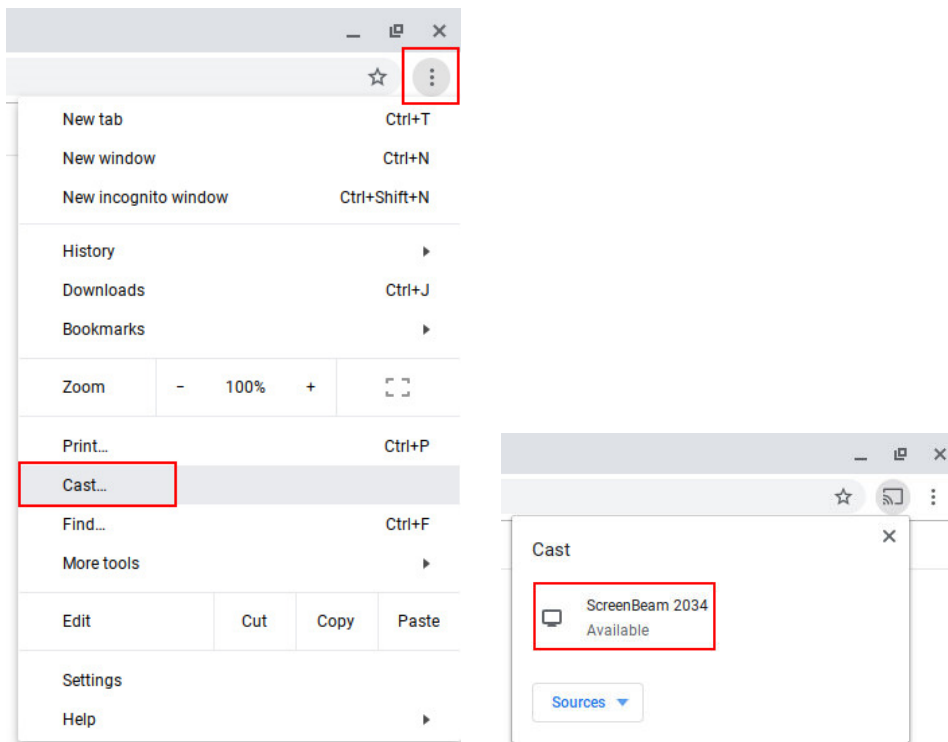



Figure: Selecting receiver on Chrome Browser


Note: On Chrome browser, you can define a source to cast before connecting to ScreenBeam.

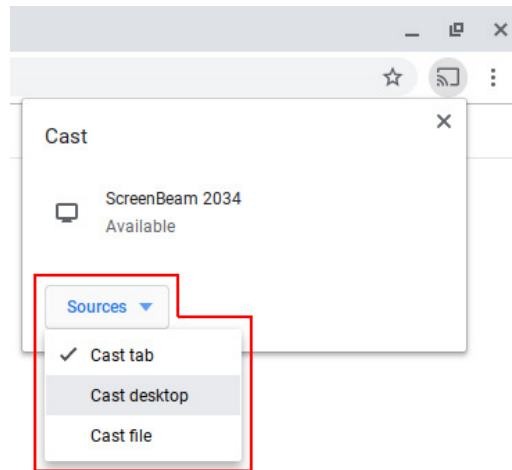


4. Enter in the PIN if required. If the PIN code is not displayed, try the hidden PIN 1234 (default).

Note: You should consult your network administrator if no PIN is displayed on the connected display device.

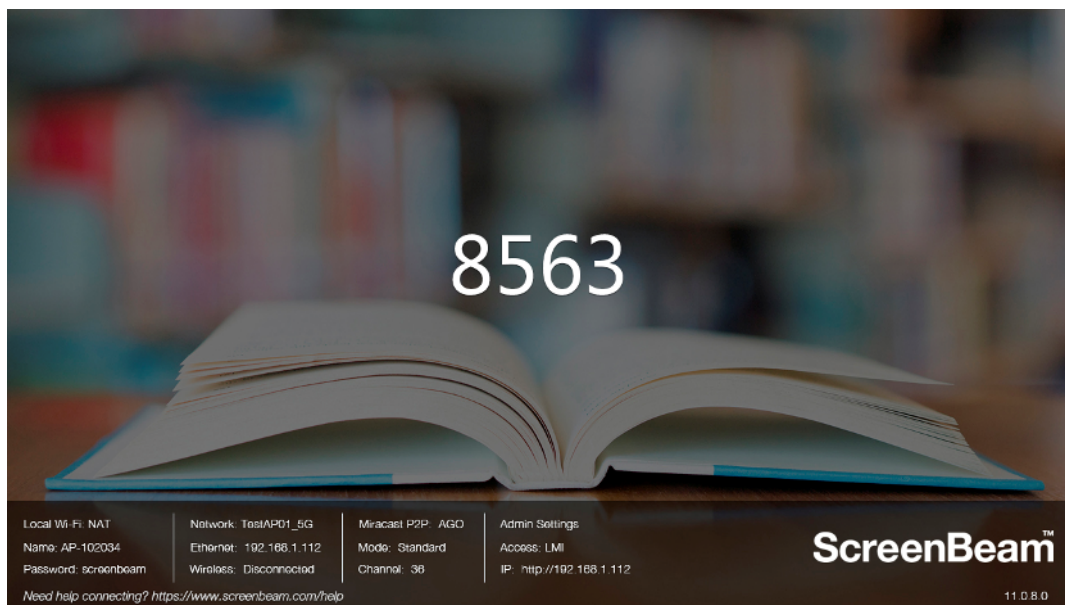

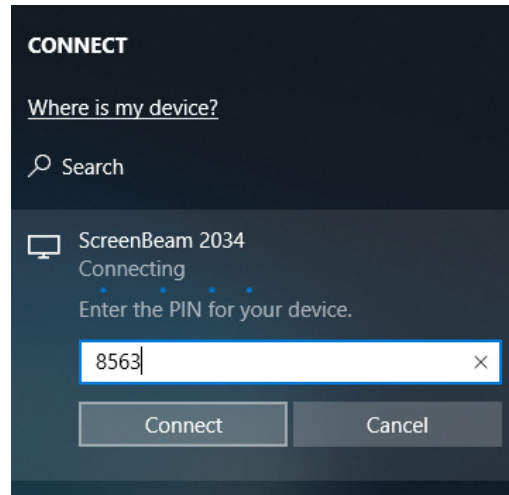

Windows 10

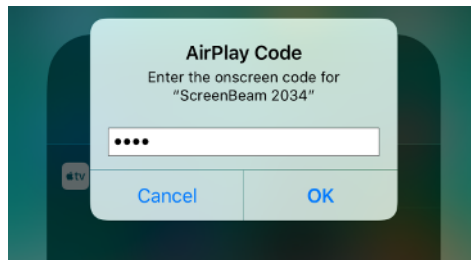


iOS



macOS

5. Select duplicate or extended screen mode if prompted.
6. If the display has touch functionality, Windows 10 devices can take advantage of the touch and inking feature by selecting **Allow mouse....** (Refer to section **4.2 USB over Network Control** for more details.)

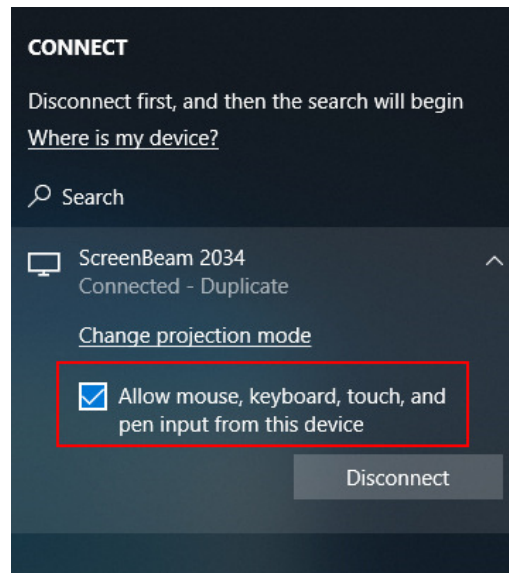

Note: To disconnect, follow instructions in step 3 to return to the screen mirroring menu and select mirroring off.


3.3 Connect using Wi-Fi Miracast

This section explains how to connect a client device to ScreenBeam 1000 using Wi-Fi Miracast.


1. Select the ScreenBeam receiver name as shown on the TV display.



- For Windows 10
Select **Connect** from the Action Center by swiping from right or simultaneously pressing the Windows key  and K.


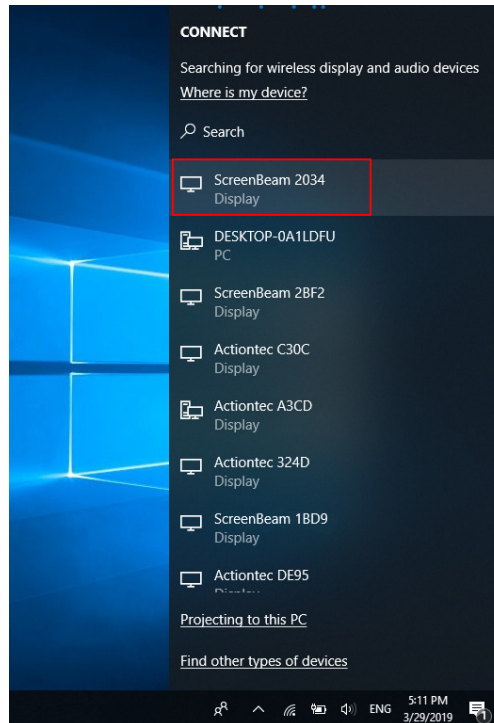


- For Android
Select the Screen Mirroring option from the quick access menu and follow the connection instructions.

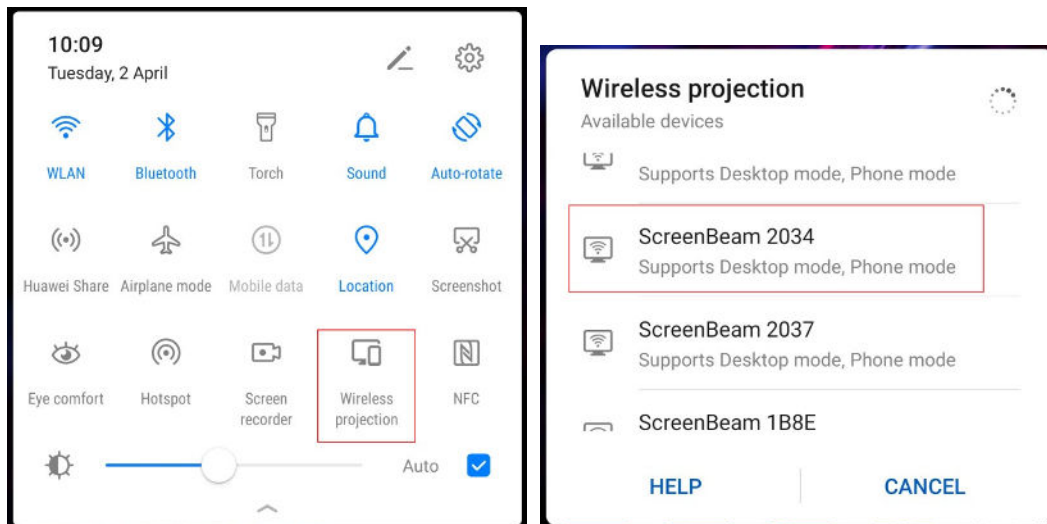


- Note:** Different Android device manufacturers may have different names for their wireless display apps.
2. Enter in the PIN if required. If the PIN code is not displayed, try the hidden PIN 1234 (default).
- Note:** You should consult your network administrator if no PIN is displayed on the

connected display device.

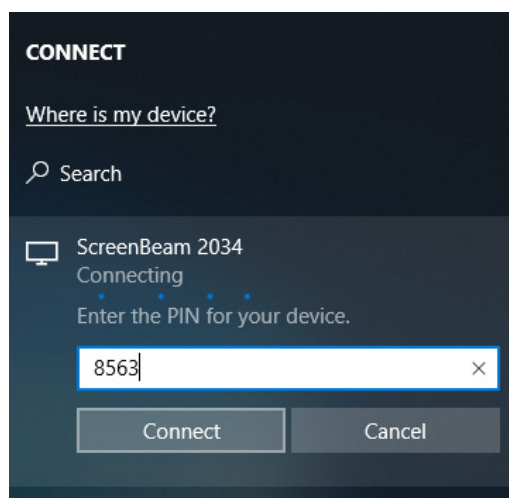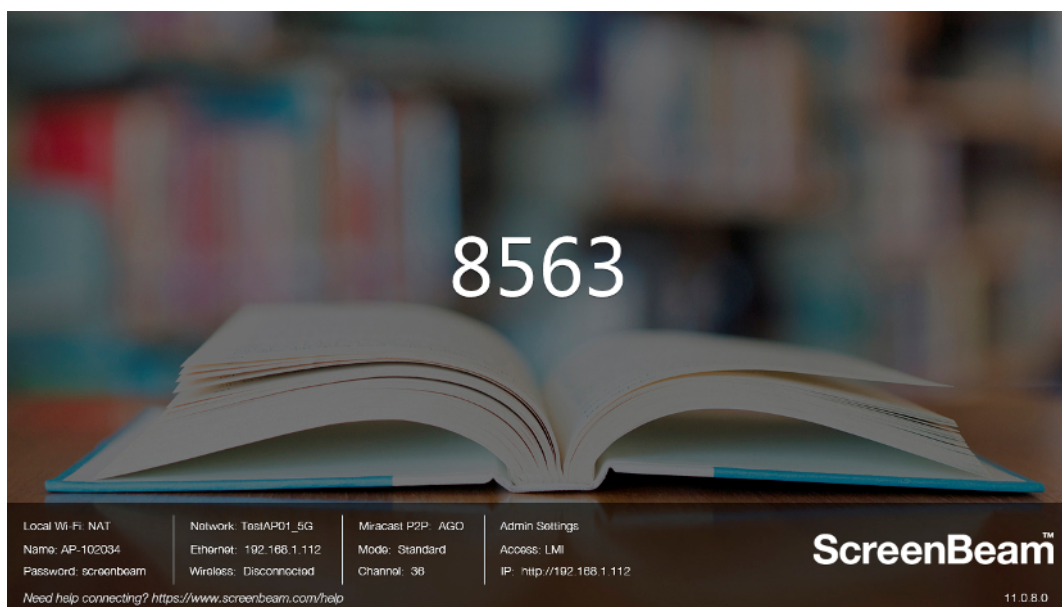


Windows 10

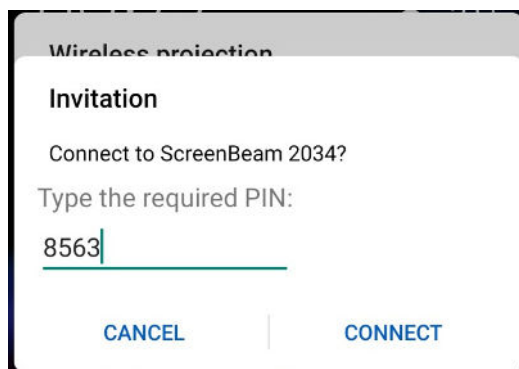

Android

3. Select duplicate or extended screen mode if prompted.

4. If the display has touch functionality, Windows 10 devices can take advantage of the touch and inking feature by selecting **Allow mouse....** (Refer to section **4.2 USB over Network Control** for more details.)

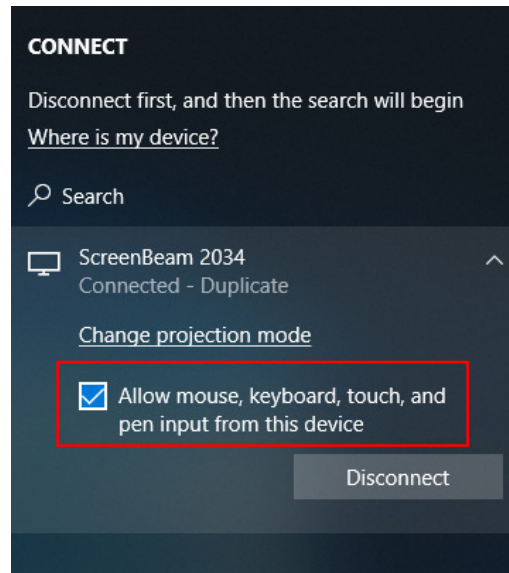

Note:

- To disconnect, follow instructions in step 1 to return to the screen mirroring menu and select mirroring off.
- Some Android devices do not support PIN and will fail to connect. Refer to section **5.3.5.1 Setting up PIN Pairing Method** below for instructions on how to configure ScreenBeam and disable PIN enforcement.

3.4 Connect using Existing Wireless Network or LAN

This section explains how to connect a client device to ScreenBeam 1000 using existing wireless network or LAN.

1. Make sure that the **Wireless display over LAN** feature is enabled for Windows 10, macOS/iOS AirPlay and/or Google Cast screen mirroring. Refer to section **5.3.3 Wireless Display over LAN** for detail.


Note: You can also configure your receiver with CMS.

Wireless display over LAN

Wireless display over LAN allows client devices to project over the local network connection. ScreenBeam receiver must be connected to a network (recommended) or via Wireless.

Windows 10	☒ Enable	☐ Disable
macOS/iOS native screen mirroring	☒ Enable	☐ Disable
iOS push mode	☐ Enable	☒ Disable
ChromeOS/Chrome native screen mirroring	☒ Enable	☐ Disable

2. Connect the ScreenBeam receiver to a known network where your client device can communicate over Wi-Fi. Refer to Section **2.2 Connecting the Receiver to a Network** for detail.
3. Verify the receiver obtains an IP address (shown on the **Wireless Display Ready to Connect** screen).

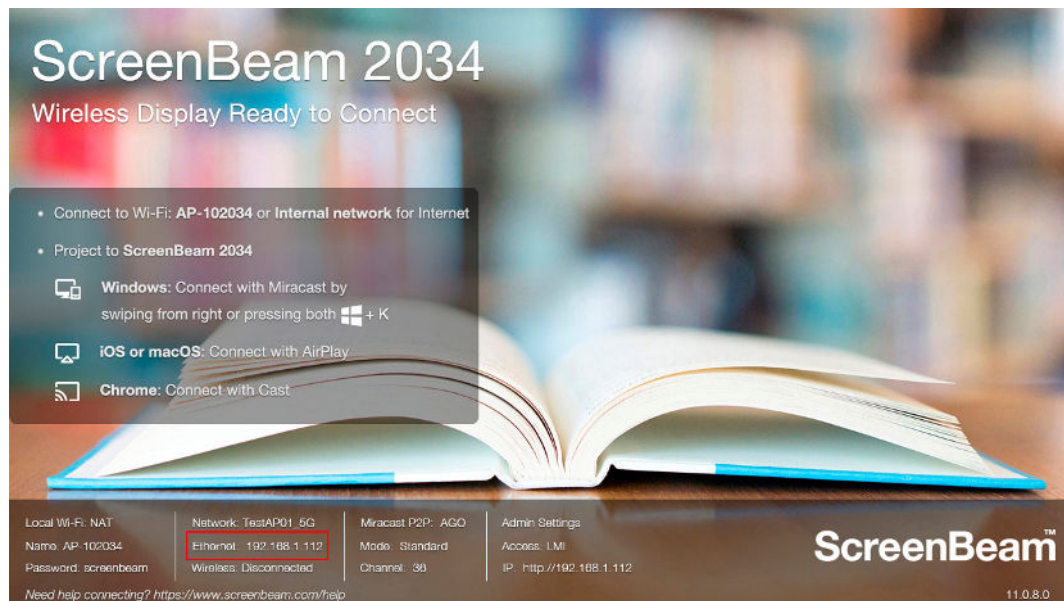

4. Connect the client device to the same network as the ScreenBeam receiver.

5. Select the ScreenBeam receiver name as shown on the TV display.



- For Windows 10
Select **Connect** from the Action Center by swiping from right or simultaneously pressing the Windows key  and K.

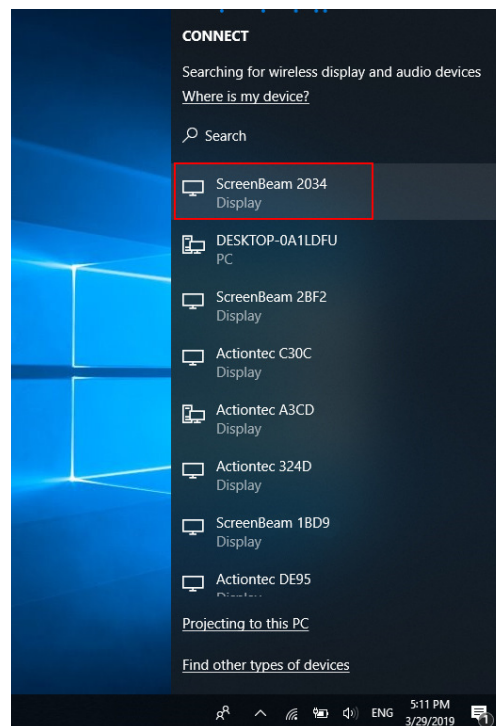


Figure: Selecting receiver on Windows 10 device

- For iOS or macOS
Connect with AirPlay  from the menu bar or control center.

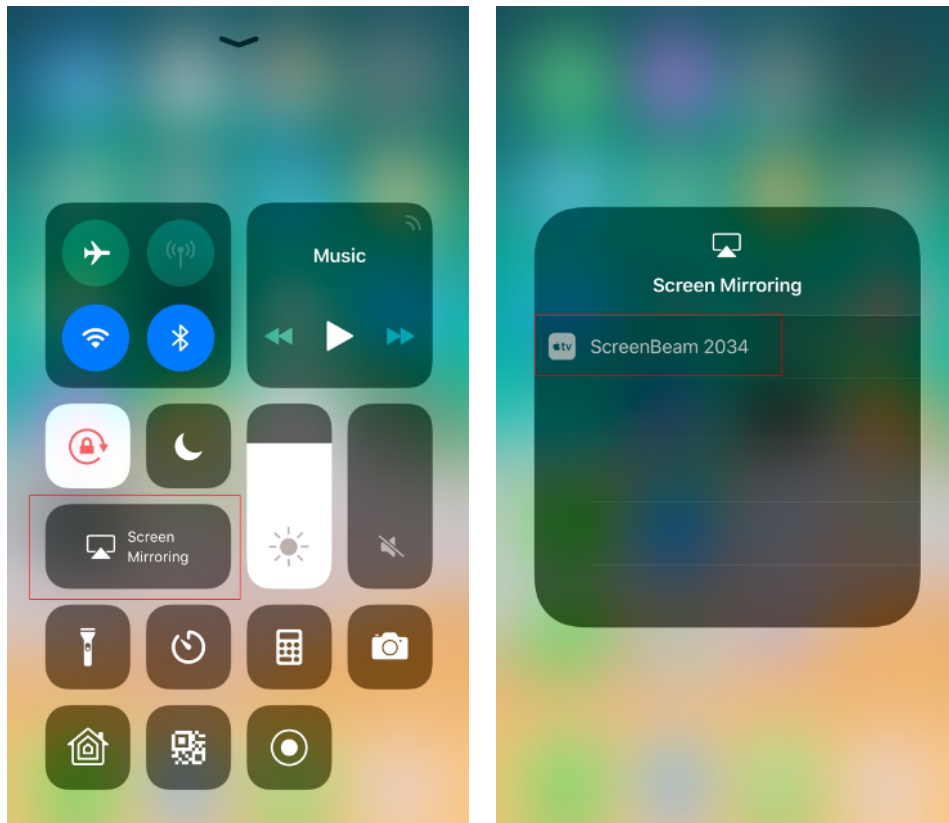


Figure: Selecting receiver on iOS device

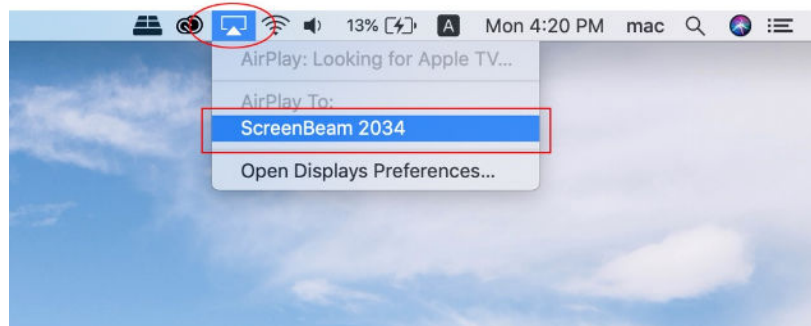


Figure: Selecting receiver on macOS device

- For Chrome OS or Chrome browser
Connect with **Cast** from the status area on Chrome OS or Chrome browser menu.

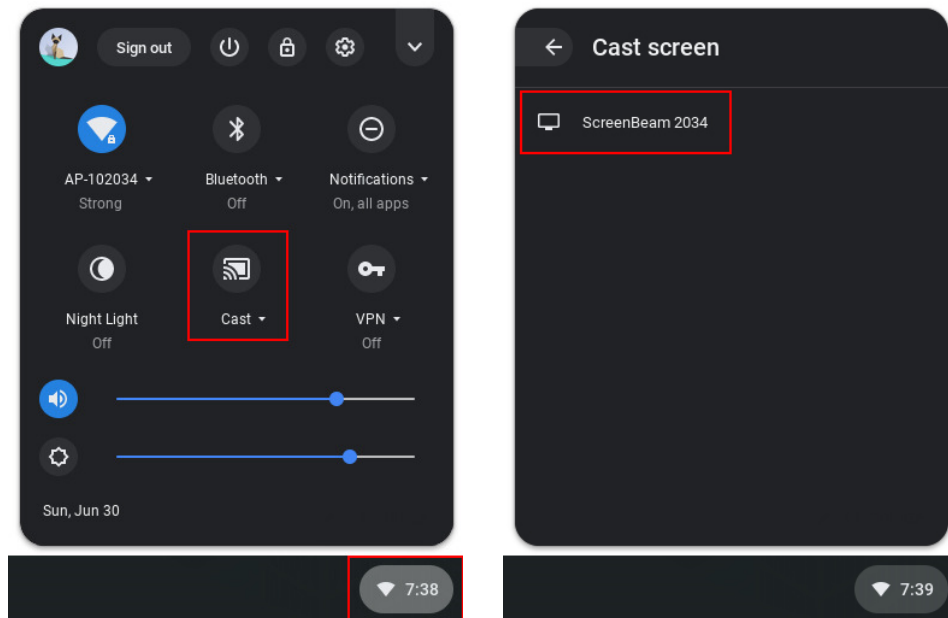


Figure: Selecting receiver on Chrome OS


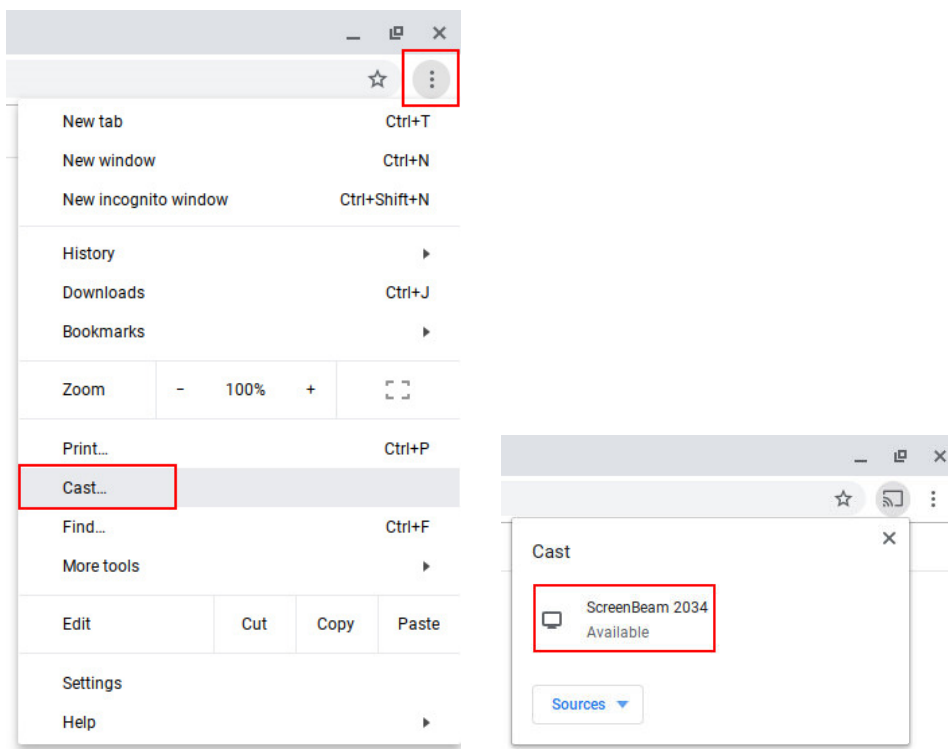



Figure: Selecting receiver on Chrome Browser


Note: On Chrome browser, you can define a source to cast before connecting to ScreenBeam.

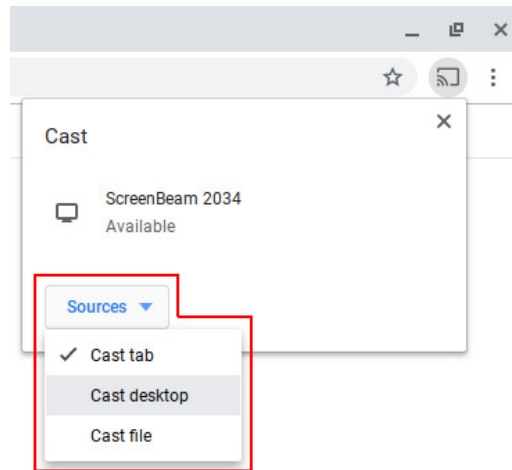


6. Enter in the PIN if required. If the PIN code is not displayed, try the hidden PIN 1234 (default).

Note: You should consult your network administrator if no PIN is displayed on the connected display device.

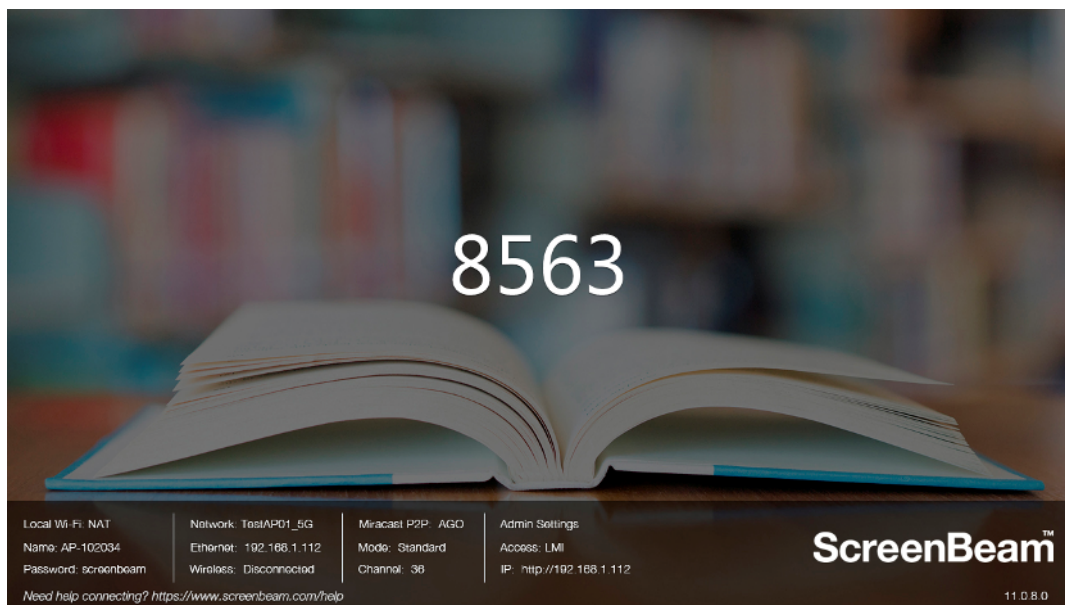

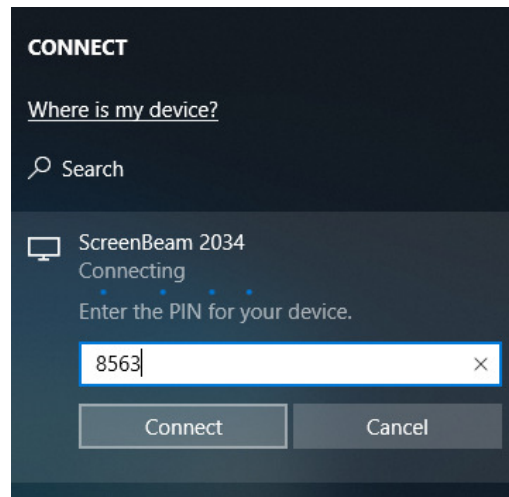

Windows 10

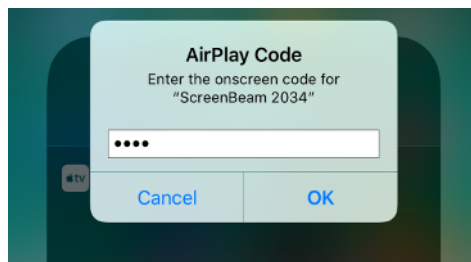


iOS



macOS

7. Select duplicate or extended screen mode if prompted.
8. If the display has touch functionality, Windows 10 devices can take advantage of the touch and inking feature by selecting **Allow mouse....** (Refer to section **4.2 USB over Network Control** for more details.)

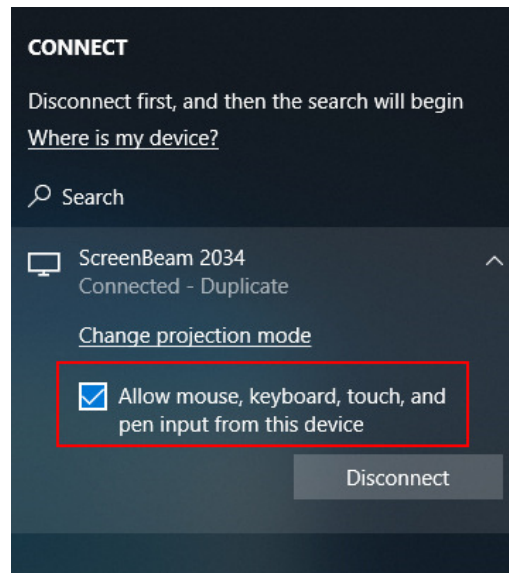

Note: To disconnect, follow instructions in step 5 to return to the screen mirroring menu and select mirroring off.

Part IV Display and Control Options


This chapter describes the projection modes and control options that are supported by the receiver.

4.1 Projection Mode


The receiver supports three projection modes when connected with a compatible wireless display application.

On Windows, press the **Windows** logo + **P** keys simultaneously ( + **P**) to launch the display options and select a desired display mode from the options.


Windows 10

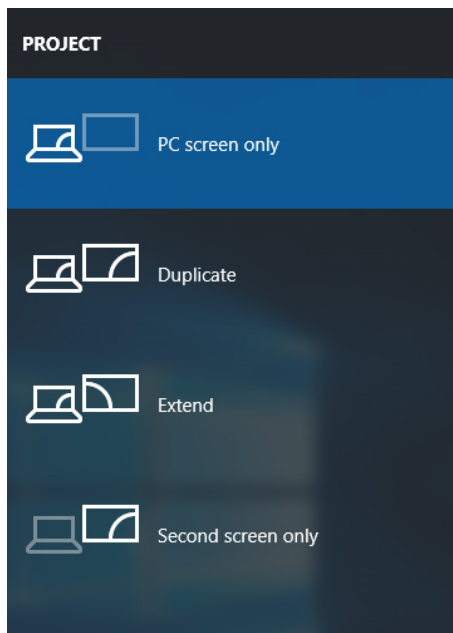

Windows 8.1

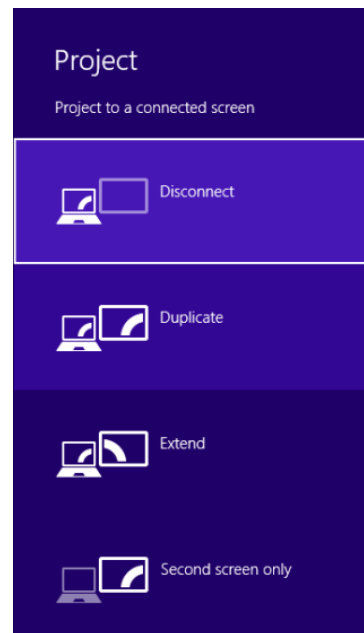

On macOS, click the AirPlay icon  and select a desired projection mode from **Mirror Built-in Display**, **Mirror Apple TV**, and **Use As Separate Display**.

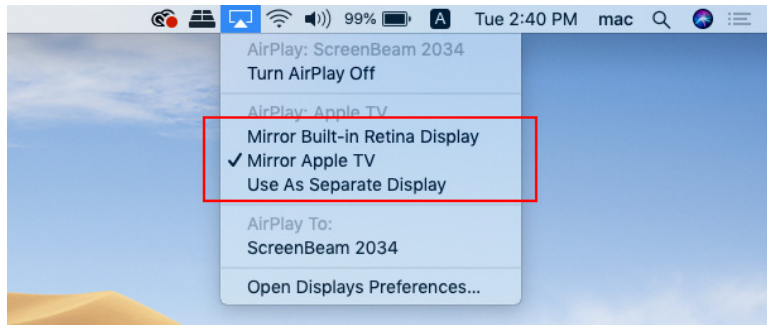

- **Duplicate (Mirror Built-in Display or Mirror Apple TV on macOS)**

The **Duplicate** mode is used to display the same content on both the device's screen and the HDTV simultaneously.

Note: There may be minor delay between the content displayed on the HDTV screen compared to the device's screen. This is due to the current state of wireless display technology.

- **Extend (Use As Separate Display on macOS)**

The **Extend** mode creates a single, extended "screen" between the source device and the HDTV. When in the **Extend** mode, dragging windows to the right side of the device's screen displays those windows on the HDTV, while dragging windows to the left of the HDTV screen displays them back on the device's screen. This mode allows users to display selected content on the HDTV, while all other windows remain on the device's screen. When this mode is first selected, the HDTV displays only the Windows desktop.

- **Second Screen Only**

The **Second Screen Only** mode causes the HDTV to be the only display for the device. You'll see everything on the connected screen, and your device's screen will be blank.

4.2 USB over Network Control

The ScreenBeam 1000 receiver supports User Input Back Channel (UIBC) also known as USB over network control. This feature allows the use of USB HID peripheral devices from the source device to control the client device via ScreenBeam connection.


The USB over network control is available on **Windows 10** devices* only. The minimum CPU requirement for a Windows 10 device to support UIBC is either:

- 4th Generation Intel Core i3 (Haswell or better) processor
- AMD A4-5000 (Kabini or better) processor

To connect a USB keyboard, mouse, or trackpad:

1. Plug the USB HID peripheral into the receiver's USB port and wait for the device to be detected. This may take 10-15 seconds.
2. Connect your Windows 10 device to the receiver, and remember to check the "Allow

mouse, keyboard, touch, and pen input from this device” box.

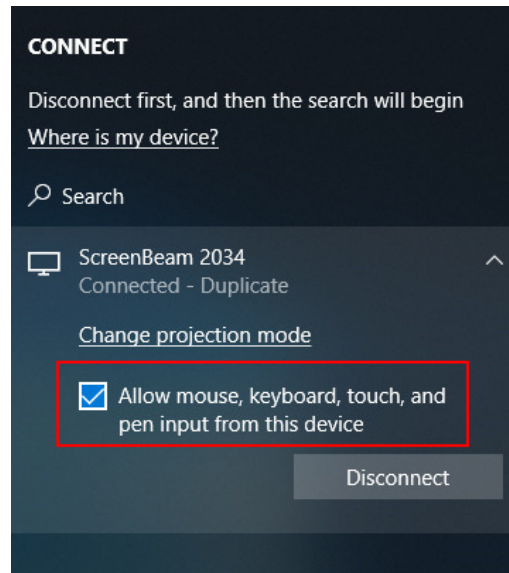

Note: Although the checkbox “*Allow mouse, keyboard, touch, and pen input from this device*” may be available upon the Miracast connection, the UIBC feature will not be supported if the Windows 10 device does not meet the minimum CPU requirement.

3. Use the USB keyboard, mouse, or trackpad to control the source device.

4.3 Using Interactive Touch Display

ScreenBeam 1000 supports wireless inking and touch with Windows 10 Miracast for collaboration using a touchscreen display. Users can project their preferred Windows 10 application and take notes on the touchscreen; the notes appear directly on the client device.

4.3.1 System Requirements

Recommended system requirements are listed below:

- OS: Windows 10 build version 1709 (or later)
- CPU: 5th Gen Intel Core i-Series 5xxx or AMD equivalent (or better)
- RAM: 4 GB or more

4.3.2 Setup Requirements

- Interactive touch display or projector
- USB Type-A to Type-B/A cable (depending on the touchscreen type)

4.3.3 Supported Features

- Support USB HID display, projector, or whiteboard
- Up to 20-point touch
- Up to four simultaneous passive pens
- Up to two simultaneous active pens


Supported features may require compatible touchscreen and/or application. Works best with InGlass™ Technology enabled display. Refer to the online compatibility list at:

<https://support.screenbeam.com/touch/compatibility>

4.3.4 Setup and Instructions

Follow the steps below to set up and use the interactive touch feature:

1. Prepare the touch display and the USB touch cable supplied with the touch display.
2. Connect the USB Type-A end to the ScreenBeam 1000 receiver's USB port.
3. Connect the USB Type-B/A end to the USB Touch input on the display or projector.
Note: If the display provides more than one touch output, make sure the USB Type-B/A end is connected to the same touch output as the HDMI input.
4. Connect Windows 10 device to ScreenBeam 1000 (see instructions in **Part III Connecting Client Device**).
5. Ensure the “**Allow ...**” option is checked.

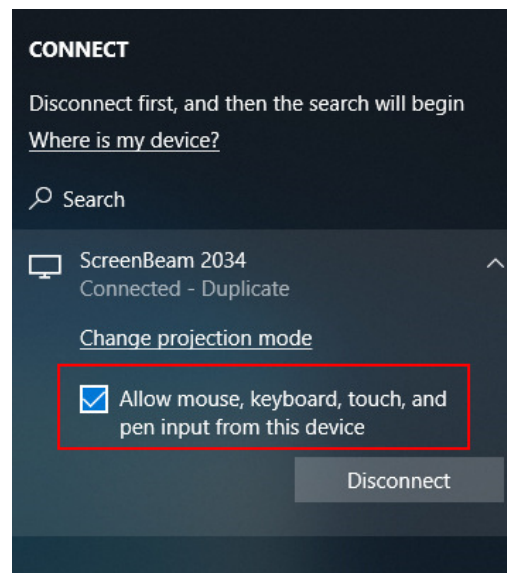

6. Start using the display by touching the screen. Launch an app and draw using finger or pen.


Part V Device Management for IT Administrator

ScreenBeam 1000 can be configured by using the ScreenBeam CMS software or accessing the ScreenBeam's Local Management Interface (LMI).

5.1 Using ScreenBeam CMS Software

ScreenBeam Central Management System (CMS) is a highly recommended complimentary tool for multi-unit deployment, configuration and administration.

1. To obtain CMS software and the CMS User Guide, go to:
<https://support.screenbeam.com/cms>.
2. Refer to the CMS User Guide for setup instructions.

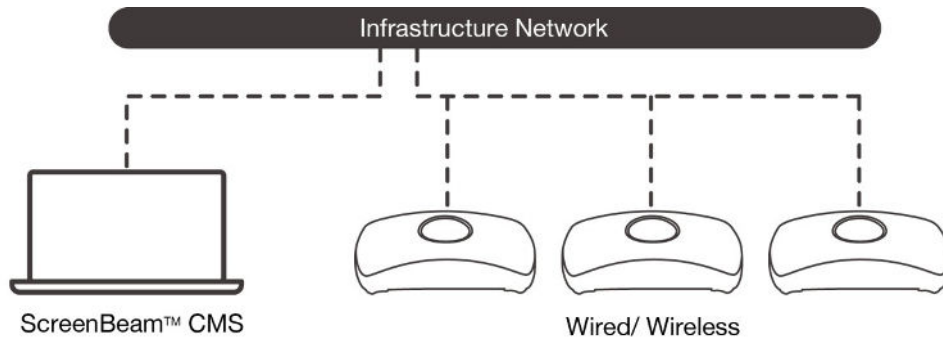

5.2 Using Local Management on ScreenBeam

The Local Management Interface can configure and update a single ScreenBeam at a time. There are three methods to access the LMI:

- Method 1: ScreenBeam Local Wi-Fi Network
- Method 2: Network Connection via DHCP
- Method 3: Wireless P2P Direct Connection

Note:

The Local Management Interface is allowed for access in one of the following situations:

- The receiver's **Local Management Interface Access** feature is set to **Auto** and the receiver is not connected to CMS;
- The receiver's **Local Management Interface Access** feature is set to **Enable**.

Refer to Section 5.3.10.3 **Setting up Local Management Interface Access** for detail about Local Management Interface Access.

5.2.1 Method 1: ScreenBeam Local Wi-Fi Network

1. Connect the client device's Wi-Fi to the wireless network (AP SSID) as shown on the TV display.



2. Enter the password for the wireless network. By default, the password is **screenbeam** (case-sensitive).




3. The **Ready to Connect** screen on the display will show the IP address assigned to the ScreenBeam.


Note:

- If the receiver is not connected to any existing wireless network or LAN, its IP address is **192.168.26.1**.

- If the receiver is connected a network, the IP address can be identified on the **Ready to Connect** screen.

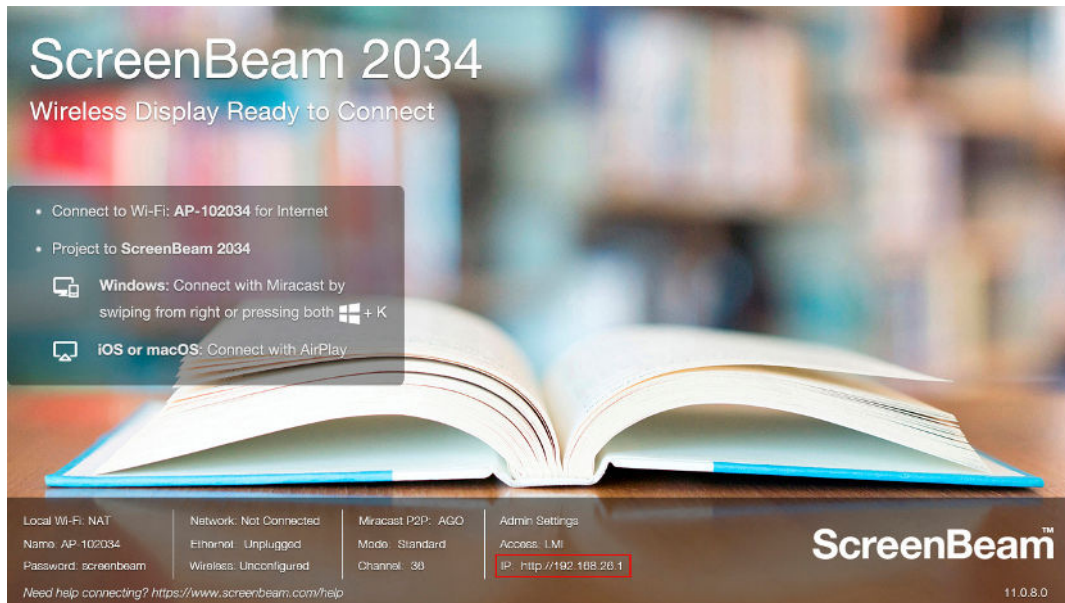

4. Enter the assigned IP address into the web browser on a device.

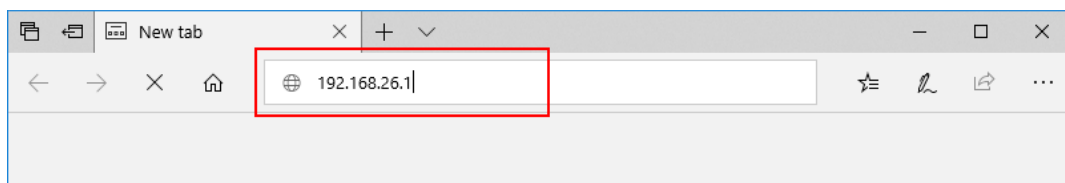


5. The browser may give an error stating “The connection or site is not secure or private.” Manually accept the connection as follows:
- **Chrome** browser: click **Advanced**, and then click **Proceed**.
 - **Edge/IE** browser: click **Details**, and then **Go on to the webpage (not recommended)**.
 - **Firefox** browser: click **Advanced**, then click **Add Exception**, then click **Confirm Security Exception**.

6. When the ScreenBeam management page appears, enter the Username **Administrator** and Password **screenbeam** (both case-sensitive).

By default, the Username is **Administrator**, and password is **screenbeam**.



Note: The default password is **Actiontec** for firmware 11.0.6.0 or older. And upgrading firmware to a newer version will not change the default password. The password will only be updated if the ScreenBeam receiver is reset.

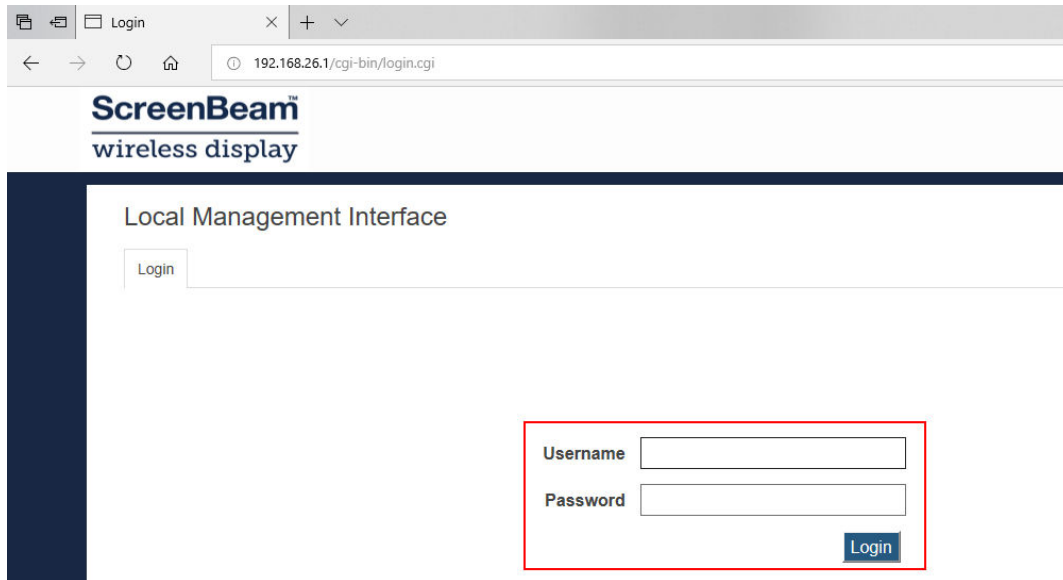

The screenshot shows a web browser window with the address bar displaying "192.168.26.1/cgi-bin/login.cgi". The page header features the "ScreenBeam™ wireless display" logo. Below the header, the text "Local Management Interface" is visible. A "Login" button is located on the left side of the page. In the center-right area, there is a red rectangular box containing a login form. This form includes two input fields: "Username" and "Password", each followed by a text input box. Below these fields is a "Login" button.

5.2.2 Method 2: Network Connection via DHCP


1. Using a shielded RJ-45-terminated Cat5e or better Ethernet cable, connect the ScreenBeam Ethernet port to a DHCP enabled network.
2. The **Ready to Connect** screen on the display will show the IP address assigned to the ScreenBeam. Enter this address into the web browser on a device on the same network as the ScreenBeam.

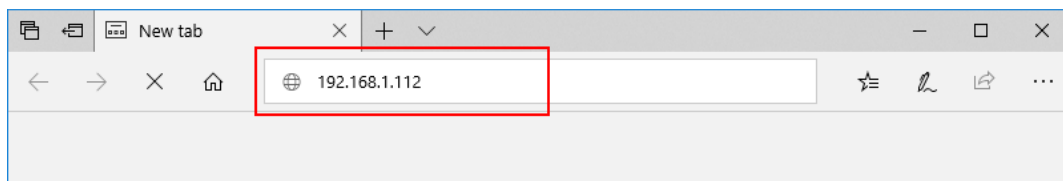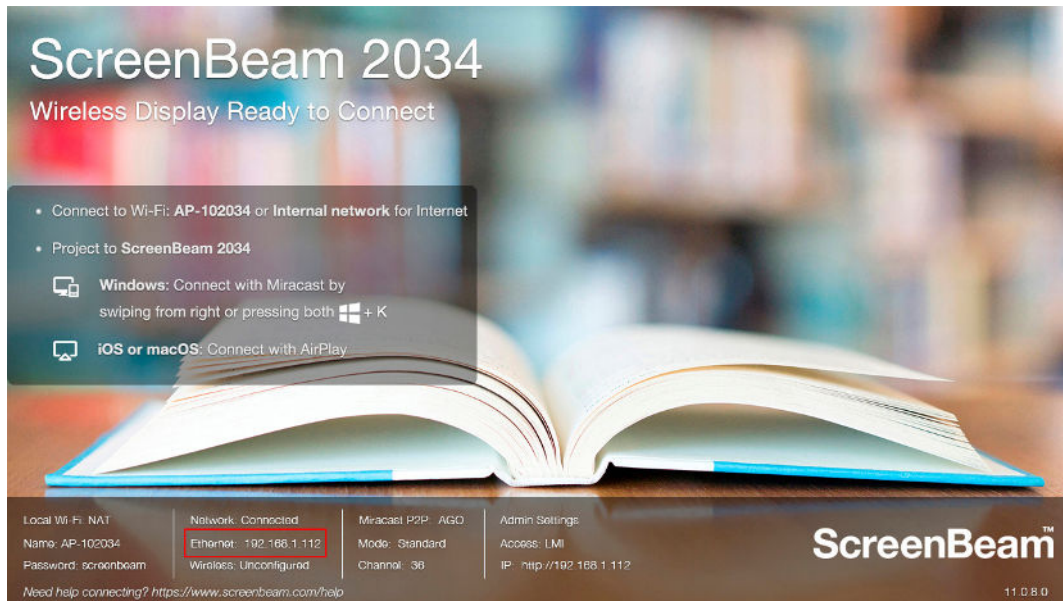

3. Follow the directions from Method 1 from Step 5 on.

5.2.3 Method 3: Wireless P2P Direct Connection

1. Using a Windows 10/8.1 device, connect the device to the ScreenBeam per section 3.3 **Connect using Wi-Fi Miracast** above.
2. Once connected, enter **https://192.168.16.1** into a web browser to access the LMI.

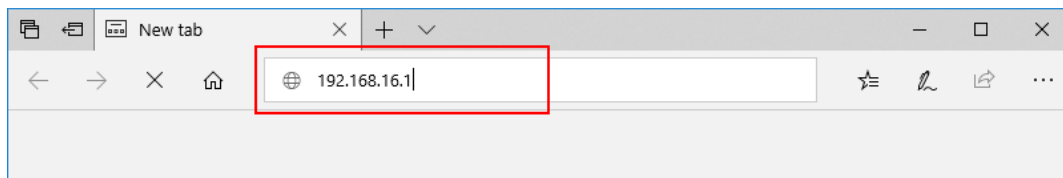

3. Follow the directions from Method 1 from Step 5 on.

5.3 Configuring ScreenBeam

After you have logged into the Local Management Interface, you can configure ScreenBeam 1000 on the LMI.

 
5.3.1 General Settings

This section introduces some general settings for the receiver.


5.3.1.1 Renaming the Receiver

To rename your receiver, follow this procedure:

1. Go to the **Device Configuration** tab page by clicking the **Device Configuration** tab.




2. Type a new name in the **Device Name** box.

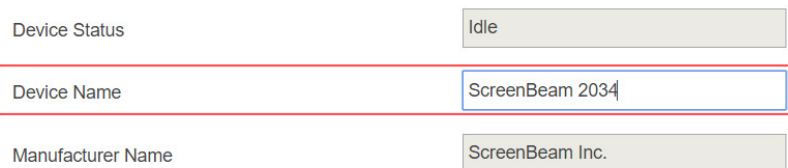The screenshot shows a form with three fields. The first field is 'Device Status' with a value of 'Idle'. The second field is 'Device Name' with a value of 'ScreenBeam 2034'; this field and its value are enclosed in a red rectangular box. The third field is 'Manufacturer Name' with a value of 'ScreenBeam Inc.'.

The receiver's **Device Name** supports the characters listed below:

- A-Z
- a-z
- 0-9
- ~!@#\$\$%^&*()_+{}|:;'\-=[]',./
- Japanese characters with Unicode in the following range: \u3040-\u30FF, \u31F0-\u31FF, and \u4E00-\u9FBF.
- Simplified and Traditional Chinese characters

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

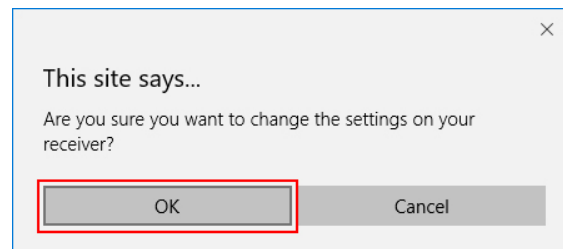

Note: New settings take effect immediately.

5.3.1.2 Setting up the Login Username and Password

To modify the username and password for user login, follow this procedure:


1. Go to the **Device Configuration** tab page by clicking the **Device Configuration** tab.



Local Management Interface

Device Configuration | Features | Digital Signage | Network Settings | Local Wi-Fi | Management Access | Firmware Upgrade | Maintenance

2. Go to the **Administrator Username** and **Administrator Password** lines, and type new username and password in the **Administrator Username** and **Administrator Password** boxes, respectively.

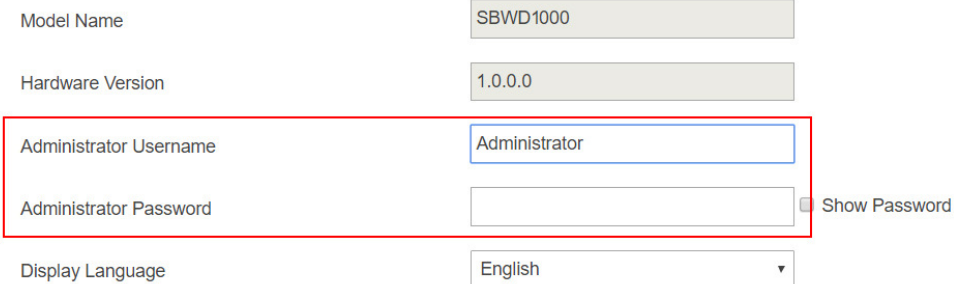

Model Name SBWD1000

Hardware Version 1.0.0.0

Administrator Username Administrator


Administrator Password Show Password

Display Language English

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.



Apply Cancel Refresh

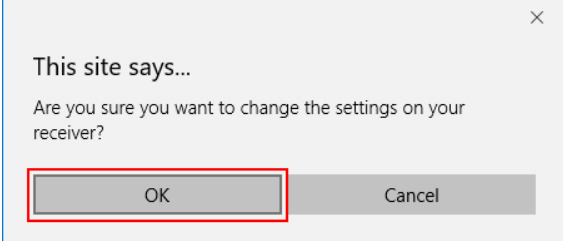

This site says...

 
Are you sure you want to change the settings on your receiver?

OK Cancel

5.3.1.3 Setting up the Receiver's Display Language

To set up the receiver's display language, follow this procedure:

1. Go to the **Device Configuration** tab page by clicking the **Device Configuration** tab.



Local Management Interface

Device Configuration | Features | Digital Signage | Network Settings | Local Wi-Fi | Management Access | Firmware Upgrade | Maintenance

2. Go to the **Display Language** line, and choose a desired language from the **Display Language** drop-down box.

Currently, English is available.

Note: This will change the language displayed on the TV screen, not the one on the configuration webpage.

Administrator Password ☐ Show Password

Display Language

* Host Name

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

This site says...

Are you sure you want to change the settings on your receiver?

5.3.1.4 Modifying the Receiver's Host Name

The host name is used to identify the receiver in a network.

To modify your receiver's host name, follow this procedure:

1. Go to the **Device Configuration** tab page by clicking the **Device Configuration** tab.

Local Management Interface

[Features](#) [Digital Signage](#) [Network Settings](#) [Local Wi-Fi](#) [Management Access](#) [Firmware Upgrade](#) [Maintenance](#)

2. Go to the **Host name** line, and type a new host name in the **Host name** box.

Display Language

* Host Name

Time zone

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

This site says...

 
Are you sure you want to change the settings and reboot your receiver?

Note: The receiver's new host name takes effect after the reboot.

5.3.1.5 Setting up Time Zone

To select your time zone, follow this procedure:

1. Go to the **Device Configuration** page by clicking the **Device Configuration** tab.



Local Management Interface

Device Configuration | Features | Digital Signage | Network Settings | Local Wi-Fi | Management Access | Firmware Upgrade | Maintenance

2. Go to the **Time zone** lines, and select your time zone in the drop-down box.



* Host Name SBWD-2034


Time zone (UTC+00:00) Universal Time ▼

Note: The receiver will synchronize its time with the CMS server it connects to, or with an NTP server.

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.



Apply Cancel Refresh

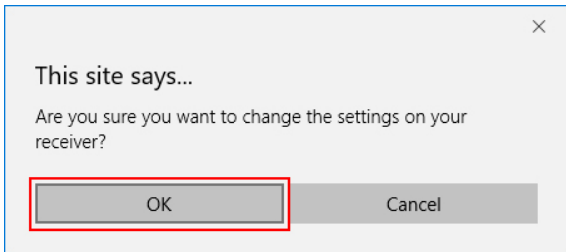

This site says...

Are you sure you want to change the settings on your receiver?

 
OK Cancel

5.3.2 Setting up Wireless Display Mode

ScreenBeam 1000 supports standard Wireless Display mode and Classroom Commander mode.

To select a wireless display mode for your receiver, follow this procedure:


1. Go to the **Features** tab page by clicking the **Features** tab.



2. Go to the **Wireless Display Mode** section, and set **Wireless display mode to support client devices** to **Commander Mode** or **Standard Wireless Display**.

- **Standard Wireless Display:** This is a one by one wireless display mode. By default, this mode is selected. In this mode, the receiver can work with Windows and/or Android devices with Miracast support, Apple device with AirPlay, and ChromeOS device with Cast, without app.

 Wireless Display Mode




- **Commander Mode:** The receiver works with ScreenBeam Classroom Commander software to achieve classroom orchestration. In this mode, the receiver can accept up to 51 client connections.

There are two options for the Commander mode: **For Windows 10** and **For Chromebook**.


- **For Windows 10:** The receiver works with Classroom Commander on the Window 10 platform.
- **For Chromebook:** The receiver works with Classroom Commander on the Chromebook platform.

Refer to the respective Classroom Commander user guide and deployment guide for details.

Wireless Display Mode

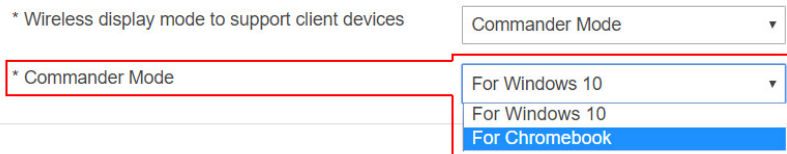

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

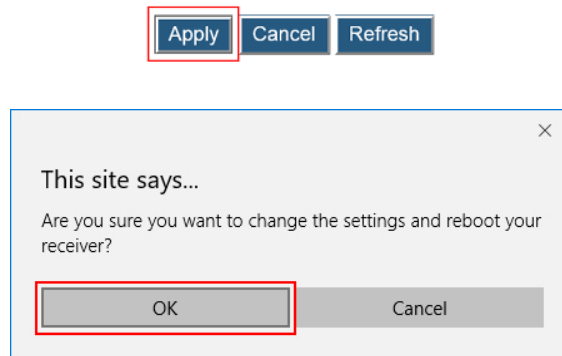

5.3.3 Wireless Display over LAN

Wireless Display over LAN allows non-Miracast ready devices to project over the local network connection. ScreenBeam receiver must be connected to the same network with the source device via Ethernet (recommended) or wireless.

 
5.3.3.1 Setting up Wireless Display over LAN for Windows 10 Devices

If your Windows 10 device is not Miracast capable, you can still project your screen over LAN, as long as the following requirements are met:

- Operating system: Windows 10, version 1809 or newer
- 100M/1000M Ethernet adapter (optional, but recommended) and Wi-Fi adapter are available
- Stable local area network
- Windows 10 device and ScreenBeam 1000 receiver are connected to the same LAN
- Required ports: TCP 7250, TCP 7236
 - TCP 7250, for Miracast over LAN data stream
 - TCP 7236, for RTSP

To set up wireless display over LAN for Windows 10 devices, follow this procedure:

1. Go to the **Features** tab page by clicking the **Features** tab.



2. Go to the **Wireless display over LAN** section, and set **Windows 10** to **Enable** or **Disable**.

Wireless display over LAN

Wireless display over LAN allows client devices to project over the local network connection. ScreenBeam receiver must (recommended) or via Wireless.

Windows 10	☒ Enable	☐ Disable
macOS/iOS native screen mirroring	☒ Enable	☐ Disable
iOS push mode	☐ Enable	☒ Disable
ChromeOS/Chrome native screen mirroring	☐ Enable	☒ Disable

- **Enable:** Windows 10 devices are allowed to project over the local network.
 - **Disable:** Windows 10 devices are not allowed to project over the local network.
3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

Apply	Cancel	Refresh
--------------	---------------	----------------

×

This site says...

Are you sure you want to change the settings on your receiver?

OK

Cancel

5.3.3.2 Setting up AirPlay Mirroring for macOS/iOS Devices

 
The Wireless Display over LAN feature allows macOS/iOS devices to project over the local network with AirPlay mirroring.

Make sure the following requirements are met:

- Operating system: macOS or iOS
- 100M/1000M Ethernet adapter (optional, but recommended) and Wi-Fi adapter are available
- Stable local area network
- MacOS/iOS device and ScreenBeam 1000 receiver are connected to the same LAN
- Required ports: UDP 5353, TCP 47000, TCP 7000, TCP 7100, TCP 18000-18009
 - UDP 5353, for Multicast DNS (mDNS) discovery
 - TCP 47000, for Airtune in AirPlay
 - TCP 7000, for AirPlay by passing URL
 - TCP 7100, for AirPlay mirroring
 - TCP 18000-18009, for macOS and iOS AV data

To set up native screen mirroring for macOS/iOS devices, follow this procedure:

1. Go to the **Features** tab page by clicking the **Features** tab.



2. Go to the **Wireless display over LAN** section, and set **macOS/iOS AirPlay mirroring** to **Enable** or **Disable**.

Wireless display over LAN

Wireless display over LAN allows client devices to project over the local network connection. ScreenBeam receiver must (recommended) or via Wireless.

Windows 10 ☐ Enable ☒ Disable

macOS/iOS native screen mirroring ☒ Enable ☐ Disable

iOS push mode ☐ Enable ☒ Disable

ChromeOS/Chrome native screen mirroring ☐ Enable ☒ Disable

- **Enable:** macOS/iOS devices are allowed to project over the local network with AirPlay mirroring. By default, this feature is enabled.
 - **Disable:** macOS/iOS devices are not allowed to project over the local network with AirPlay mirroring.
3. If your streaming app can support iOS push mode, enable the **iOS push mode**. Otherwise, disable it.

Wireless display over LAN

Wireless display over LAN allows client devices to project over the local network connection. ScreenBeam receiver must (recommended) or via Wireless.


 
Windows 10 ☐ Enable ☒ Disable

macOS/iOS native screen mirroring ☒ Enable ☐ Disable

iOS push mode ☒ Enable ☐ Disable

ChromeOS/Chrome native screen mirroring ☐ Enable ☒ Disable

4. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

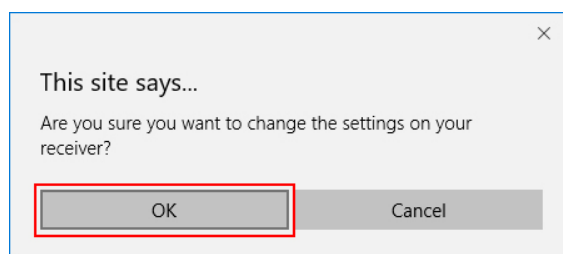


5.3.3.3 Setting up Wireless Display over LAN for Chrome OS Device and Device with Chrome Browser

Your device can connect to ScreenBeam for wireless display, as long as the following requirements are met:

- Operating system: Chrome OS 74.0.3729.159 (and later) with Cast, or Chrome Browser with Cast
- 100M/1000M Ethernet adapter (optional, but recommended) and Wi-Fi adapter are available
- Stable local area network
- Source device and ScreenBeam 1000 receiver are connected to the same LAN

To set up wireless display over LAN for Chrome OS devices or devices with Chrome browser, follow this procedure:

 1. Go to the **Features** tab page by clicking the **Features** tab.



2. Go to the **Wireless display over LAN** section, and set **ChromeOS/Chrome native screen mirroring** to **Enable** or **Disable**.


Wireless display over LAN

Wireless display over LAN allows client devices to project over the local network connection. ScreenBeam receiver must (recommended) or via Wireless.

Windows 10	☐ Enable	☒ Disable
macOS/iOS native screen mirroring	☒ Enable	☐ Disable
iOS push mode	☐ Enable	☒ Disable
ChromeOS/Chrome native screen mirroring	☒ Enable	☐ Disable

- **Enable:** Chrome OS devices or devices with Chrome browser are allowed to project over the local network.
- **Disable:** Chrome OS devices or devices with Chrome browser are not allowed to project over the local network.

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

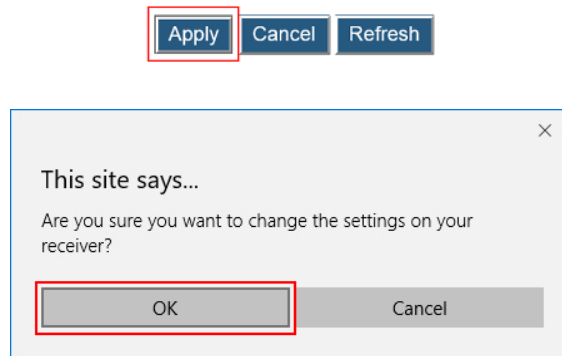

5.3.4 P2P Wireless Settings

 
This section introduces settings for Miracast connection, P2P operating channel and transmission power.

5.3.4.1 Setting up Miracast Connection

ScreenBeam 1000 allows users to disable or enable Miracast connection.

To set up the receiver's Miracast connection, follow this procedure:

1. Go to the **Features** tab page by clicking the **Features** tab.




2. Go to the **P2P Wireless Setting** section, and set **Miracast Connection** to **Enable** or **Disable**.

Note: Windows and Android Miracast devices are not allowed to connect to the receiver after **Miracast Connection** is set to **Disable**.

P2P Wireless Setting

* Miracast Connection	☐ Enable ☒ Disable
* P2P Operating Channel	36 ▼
* Transmit Power	Medium ▼

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

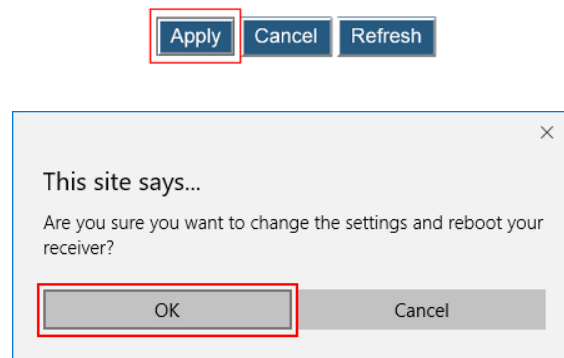


5.3.4.2 Setting up P2P Operating Channel

ScreenBeam 1000 allows you to define an operating channel for communication between the wireless display receiver and the source device.

To set up the receiver's operating channel, follow this procedure:

 1. Go to the **Features** tab page by clicking the **Features** tab.



2. Go to the **P2P Wireless Setting** section, and select a desired channel from the **P2P Operating Channel** drop-down box.

P2P Wireless Setting

* Miracast Connection

☒ Enable

☐ Disable

* P2P Operating Channel

36

* Transmit Power

Medium


Channels from 1 to 13 belong to the 2.4 GHz band; and channels from 36 to 165 belong to the 5 GHz band. By default, channel 36 is used.

Availability of channels depends on the sales region (country code).

You should select a channel based on your network environment. Generally, cleaner channels (where less devices work) will provide better performance. You can use Wi-Fi Analyzer to help you identify a clean channel.

Note: ScreenBeam receivers do not support Dynamic Frequency Selection (DFS) channels, 50 through 144, because it's prohibited in a direct Wi-Fi usage model. You should disconnect your source device from the DFS-capable router (AP) or connect to a non-DFS AP if the Wi-Fi adapter of your source device cannot work in dual bands.

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

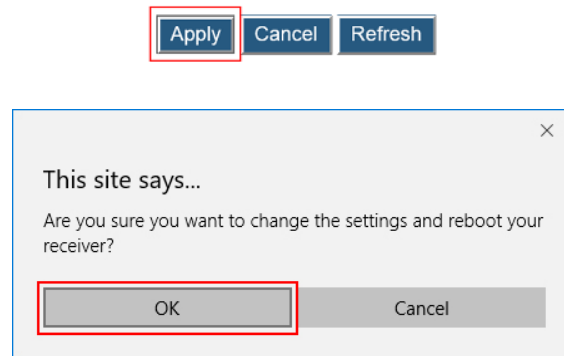


Note: New setting takes effect on the next connection.

5.3.4.3 Setting up Transmit Power

ScreenBeam 1000 allows users to tune down or up the transmission power of the Wi-Fi adapter for Miracast connection.

To set up the receiver's transmission power, follow this procedure:

 1. Go to the **Features** tab page by clicking the **Features** tab.




2. Go to the **P2P Wireless Setting** section, and select an option from the **Transmit Power** drop-down box.

Lower transmit power can reduce interference to the nearby devices. Higher transmit power can ensure longer working distance.

P2P Wireless Setting

* Miracast Connection	☒ Enable ☐ Disable
** P2P Operating Channel	36 ▼
* Transmit Power	Medium ▼

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

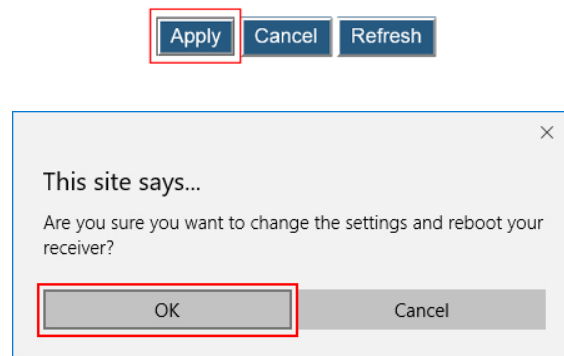

4. The receiver reboots, and new setting takes effect after the reboot.

 
5.3.5 Security Settings

This section introduces the receiver's PIN pairing methods.

5.3.5.1 Setting up PIN Pairing Method

To set up PIN pairing method, follow this procedure:

1. Go to the **Features** tab page by clicking the **Features** tab.



2. Go to the **Security Setting** section, and set the **Force PIN Pairing** feature to **On** or **Off**.
 - Select "**Off**" to disable the PIN enforcement function. PIN or PBC pairing is used when connecting your device to the receiver for the first time.
 - Select "**On**" to enable the PIN enforcement function. In this case, you must enter a PIN code on the device connecting to the receiver every time or the first time.
Note: Some wireless display source device may not support PIN entry and may not be able to connect with the ScreenBeam receiver if this mode is enabled. Refer to the device's user manual for detail about enabling the PIN connection.

Security Setting

Note: PIN options are not supported on ChromeOS/Chrome Devices.

* Force PIN Pairing	☒ On ☐ Off
* Require PIN on	☐ Each connection ☒ First connection
PIN length	4-digit ▼
* PIN Generation Method	☐ Static ☒ Random
PIN Display Period	60

3. Select a PIN pairing method.

- **Each connection:** It is required to provide PIN every time when a device connects to the receiver.
- **First connection:** It is required to provide PIN the first time when a device connects to the receiver.

Security Setting

Note: PIN options are not supported on ChromeOS/Chrome Devices.

* Force PIN Pairing ☒ On ☐ Off

* Require PIN on ☐ Each connection ☒ First connection

PIN length

* PIN Generation Method ☐ Static ☒ Random

PIN Display Period

4. Select a PIN length: 4-digit and 8-digit.

- **4-digit:** The receiver will generate a 4-digit PIN. By default, the 4-digit PIN is used.
- **8-digit:** The receiver will generate an 8-digit PIN.

Security Setting

Note: PIN options are not supported on ChromeOS/Chrome Devices.

* Force PIN Pairing ☒ On ☐ Off

* Require PIN on ☐ Each connection ☒ First connection

PIN length
4-digit
8-digit
4-digit

* PIN Generation Method

PIN Display Period

5. Select a PIN generation method.

When the **Force PIN Pairing** feature is enabled, the system provides two PIN generation methods: **Static** and **Random**.

- **Static:** When **Static** is selected, users can define a PIN flexibly. The static PIN will not be displayed on the connected display.

If **8-digit** is selected for the PIN length, users can define the first seven (7) digits, and then the system generates an 8-digit PIN with that seven digits included. Enter seven (7) digits in the **Static PIN** box, and the system generates the eighth (8th) digit.

Security Setting

Note: PIN options are not supported on ChromeOS/Chrome Devices.

* Force PIN Pairing ☒ On ☐ Off

* Require PIN on ☐ Each connection ☒ First connection

PIN length

* PIN Generation Method ☒ Static ☐ Random

* Static PIN

PIN Display Period

- **Random:** A PIN code is generated randomly by ScreenBeam and displayed on the connected HDTV/projector.
6. Define the period for showing the PIN on the connected display. The PIN Display Period ranges from 30 to 120 seconds.

Security Setting

Note: PIN options are not supported on ChromeOS/Chrome Devices.

* Force PIN Pairing ☒ On ☐ Off

* Require PIN on ☐ Each connection ☒ First connection

PIN length

* PIN Generation Method ☐ Static ☒ Random

PIN Display Period

7. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

This site says...

Are you sure you want to change the settings and reboot your receiver?

5.3.6 Display Settings

 
This section introduces display related features.

5.3.6.1 Setting up Display Sharing Mode

ScreenBeam 1000 supports three display sharing modes: Single mode, Quick Switch mode, and Multi-view mode.

To select a display sharing mode, follow this procedure:

1. Go to the **Features** tab page by clicking the **Features** tab.



2. Go to the **Display Setting** section, and select a desired option from the **Display Sharing Mode** menu. Available options are: **Single**, **Quick Switch**, and **Multi-View**.

- **Single**: Other device is not allowed to connect if the receiver is already in use.
- **Quick Switch**: A Miracast capable device can connect to the receiver even though the receiver is in an active Miracast connection.


Note: Quick Switch is available for Miracast connection only. Quick switch can't work for Infracast connection (Wireless Display over LAN for Windows 10), Airplay connection, or Chromecast connection.

- **Multi-View**: This mode allows up to four sources connected to the receiver and displayed on the TV at the same time.


Note: Multiview follows these rules below:

- If PIN enforcement is enabled, Multiview is available to Miracast connections only. In this case, when the first connection is an Infracast connection, Airplay connection or Chromecast connection, no other connection is allowed.
- If PIN enforcement is disabled, Multiview is available to Miracast connections and Infracast connections. In this case, when the first connection is an Airplay connection or Chromecast connection, no other connection is allowed.
- Currently, Multiview is not supported for Airplay connections or Chromecast connections.

Display Setting

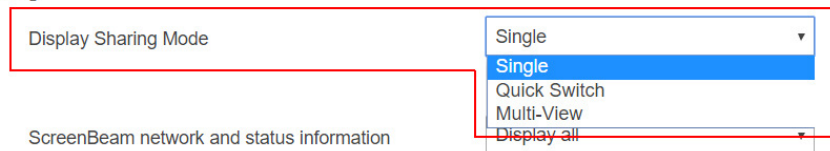

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

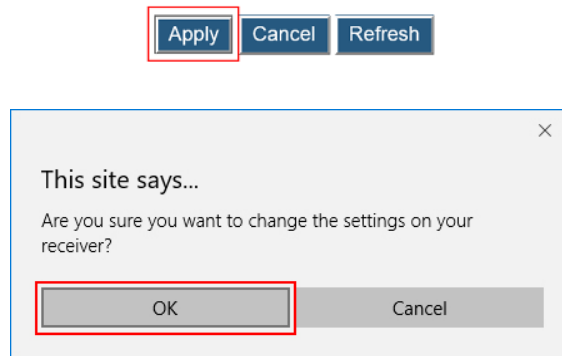


5.3.6.2 Setting up Receiver Name Display for Quick Switch

ScreenBeam 1000 allows customizing the display of receiver name in the Quick Switch mode.

To set up the placement of the receiver's name, follow this procedure:

 1. Go to the **Features** tab page by clicking the **Features** tab.



2. Go to the **Display Setting** section, and ensure that **Display Sharing Mode** is set to **Quick Switch**.
3. Set **Show Receiver Name** to **Always**.

The **Show Receiver Name** feature provides two options, as shown below:

- **Always**: The receiver's name will be displayed on the connected TV when an active connection session is present.
- **Don't show**: The receiver's name will not be displayed on the connected TV when an active connection session is present.

Note: If this option is selected, the receiver name placement is not available.

Display Setting

Display Sharing Mode	Quick Switch ▼
♦ Show Receiver Name ☒ Always ☐ Don't show	
♦ Receiver Name Placement	Bottom Left ▼

4. Select an option from the **Receiver Name Placement** drop-down box.

Display Setting

Display Sharing Mode Quick Switch ▼

* Show Receiver Name ☒ Always ☐ Don't show

* Receiver Name Placement Bottom Left ▼

ScreenBeam network and status information

Connect instructions

Bottom Left
Bottom Left
Bottom Right
Bottom Center
Upper Left
Upper Right
Upper Center

5. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

Apply Cancel Refresh

This site says...

Are you sure you want to change the settings on your receiver?

OK Cancel

5.3.6.3 Setting up Information Display on RTC Screen

To set up the receiver's information display on RTC screen, follow this procedure:

1. Go to the **Features** tab page by clicking the **Features** tab.

Local Management Interface

Device Configuration Features Digital Signage Network Settings Local Wi-Fi Management Access Firmware Upgrade Maintenance

2. Go to the **Display Setting** section, and select a desired option from the **ScreenBeam network and status information** menu. Available options are: **Display all**, **Display minimal**, and **Display none**.
 - **Display all**: The receiver displays all network and status information on the connected display.
 - **Display minimal**: The receiver displays local Wi-Fi information on the connected display.
 - **Display none**: The receiver displays none of the network and status information on the connected display.

Display Setting

Display Sharing Mode	Single
ScreenBeam network and status information	Display all
Connect instructions	Display all
Show "Connect to WiFi" instructions	☒ Show ☐ Hide
Show "Help URL" instructions	☒ Show ☐ Hide

3. Set **Connection instructions** to **Show** or **Hide**.

- **Show:** The Wi-Fi connection and receiver connection instructions will be displayed on RTC screen.
- **Hide:** The Wi-Fi connection and receiver connection instructions will not be displayed on RTC screen.

Display Setting

Display Sharing Mode	Single
ScreenBeam network and status information	Display all
Connect instructions	☒ Show ☐ Hide
Show "Connect to WiFi" instructions	☒ Show ☐ Hide
Show "Help URL" instructions	☒ Show ☐ Hide

4. Set **Show "Connect to WiFi" instructions** to **Show** or **Hide**.

- **Show:** The Wi-Fi connection instruction will be displayed on RTC screen.
- **Hide:** The Wi-Fi connection instruction will not be displayed on RTC screen.

Display Setting

Display Sharing Mode	Single
ScreenBeam network and status information	Display all
Connect instructions	☒ Show ☐ Hide
Show "Connect to WiFi" instructions	☒ Show ☐ Hide
Show "Help URL" instructions	☒ Show ☐ Hide

5. Set **Show "Help URL" instructions** to **Show** or **Hide**.

- **Show:** The help URL info will be displayed on RTC screen.
- **Hide:** The help URL info will not be displayed on RTC screen.

Display Setting

Display Sharing Mode	Single
ScreenBeam network and status information	Display all
Connect instructions	☒ Show ☐ Hide
Show "Connect to WiFi" instructions	☒ Show ☐ Hide
Show "Help URL" instructions	☒ Show ☐ Hide

6. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

Apply	Cancel	Refresh
-------	--------	---------

×

This site says...

Are you sure you want to change the settings on your receiver?

OK	Cancel
----	--------

Here is an example after all these info are set to be hidden.



5.3.6.4 Managing HDMI/VGA Port Output

To set up HDMI/VGA port output, follow this procedure:

1. Go to the **Features** tab page by clicking the **Features** tab.

Local Management Interface

Device Configuration **Features** Digital Signage Network Settings Local Wi-Fi Management Access Firmware Upgrade Maintenance

2. Go to the **Display Setting** section, and select a desired option in the **HDMI/VGA Port Power management** drop-down box. Available options are: **Always On**, **Screensaver**, and **Display Off**.

Display Setting

Display Sharing Mode	Single
ScreenBeam network and status information	Display all
Connect instructions	☒ Show ☐ Hide
Show "Connect to WiFi" instructions	☒ Show ☐ Hide
Show "Help URL" instructions	☒ Show ☐ Hide
HDMI/VGA Port Power Management	Always On Always On Screensaver Display Off
Wake Up	
Adjust TV Screen Size	25 ☐ Allow source


- **Always On:** Selecting this option, the HDMI output is always on.
- **Screensaver:** Selecting this option, the system will run the screen saver after the defined idle time expires. Users can define the idle time (5-9999 seconds) in the **Wait** time box.

HDMI/VGA Port Power Management	Screensaver
Wait	180

- **Display Off:** Selecting this option, the HDMI/VGA output will be turned off after the defined idle time expires. Users can define the idle time (5-9999 seconds) in the wait time box.

HDMI/VGA Port Power Management	Display Off
Wait	180

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

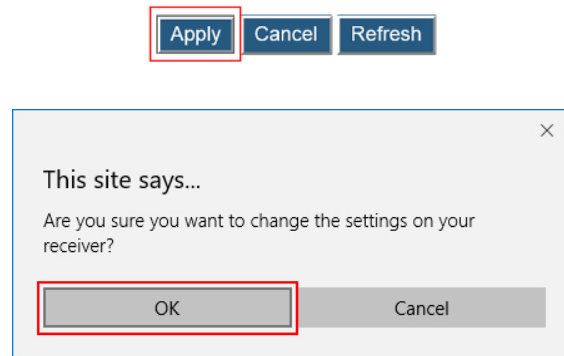


5.3.6.5 Waking up the Receiver

When the receiver runs screen saver or when its HDMI/VGA port output is turned off, it can be waked up by any one of two events: scanning and connecting.

Note: The **Wake Up** feature is available for setup when **HDMI/VGA Port Power management** is set to **Screensaver** or **Display Off**.

To set up the receiver's wakeup feature, follow this procedure:

 1. Go to the **Features** tab page by clicking the **Features** tab.



2. Go to the **Display Setting** section, and set the **Wake Up** feature to **On Scan** or **On Connect**.
 - **On Connect:** The receiver will wake up from sleep or screen saver only when a source device is connecting.
 - **On Scan:** The receiver will wake up from sleep or screen saver when it detects that a source device is scanning.

Display Setting

Display Sharing Mode	Single
ScreenBeam network and status information	Display all
Connect instructions	☒ Show ☐ Hide
Show "Connect to WiFi" instructions	☒ Show ☐ Hide
Show "Help URL" instructions	☒ Show ☐ Hide
HDMI/VGA Port Power Management	Screensaver
Wait	180
Wake Up	On Connect
Adjust TV Screen Size	Allow source

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

Apply Cancel Refresh

This site says...

Are you sure you want to change the settings on your receiver?

OK Cancel

5.3.6.6 Adjusting TV Screen Size

To adjust the size of your TV screen, follow this procedure:

1. Go to the **Features** tab page by clicking the **Features** tab.

Local Management Interface


Device Configuration Features Digital Signage Network Settings Local Wi-Fi Management Access Firmware Upgrade Maintenance

2. Go to the **Display Setting** section, and select a desired option in the **Adjust TV Screen Size** drop-down box.
 - The value for TV screen size ranges from 0 to 25. The larger the value is, the bigger the screen will be.
 - **Allow source device to override overscan value:** When this option is enabled (checked), the overscan value is in consistence with the setting on the source device. Otherwise, the overscan value is in consistence with the setting on the receiver.

Display Setting

Display Sharing Mode	Single
ScreenBeam network and status information	Display all
Connect instructions	☒ Show ☐ Hide
Show "Connect to WIFI" instructions	☒ Show ☐ Hide
Show "Help URL" instructions	☒ Show ☐ Hide
HDMI/VGA Port Power Management	Always On
Wake Up	On Connect
Adjust TV Screen Size	25 ☐ Allow source
HDMI-CEC	☐ On ☒ Off


- Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

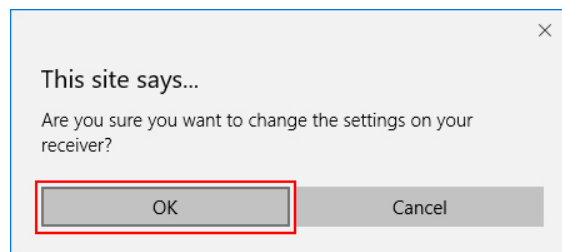

5.3.6.7 Updating the Receiver's Background Image

To update the receiver's background, follow this procedure:

 
- Go to the **Features** tab page by clicking the **Features** tab.



- Go to the **Display Setting** section, and click the **Browse** button next to the **Background Image** box.




- The **Open** window appears. Select an image for the background and click the **Open** button to confirm.
 - The images must be in .png and .jpeg/.jpg formats.
 - The file size must not exceed 2.5 MB.
 - The best image size is 1280*720 pixels (width x height).

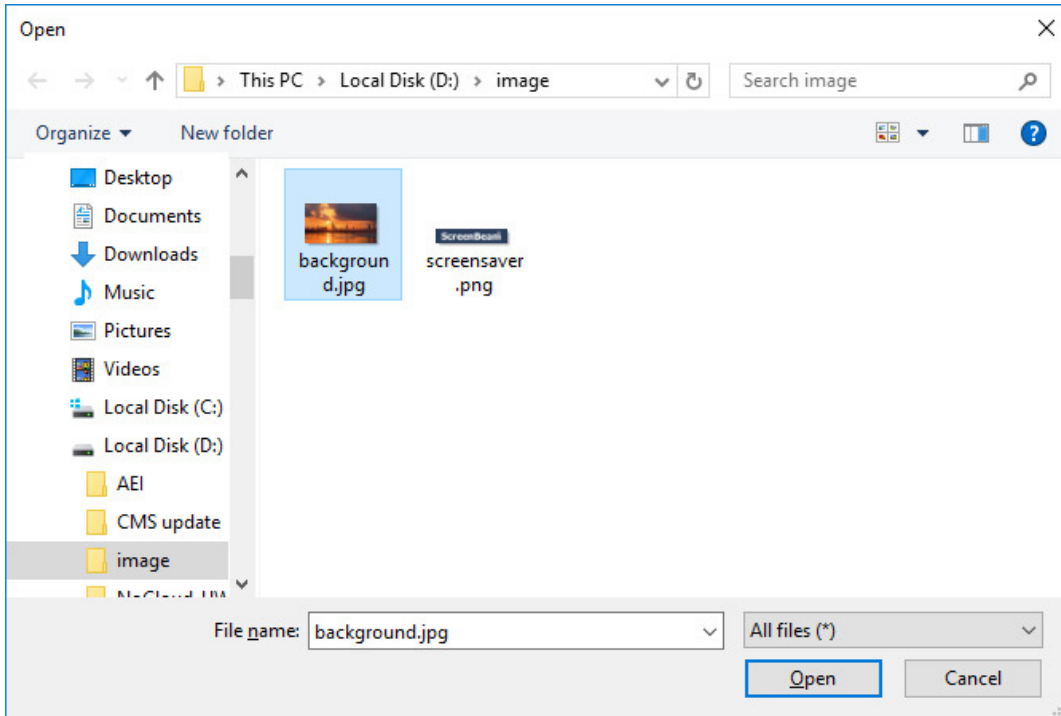

4. Click the **Apply** button to upload the background image to the receiver.



5. A confirmation message appears. Click **OK** to continue.

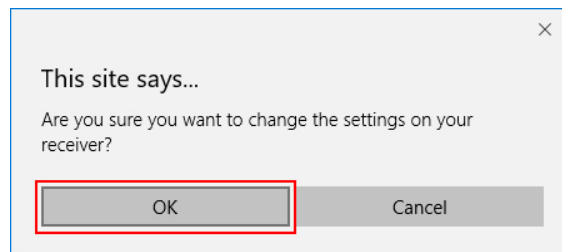


6. After a while, the background image will be updated. You can check it on the connected display.

5.3.6.8 Updating the Receiver's Screen Saver Image

To update the receiver's screen saver, follow this procedure:

 
1. Go to the **Features** tab page by clicking the **Features** tab.



2. Go to the **Display Setting** section, and click the **Browse** button next to the **Screen Saver Image** box.




3. The **Open** window appears. Select an image for the screen saver and click the **Open** button to confirm.
- The image must be in .png format.
 - The file size must not exceed 200 KB.
 - The best image size is 300*60 pixels.

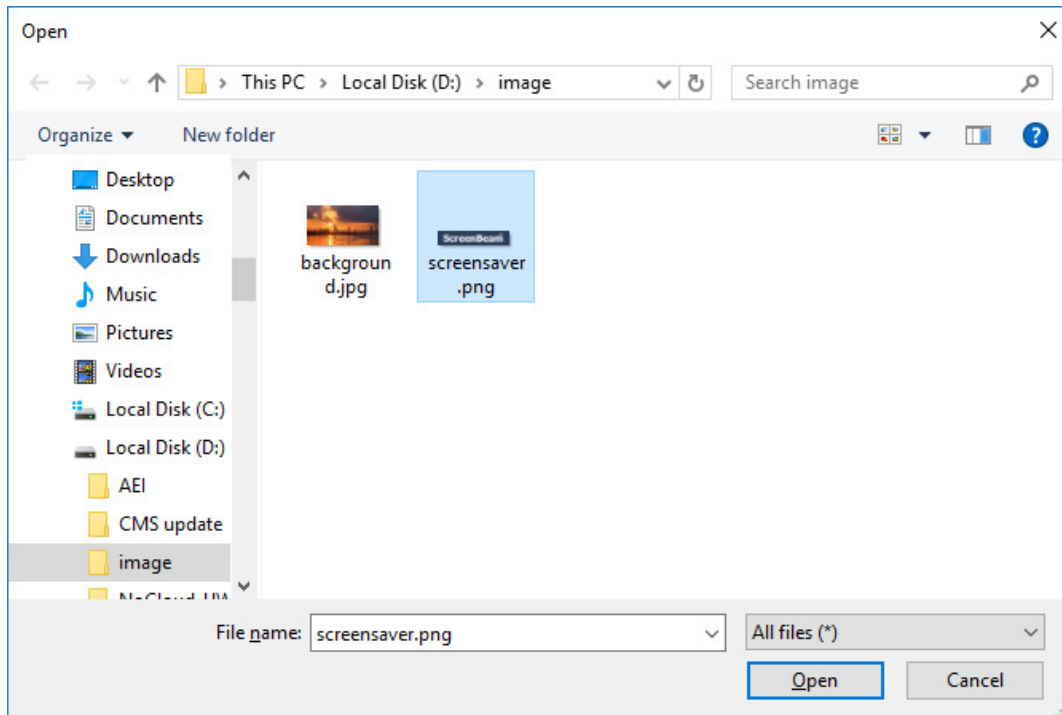

4. Click the **Apply** button to upload the screen saver image to the receiver.



5. A confirmation message appears. Click **OK** to continue.

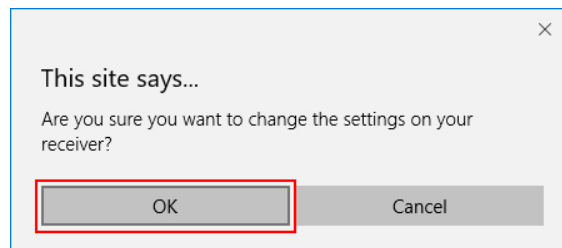


6. After a while, the screen saver image will be updated. You can check it on the connected display when the screen saver is running.

5.3.7 Digital Signage Settings

ScreenBeam receiver's Digital Signage mode can turn your display into a digital signage player. Follow the procedure below to set up the receiver's digital signage mode:

 1. Go to the **Digital Signage** tab page by clicking the **Digital Signage** tab.



2. Properly configure the Digital Signage options.

- **Digital Signage:** Selecting **Enable** will turn the digital signage feature on, while selecting **Disable** will turn this feature off.
- **Display Mode:** Selecting **Framed** will display the signage in a framed window, together with other information such as Internet access connection, wireless display instruction, and receiver name, while selecting **Fullscreen** will display the signage in full screen, together with only the receiver name.
- **Source URL:** The URL of the source content.

The digital signage supports content delivered using HTML5/CSS/JavaScript with the following features:

- Chromium engine only (latest available in Android)
- H.264 video up to 4096x2160/3840x2160 @ 30fps
- Audio: MP3, AAC-LC, HE-AAC v1/v2
- Static images: JPG, PNG, GIF
- WebGL

All content shall be tested for viewability in Android Webview by users to validate its suitability.


- **Restart Delay** (seconds): It is the delay time to restart the signage playback after a wireless display connection ends or after the receiver is restarted. The delay time range is 10-1000 seconds.
- **Digital Signage Audio Volume:** It is used to control audio volume for digital signage playback. Currently, available options are **Mute**, **Low**, **Medium**, and **High**.

Digital Signage Mode

Digital signage mode is compatible with HTML5-based signage. ScreenBeam receiver should be tested with stream to en

Digital Signage	☒ Enable ☐ Disable
Display Mode	☐ Framed ☒ Fullscreen
Source URL	
Restart Delay(seconds)	10
Digital Signage Audio Volume	Mute

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

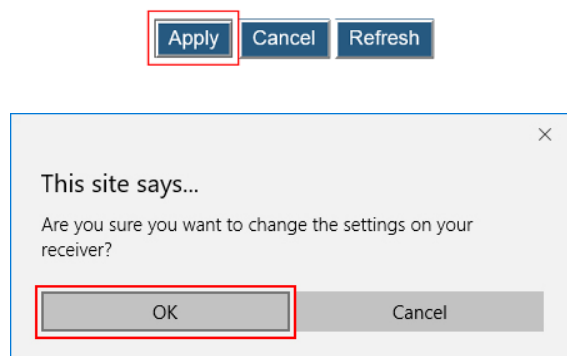

5.3.8 Network Settings

 
This section introduces settings about network connection, such as local Wi-Fi networking mode, CMS interface assignment, connection and TCP/IP settings for Ethernet/Wireless interface, etc.

5.3.8.1 Setting up Local Wi-Fi Network Mode

The receiver provides a local Wi-Fi network for wireless display over LAN and receiver management. This network can be routed to an external network through the receiver's Ethernet or wireless interface so that the device that connects to the local Wi-Fi can have access to the Internet.

To set up the receiver's local Wi-Fi network mode, follow this procedure:

1. Go to the **Network Settings** tab page by clicking the **Network Settings** tab.



2. Go to the **Local Wi-Fi Network** section, and select an option from the **Select Network Mode** box. There are three options available: **NAT**, **Bridge**, and **None**.
 - **NAT**: The receiver's local Wi-Fi network is routed to the network where the Ethernet or wireless interface connects by NAT method.
 - **Bridge**: The receiver's local Wi-Fi network is routed to the network where the Ethernet or wireless interface connects by Bridge method.
 - **None**: The receiver's local Wi-Fi network is not routed to the network where the Ethernet or wireless interface connects.

Local Wi-Fi Network



3. Set **Block communication to devices on the LAN** to **Enable** or **Disable**. By default,

this feature is set to **Disable**.


- **Enable:** Communication to the devices that connect to the receiver's local Wi-Fi is blocked, which means these devices that connect to the receiver's local Wi-Fi can't see or talk to each other.
- **Disable:** Communication to the devices that connect to the receiver's local Wi-Fi is not blocked, which means these devices that connect to the receiver's local Wi-Fi still can see or talk to each other.

Note: This feature is available when the network mode is set to NAT.

Local Wi-Fi Network



4. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

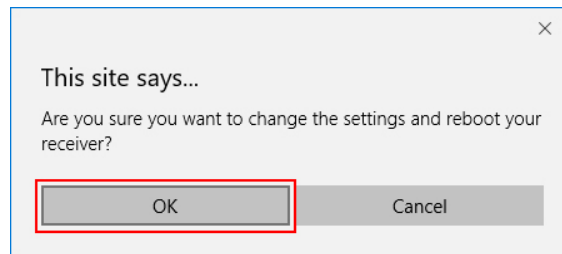


5.3.8.2 Setting up an Interface for CMS Connection

ScreenBeam 1000 allows customizing an interface for connecting to CMS.

To define an interface for connecting to CMS, follow this procedure:

 1. Go to the **Network Settings** tab page by clicking the **Network Settings** tab.




2. Go to the **Interface Feature Assignment** section, and select an option from the **Select Internet CMS Interface** box. Available options include: **Auto**, **Ethernet**, and **Wireless**.
 - **Auto:** The receiver will automatically select an interface to connect to CMS.
 - **Ethernet:** The receiver will connect to CMS using the Ethernet interface only.
 - **Wireless:** The receiver will connect to CMS using the wireless interface only

Interface Feature Assignment



3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

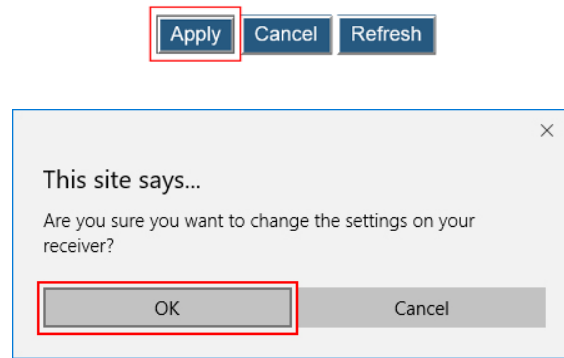


5.3.8.3 Renaming Ethernet Interface's Network Name

Ethernet interface's network name can remind users which Ethernet network the receiver is connecting to.

To rename the Ethernet interface's network name, follow this procedure:

 1. Go to the **Network Settings** tab page by clicking the **Network Settings** tab.




2. Go to **Network Interface Settings > Ethernet Interface**, and rename the **Network Name**.

Network Interface Settings

Ethernet Interface

Network Name	Internal network
--------------	------------------

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

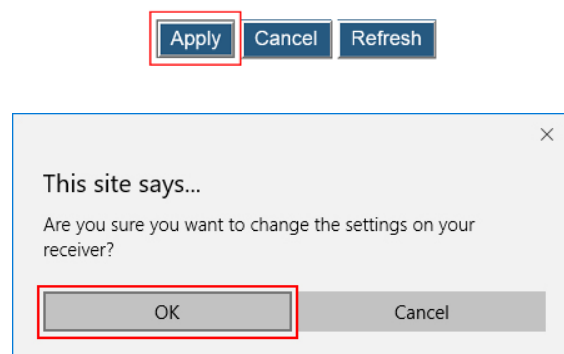


5.3.8.4 Setting up the Receiver's IP Address

The receiver provides both Ethernet and wireless interfaces for connecting to a network. Separate IP configuration is required for these interfaces. By default, the receiver is set to obtain an IP address automatically. Make sure a DHCP server is available on your network. IP configuration procedures for the Ethernet and the wireless interfaces are same.

To set up the receiver's IP address, follow this procedure:

 1. Go to the **Network Settings** tab page by clicking the **Network Settings** tab.



2. Go to **Network Interface Settings > TCP/IP Setting**, and set **IP Assignment** to **Auto** or **Static**.

- **Auto:** The receiver will be assigned an IP address by the DHCP server.
- **Static:** Users are allowed to define the IP address, subnet mask, and default gateway for the receiver.

Network Interface Settings

Ethernet Interface

Network Name

Connection Settings

Authentication

TCP/IP Settings


IP Assignment	☒ Auto	☐ Static		
IP Address	192	168	1	112
Subnet Mask	255	255	255	0
Default Gateway	192	168	1	1

DNS Assignment ☒ Auto ☐ Static

Primary DNS Server | | |

Secondary DNS Server | | |

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

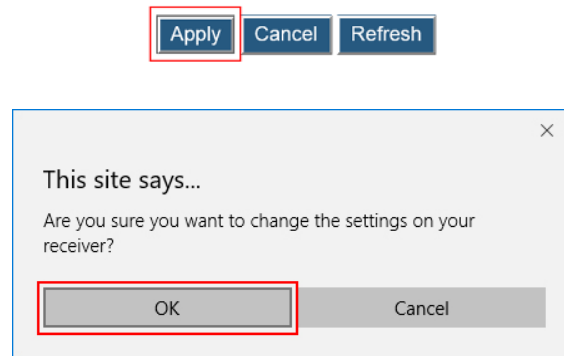


5.3.8.5 Specifying a DNS Server for the Receiver

The receiver provides both Ethernet and wireless interfaces for connecting to a network. Separate DNS configuration is required for these interfaces. By default, the receiver is set to obtain DNS configuration automatically.

DNS configuration procedures for the Ethernet and the wireless interfaces are same.

To specify a DNS server for the receiver, follow this procedure:

 1. Go to the **Network Settings** tab page by clicking the **Network Settings** tab.



2. Go to **Network Interface Settings > TCP/IP Setting**, and set **DNS Assignment** to **Auto** or **Static**.
 - **Auto**: The receiver will be assigned a DNS server automatically.
 - **Static**: Users are allowed to define a DNS server for the receiver. If **Static** is selected, a DNS server must be defined.

Network Interface Settings

Ethernet Interface

Network Name

Internal network

Connection Settings

Authentication

Open

TCP/IP Settings

IP Assignment

☒ Auto

☐ Static

IP Address

192 . 168 . 1 . 112

Subnet Mask

255 . 255 . 255 . 0

Default Gateway

192 . 168 . 1 . 1

DNS Assignment

☒ Auto

☐ Static

Primary DNS Server

192 . 168 . 1 . 1

Secondary DNS Server

8 . 8 . 4 . 4

3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

Apply

Cancel

Refresh

This site says...

Are you sure you want to change the settings on your receiver?

OK

Cancel

5.3.9 Local Wi-Fi Settings

ScreenBeam 1000 provide a local Wi-Fi network for wireless display over LAN (such as Windows 10 Infracast, Apple AirPlay, and Google Cast) and receiver management.

To set up the receiver's local Wi-Fi, follow this procedure:

1. Go to the **Local Wi-Fi** tab page by clicking the **Local Wi-Fi** tab.

Local Management Interface

Device Configuration

Features

Digital Signage

Network Settings

Local Wi-Fi

Management Access

Firmware Upgrade

Maintenance

2. Go to the **Local Wi-Fi Settings** section, and set **ScreenBeam Local Wi-Fi** to **Enable** or **Disable**.

- **Enable:** The receiver's local Wi-Fi is turned on.
- **Disable:** The receiver's local Wi-Fi is turned off.

* Local Wi-Fi Settings

ScreenBeam Local Wi-Fi	☒ Enable ☐ Disable
Wireless Network Name	AP-102034
Wireless Security Type	WPA2 PSK
Password Phrase	•••••••• ☐ Show Password
Wireless Channel	36

- When the receiver's local Wi-Fi feature is enabled, configure the Wireless Network Name, Wireless Security Type, Password Phrase, and Wireless Channel.
 - **Wireless Network Name:** It is the network name of the receiver's local Wi-Fi. This network name can be detected on a Wi-Fi (5 GHz) enabled device if the local Wi-Fi is enabled.
 - **Wireless Security Type:** It is the security verification method for connection to the Wi-Fi.
 - **Password Phrase:** It is the password for connecting to the Wi-Fi. The default password is **screenbeam**.
 - **Wireless Channel:** It is the wireless channel used for the Wi-Fi connection. This channel is associated with the P2P operating channel. Refer to Section 5.3.4.2 **Setting up P2P Operating Channel** for detail.

* Local Wi-Fi Settings

ScreenBeam Local Wi-Fi	☒ Enable ☐ Disable
Wireless Network Name	AP-102034
Wireless Security Type	WPA2 PSK
Password Phrase	•••••••• ☐ Show Password
Wireless Channel	36

- Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

Apply	Cancel	Refresh
-------	--------	---------

×

This site says...

Are you sure you want to change the settings and reboot your receiver?

OK

Cancel

 
5.3.10 Receiver Management Access Settings

This section introduces settings for receiver management.

5.3.10.1 Specifying ScreenBeam CMS for the Receiver

To specify a CMS server for the receiver, follow this procedure:

1. Go to the **Management Access** tab page by clicking the **Management Access** tab.




2. Go to the **Central Management System Settings** section, and define the **CMS Server** and the **CMS Communication Port**.
 - **CMS Server**: It is the IP address or the FQDN/hostname/domain name/alias name (if you have properly configured the DNS server and the DHCP server) of the server that hosts the ScreenBeam CMS. It supports a domain with six labels at most.
Note: It is recommended to use DNS configuration for CMS Server.
 - **CMS Communication Port**: It is the communication port of the ScreenBeam CMS. The port range is from 5000 to 65535. By default, 7237 is used.

Central Management System Settings:

CMS Server	aeisbcms	Enter
CMS Communication Port	7237	Enter
Web Communication Port	443	Enter


3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

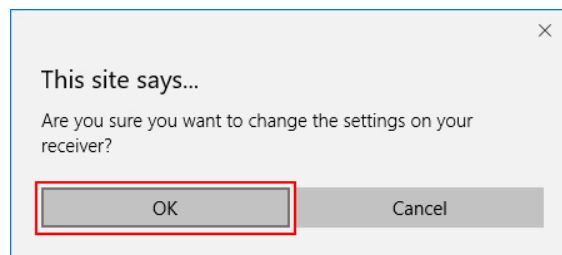

5.3.10.2 Specifying a Port for the Receiver's LMI

To specify a communication port for the receiver's local management interface, follow this procedure:

 1. Go to the **Management Access** tab page by clicking the **Management Access** tab.




2. Go to the **Central Management System Settings** section, and define a port for **Web Communication Port**.

- **Web Communication Port:** It is the communication port for the receiver's Local Management Interface. The port range is from 5000 to 65535 (except 5555). By default, 443 is used.

Central Management System Settings:

CMS Server	aelsbcms	Enter
CMS Communication Port	7237	Enter
Web Communication Port	443	Enter


3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

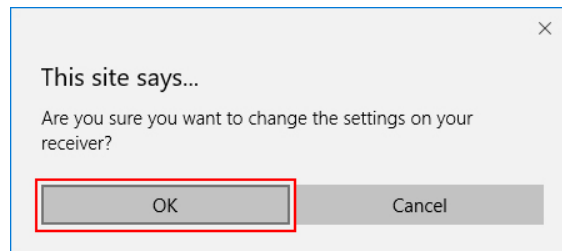

5.3.10.3 Setting up Local Management Interface Access

The receiver's Local Management Interface (LMI) is used to manage the receiver locally. To set up the receiver's LMI access, follow this procedure::

 1. Go to the **Management Access** tab page by clicking the **Management Access** tab.



2. Go to the **Local Management Interface Access Settings** section, and select an option from the **Local Management Interface Access** box. There are three options available:

Auto, Enable, and Disable.

- **Auto:** The accessibility to the receiver's LMI depends on the availability of the CMS connection. When the receiver is connected to CMS, access to the receiver's LMI is disabled automatically; otherwise, access is enabled.
- **Enable:** Access to the receiver's LMI is enabled no matter the receiver is connected to CMS or not.
- **Disable:** Access to the receiver's LMI is not allowed.

Local Management Wireless Access Settings

* Local Management Interface Access

Network Interface Allowed

Any

Auto
Enable
Disable

3. Select an option from the **Network Interface Allowed** box.

- **Any:** Access to the receiver's LMI is allowed on any network interface.
- **Ethernet LAN:** Access to the receiver's LMI is limited to the receiver's Ethernet interface.
- **Wireless LAN:** Access to the receiver's LMI is limited to the receiver's Wireless interface.
- **Local Wi-Fi AP:** Access to the receiver's LMI is limited to the receiver's local Wi-Fi interface.
- **Miracast P2P:** Access to the receiver's LMI is limited to the receiver's Miracast P2P interface.

Local Management Wireless Access Settings

* Local Management Interface Access

Enable

Network Interface Allowed

Any
Ethernet LAN
Wireless LAN
Local Wi-Fi AP
Miracast P2P

4. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

Apply Cancel Refresh

This site says...

Are you sure you want to change the settings and reboot your receiver?

OK Cancel

5. The receiver reboots, and new setting takes effect after the reboot.

Part VI Updating Firmware for the Receiver

ScreenBeam 1000 allows updating its firmware wirelessly through the LMI or locally through a USB flash drive.

6.1 Firmware Update via LMI

There are two ways to update the receiver's firmware via LMI: from a local PC or from the ScreenBeam firmware update server.

6.1.1 Updating Firmware from a Local PC

Users can wirelessly update the receiver's firmware by transferring the firmware update file from a local PC.

To upgrade the receiver from a local PC, follow this procedure:

1. Download the latest firmware from ScreenBeam's website:
<https://support.screenbeam.com>.
2. Log into ScreenBeam 1000's Local Management Interface, and go to the **Firmware Upgrade** tab page by clicking the **Firmware Upgrade** tab.

Local Management Interface

[Device Configuration](#) [Features](#) [Digital Signage](#) [Network Settings](#) [Local Wi-Fi](#) [Management Access](#) [Firmware Upgrade](#) [Maintenance](#)

On the **Firmware Upgrade** tab page, users can check the current firmware version in the **Firmware Version** section.

Current Version

11.0.2.0

From a USB drive

☒ Enable ☐ Disable

Update automatically starts once USB stick (with autorun files) is plugged in. Receiver needs to be in Ready to Connect state.

From a local PC

Browse...

From the Internet

Check for Updates

3. Select the **Browse** button next to the **From a local PC** box.


Current Version 11.0.2.0

From a USB drive ☒ Enable ☐ Disable Update automatically starts once USB stick (with autorun files) is plugged in. Receiver needs to be in Ready to Connect state.


From a local PC **Browse...**

From the Internet **Check for Updates**

4. The **Open** window appears. Navigate to the extracted firmware file folder. Select the firmware file ("**install.img**") and click the "**Open**" button to continue.

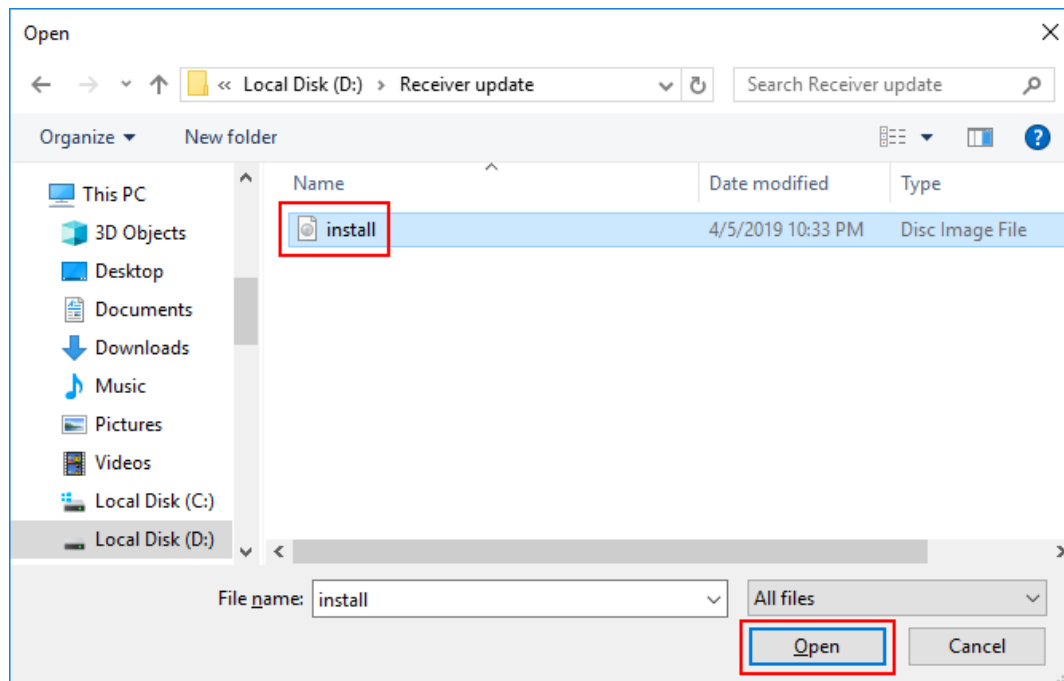

5. Click the **Apply** button, and then click **OK** on the pop-up message box to continue.

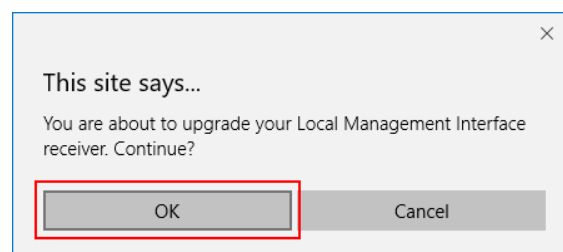

6. The web server starts transferring the firmware file to the receiver.

 
Current Version 11.0.2.0

From a USB drive ☒ Enable ☐ Disable Update automatically starts once USB stick (with autorun files) is plugged in. Receiver needs to be in Ready to Connect state.

From a local PC install.img Remove

From the Internet Check for Updates

Apply Cancel Refresh



7. The receiver reboots and upgrades itself after the file is uploaded successfully. Firmware upgrade status is displayed on the connected display.
8. When the receiver returns to the **Wireless Display Ready to Connect** Screen, the receiver has been upgraded.

Warning! Do NOT power off your receiver during the upgrade process. The upgrade will take some time. Please be patient.

6.1.2 Updating Firmware from the Internet

Users can wirelessly update the receiver's firmware with the online update server.

To upgrade your receiver from the Internet, follow this procedure:

1. Ensure the receiver is connected to a network that has access to the Internet.
2. Log into ScreenBeam 1000's Local Management Interface, and go to the **Firmware Upgrade** tab page by clicking the **Firmware Upgrade** tab.

Local Management Interface

Device Configuration Features Digital Signage Network Settings Local Wi-Fi Management Access **Firmware Upgrade** Maintenance

On the **Firmware Upgrade** tab page, users can check the current firmware version in the **Firmware Version** section.

Current Version 11.0.2.0

From a USB drive ☒ Enable ☐ Disable Update automatically starts once USB stick (with autorun files) is plugged in. Receiver needs to be in Ready to Connect state.

From a local PC Browse...

From the Internet Check for Updates

3. Click the **Check for Updates** button next to the **From the Internet** box. If there is new firmware update available, a message will show in the **From the Internet** box as "Newer version is available".

Current Version 11.0.2.0

From a USB drive ☒ Enable ☐ Disable Update automatically starts once USB stick (with autorun files) is plugged in. Receiver needs to be in Ready to Connect state.

From a local PC Browse...

From the Internet Check for Updates

Current Version 11.0.2.0

From a USB drive ☒ Enable ☐ Disable Update automatically starts once USB stick (with autorun files) is plugged in. Receiver needs to be in Ready to Connect state.

From a local PC Browse...

From the Internet Newer version is available Update Now

4. Click the **Update Now** button to start firmware update for the receiver.

Current Version 11.0.2.0

From a USB drive ☒ Enable ☐ Disable Update automatically starts once USB stick (with autorun files) is plugged in. Receiver needs to be in Ready to Connect state.

From a local PC Browse...

From the Internet Newer version is available **Update Now**

5. The receiver downloads firmware from the Internet update server.

Work Settings Local Wi-Fi Management Access Firmware Upgrade Maintenance

Current Version 11.0.2.0

From a USB Update automatically starts once is plugged in. Receiver needs to

From a local Browse...

From the Internet Newer version is available **Update Now**

Downloading firmware. This may take a few minutes.

Cancel

Apply Cancel Refresh


6. The receiver reboots and upgrades itself after the file is downloaded successfully. Firmware upgrade status is displayed on the connected display.
7. When the receiver returns to the **Wireless Display Ready to Connect** Screen, the receiver has been upgraded.

Warning! Do NOT power off your receiver during the upgrade process. The upgrade will take some time. Please be patient.

6.2 Firmware Update using a USB Flash Drive

To update the receiver's firmware with a USB flash drive, follow this procedure:

1. Download the latest firmware from ScreenBeam's website:
<https://support.screenbeam.com>.
2. Extract the downloaded file and copy the "**install.img**" file and the "**autorun**" file folder to the root directory of a USB flash drive.

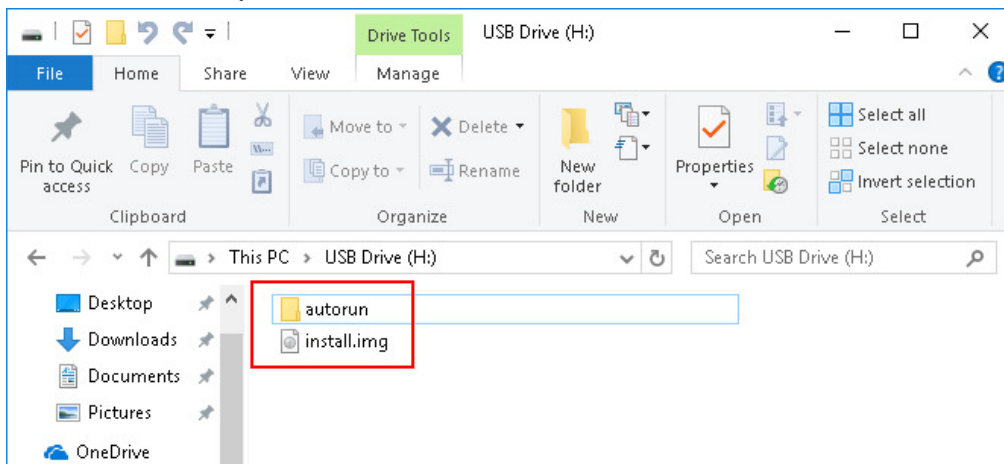

Note:

- Do not use a portable hard drive. It is recommended to use a FAT/FAT32 formatted USB flash drive only.
 - Do not make any change to the extracted files.
3. Ensure the "**Wireless Display Ready to connect**" screen appears on your TV.
Note: Ensure that the receiver is in idle state before starting the upgrade process.
 4. Log into the receiver's LMI. Go to the **Firmware Upgrade** page, and make sure **From a USB Drive** is set to **Enable**.

Current Version

From a USB drive ☒ Enable ☐ Disable Update automatically starts once USB stick (with autorun files) is plugged in. Receiver needs to be in Ready to Connect state.

From a local PC

From the Internet

5. Plug the USB flash drive into the USB port on the receiver.
6. The receiver starts to update its firmware automatically. Firmware upgrade status messages appear on your TV.
Warning! Do not power off the receiver or remove the USB flash drive while the upgrade is in progress. Otherwise, firmware upgrade fails.
7. The receiver reboots after firmware update completes.
8. You may now remove the USB flash drive when you see the "**Wireless Display Ready to connect**" screen again.

Note: Ensure that the **sbrun.txt** file is not present on the USB flash drive if you want to use the same USB flash drive to upgrade the same receiver again.

Part VII Receiver Maintenance


This section introduces setups for receiver maintenance.

7.1 Setting up Receiver Logging

ScreenBeam receiver can save events in logs, and these logs can be retrieved by the receiver's LMI or ScreenBeam CMS. Refer to the ScreenBeam CMS user guide for detail.


To set up the receiver's logging, follow this procedure:

1. Log into the receiver's LMI, and go to the **Features** tab page.

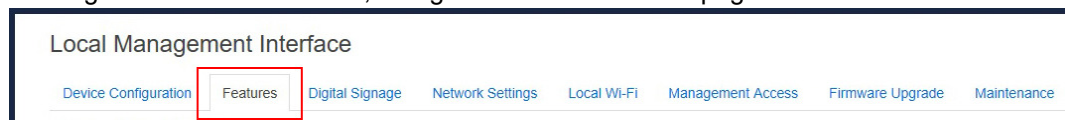


2. Go to the **Display Setting** section, and set **Receiver Logging** to **Enable** or **Disable**.

 - **Enable:** The receiver will record logs when there are events happen.
- **Disable:** The receiver will NOT record any events.




3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

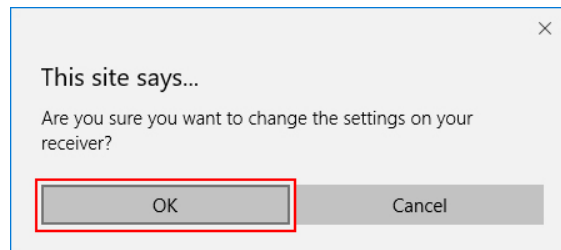

7.2 Exporting Receiver Log with LMI

To export logs from the receiver, follow this procedure:


 
1. Ensure receiver logging is enabled. Refer to Section 7.1 **Setting up Receiver Logging** for details.
2. Log into the receiver's LMI, and go to the **Maintenance** tab page.



3. Go to the **Export Logs** section, and click the **Export** button next to **Export Receiver Logs**.



 4. The file download dialog box appears. Click **Save** or **Save as** to save the receiver log.

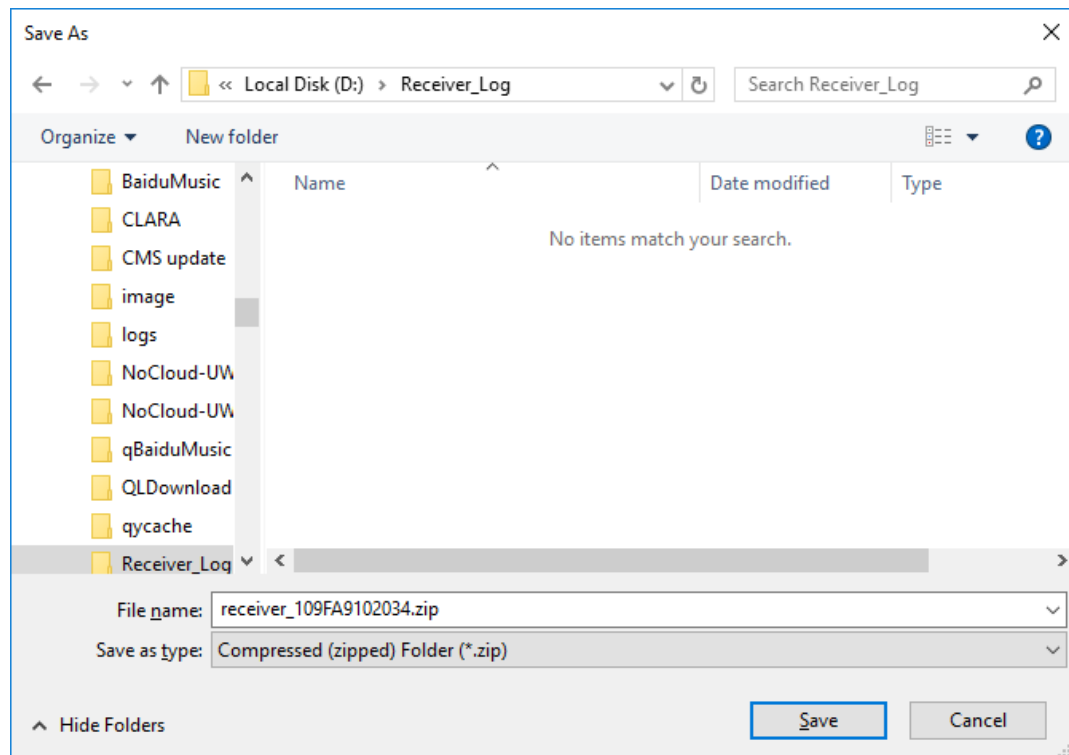


7.3 Disabling the Reset Button

ScreenBeam 1000 provides a button to reset the receiver to default settings. It is the reset button. ScreenBeam 1000 also allows users to disable all functions of this button.

To disable functions of the reset button, follow this procedure:

 1. Log into the receiver's LMI, and go to the **Features** tab page.




2. Go to the **Display Setting** section, and set **Push Button** to **Enable** or **Disable**.

- **Enable:** Functions of the reset button are available.
- **Disable:** Functions of the reset button are not available.




3. Click the **Apply** button, and then click **OK** on the pop-up message box to confirm.

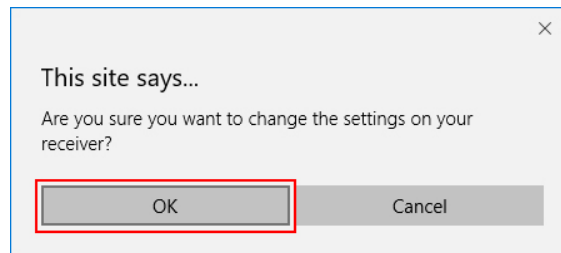

7.4 Viewing System Uptime

To view the receiver's system uptime, follow this procedure:

 1. Log into the receiver's LMI and go to the **Maintenance** tab page.



2. Go to the **System Uptime** section, and check the time period displayed on the **Time since last boot** line.

System Uptime



 
7.5 Rebooting the Receiver

To reboot your receiver, unplug the power adapter from the power outlet, wait 5 seconds and then plug it in.


If you can't access the receiver locally, you can reboot the receiver through the receiver's LMI.

To reboot the receiver with LMI, follow this procedure:


1. Log into the receiver's LMI and go to the **Maintenance** tab page.



2. Go to the **Device Utilities** section and click the **Reboot** button next to "Reboot Receiver".

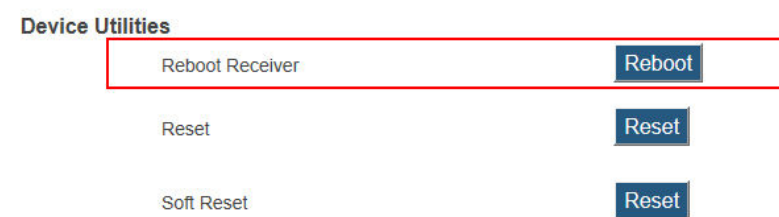

3. Click **OK** on the pop-up message box to confirm.

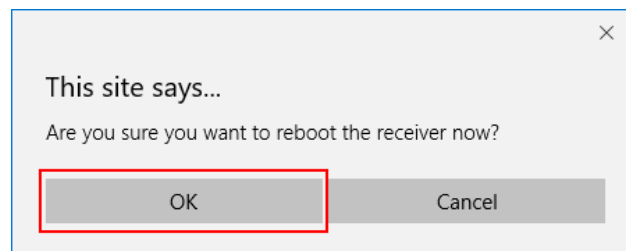

7.6 Resetting the Receiver to Default

To reset all settings of the receiver to default, follow this procedure:

 
1. Power on the receiver and wait until the "Wireless Display Ready to Connect" screen appears.
2. Ensure that the **Push Button** feature is enabled. Refer to Section 7.3 **Disabling the Reset Button** for details.
3. Press and hold the receiver's reset button.
4. When the "Resetting to factory defaults" screen appears on the HDTV, release the reset button.

The receiver reboots, and it will be running with its default settings.

Note: This method will reset all settings to defaults.

If you can't access the receiver locally, you can reset the receiver through the receiver's LMI. To reset the receiver with LMI, follow this procedure:


1. Log into the receiver's LMI and go to the **Maintenance** tab page.




2. Go to the **Device Utilities** section and click the **Reset** button next to "Reset". This button works the same as the physical button on the receiver.



3. Click **OK** on the pop-up message box to confirm.

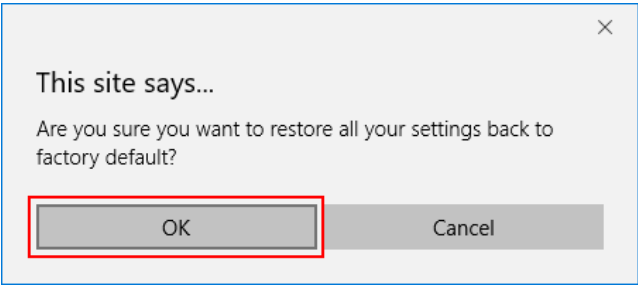

4. The receiver reboots, and the receiver is reset to factory defaults after the reboot.
5. If you want to reset the receiver but retain the network connection settings and remote management settings, click the **Reset** button next to "Soft Reset".

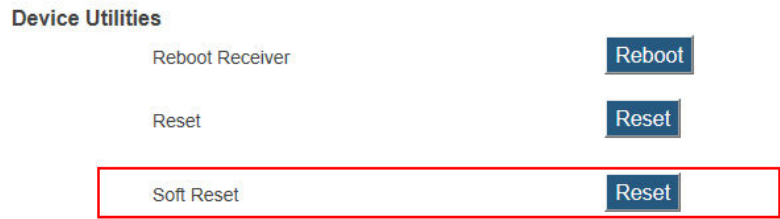

When you soft-reset your receiver through the LMI, the following settings will be retained:

● CMS Server IP address ● CMS communication port ● Receiver IP setting (DHCP or Static IP) ● Receiver IP address ● Receiver Subnet Mask ● Receiver Gateway ● Receiver DNS setting (Dynamic or Static)	● Primary DNS ● Secondary DNS ● Host Name ● Wireless connection settings ● Timezone
---	---

7.7 Tips for Optimal Performance

For optimal performance, you can try these tips:

- Keep the receiver within line-of-sight of the source device. Doing this will help ensure the receiver receives the best possible signal.
- The receiver's optimal wireless range is within 30 feet from the source device. However, actual range and effectiveness depends on many factors, including other sources of interference and the building materials used in the surrounding structure.
- Avoid placing the receiver near wireless interference sources, such as metal shelf, electric fans, items with motors, microwave ovens, cordless phones, and 2.4 GHz Non-Wi-Fi radio devices.

Appendix I Troubleshooting and FAQs

This chapter describes some problems you may encounter using ScreenBeam 1000, and possible solutions to those problems. Also included are frequently asked questions (FAQs), and answers to those questions.

Troubleshooting

I'm not seeing anything on my HDTV screen after powering on the receiver.

Check the cable connections and make sure the TV Input setting is the same as the HDMI port to which the receiver is connected.

I'm seeing artifacts and experiencing a choppy, juddering video stream.

In noisy Wi-Fi environments, audio and video freezes may be observed while playing video content, and longer than expected latency may occur when streaming. To ensure you have an optimal Wi-Fi environment:

- Disconnect and reconnect the receiver.
- If the source device is connected to a wireless router, restart the router, or change the wireless channel on your wireless router/AP. Refer to the wireless router's user manual for more information.

I'm seeing choppiness and brief pauses while watching Internet video on my Miracast™ device.

Wireless interference may cause Internet video playback to be choppy. If this occurs, try the following:

- Disconnect the device from the receiver. Make sure the Internet connection is good and that the video playing on the phone is smooth.
- Clear the YouTube cache and try playing the video again.

I'm seeing choppiness and brief pauses while watching local video on my Miracast™ device.

Wireless interference may cause the video playback to be choppy. If this occurs, try the following:

- Make sure you are in the same room as the receiver is.
- Set the media player to use the H/W decoder, if available.
- Reboot the Miracast™ device and receiver and connect again.
- Avoid moving the Miracast™ device around too much.
- Change the wireless channel on your wireless router/access point, or on your receiver.

My Windows 10/8.1 displays to the TV but the four edges are cut off (overscan).

This is expected with some system's supported display resolution. You can adjust Windows screen resolution settings to fit the PC's screen on your TV display.

I encounter connection failure with ScreenBeam 1000 and my device can't connect to it any more.

- Reboot the ScreenBeam 1000 and try connection again. Or, reboot your device (laptop/Ultrabook/tablet/smartphone) and try connection again.
- Reboot both the ScreenBeam 1000 and your device and try connection again.
- If you are using a Windows 8.1 operating system, go to **Change PC settings > PC and Devices > Devices > Projectors**, remove the profile of the ScreenBeam 1000 from your device (PC/laptop/Ultrabook), and try connection again.
- If you are using a Windows 10 operating system, go to **Settings > Devices > Wireless displays & docks** (or **Settings > Devices > Connected Devices > Projectors** on older versions), remove the profile of the ScreenBeam 1000 from your device (PC/laptop/Ultrabook), and try connection again.

I can't connect to the receiver with ScreenBeam Configuration Utility on my device. The Utility can't find the receiver.

ScreenBeam 1000 is not compatible with ScreenBeam Configuration Utility. To configure or upgrade the receiver, you should use the receiver's Local Management Interface or ScreenBeam Central Management System.

When I connect the source device to a wireless network (router/AP), why ScreenBeam 1000 disconnects automatically?

The source device's communication channel has changed when you connect your device to a wireless network (router/AP) in the situation that the source device is connected to ScreenBeam 1000. As a result, ScreenBeam 1000 disconnects from the source device.

If the source device doesn't support Different Channel Mode, you need to set the receiver to work on the same channel with your router/AP.

My Chromebook or Chrome browser can't find ScreenBeam.

Try one or more methods below:

- Make sure the Wireless Display over LAN feature is enabled for Google Cast, and ScreenBeam and your device are connected to the same network.
- Make sure your receiver have access to the Internet so that it can synchronize its time with an NTP server.
- Access google.com on your device to verify that your device have access to a Google server.
- Reset your receiver's time zone to Universal Time if you have changed its time zone. (This method is applicable to ScreenBeam with firmware 11.0.6.0.)

FAQs

Can I view protected content if ScreenBeam 1000 receiver is connected a display through the VGA port?

No. The VGA port does not support playback of protected content such as blue-ray.

How can I tell if my device supports Wi-Fi Miracast?

Look for one of the following Miracast applications on your device. Only some application names are listed below. Different manufacturers may have different names for the Miracast apps on their products. But, they should indicate similar meaning.

- Connect
- Wireless display
- Wireless mirroring
- Screen mirroring
- AllShareCast (Samsung devices only)
- Cast screen

Visit ScreenBeam 1000 compatibility page for the recommended Miracast devices.

Do I need to install drivers/apps to use the ScreenBeam 1000 receiver?

- For **Windows 8.1/10**, you only need to install the latest Windows updates.
- For **Android 4.4** or higher, no app is required.
- For **Apple** devices that support AirPlay, no app is required.
- For **ChromeOS** devices with Cast, no app is required.

How can I improve my video/audio performance?

You can try the following methods to improve the ScreenBeam 1000's video/audio performance:

- Place your device closer to the receiver.
- Connect your device to a wireless network that is using a cleaner wireless channel or change the wireless channel on the current wireless network, and then connect the device to the receiver.
- Turn off the Wi-Fi devices that are not in use currently.

What wireless signal range can I expect with the receiver?

The receiver is designed to be used in the same room with the source device. For best performance, the source device should be placed within 20 meters to the receiver.

How can I adjust the display to fit properly to my TV screen?

You can adjust the display by using the receiver's Local Management Interface or ScreenBeam Central Management System.

- Log into the receiver's Local Management Interface and adjust the display in the **Adjust TV Screen Size** section of the **Features** page.
- In the ScreenBeam Central Management System, double click the receiver to open the receiver configuration page, and then adjust the TV screen size in the **Features**

section.

How to set the ScreenBeam video output to fit a display with aspect ratio other than 16:9?

- ScreenBeam receiver's HDMI output supports 16:9 resolutions only.
- To output an aspect ratio other than 16:9, please use the receiver's VGA output.
- The display device must provide EDID information. Otherwise, ScreenBeam outputs the 1024*768 resolution when using the receiver's VGA output.
- The VGA cable must support I2S (has 3+6, or 3+9 lines).
- Set the resolution to the desired one on the source device. Make sure the resolution is supported by the source device, the adapter, and the display device. Otherwise, the display is stretched or has black edges.

Can I extend my Windows desktop to the HDTV or Projector from my Miracast device?

Yes. After the connection to ScreenBeam 1000 receiver is established, by default you should see the laptop screen mirrored to the HDTV or Projector.

To extend your Windows desktop to an HDTV or a Projector, press the Windows key and P key together, and select the **"Duplicate"**, **"Extend"** or **"Second screen only"** mode.

To extend your macOS desktop to an HDTV or a projector, select the AirPlay icon  on the menu bar and select a desired projection mode from **Mirror Built-in Display**, **Mirror Apple TV**, and **Use As Separate Display**.

What is Wi-Fi Miracast™?

Wi-Fi Certified Miracast™ is a groundbreaking solution for seamlessly displaying video between devices, without cables or a network connection. Users can view pictures from a smartphone on a big screen television, share a laptop screen with the conference room projector in real-time, and watch live programs from a home cable box on a tablet. Miracast™ connections are formed using Wi-Fi Certified Wi-Fi Direct™, so access to a Wi-Fi® network is not needed—the ability to connect is inside Miracast™-certified devices.

What is Wi-Fi Direct and can I connect to the receiver using Wi-Fi Direct?

Wi-Fi Direct is a peer-to-peer technology that Miracast™ connections are formed in. Even though some newer Android 4.0 and Windows 8.1 devices may detect the receiver in the Wi-Fi Direct devices scan list, they will not be able to connect to the receiver. The device must support Miracast™ to connect with the receiver.

Can I connect to the Wi-Fi router and the receiver simultaneously with my compatible laptop?

Yes. Connect the laptop to an available Wi-Fi router first, and then connect to the receiver. You can then view online content and beam it to the HDTV.

Can I connect to the Wi-Fi router and the receiver simultaneously with my Miracast™ device?

Some Miracast™ devices cannot connect to both the Wi-Fi router and the receiver at the same time. Refer to the device manufacturer's or carrier's user manual for more information.

Can I connect several Miracast devices to the receiver simultaneously?

This connection scenario is available in Classroom Commander mode. Refer to the Classroom Commander user guide for details.

When Multiview mode is enabled, up to four Miracast devices can connect to the receiver simultaneously.

Can I connect to multiple ScreenBeam 1000 Receivers simultaneously?

No. You can only connect to one ScreenBeam 1000 at a time.

My TV/Projector does not have an HDMI Input. Can I still use ScreenBeam 1000?

Yes. A VGA port is available for compatibility with legacy display devices.

Can ScreenBeam 1000 support wireless touch and inking?

Yes. ScreenBeam 1000 supports UIBC. The source device must install a Window 10 system and meet the following hardware requirements:

- 4th Gen Intel Core (Haswell or better) processor
- AMD A4-5000 (Kabini or better) processor

Can I push media to the receiver using DLNA?

No. The receiver is not a DLNA media receiver.

Does the receiver work with the Apple iPhone, iPad, or iPod?

Yes. ScreenBeam 1000 can works with Apple devices that support AirPlay screen mirroring.

"Allow input from a keyboard or mouse connected to this display" is displayed even no USB device is connected to the ScreenBeam receiver. Would it have any impact on the Miracast connection if the option is checked while no USB device is present?

No. This is a standard behavior of Windows 10.

Appendix II Notices

Warranty

This product has a one-year Limited Hardware Warranty and 90-day free software updates from the date of purchase.

- **Local Law**

This Limited Warranty Statement gives the customer specific legal rights. The customer may also have other rights which vary from state to state in the United States, from province to province in Canada, and from country to country elsewhere in the world.

To the extent that this Limited Warranty Statement is inconsistent with local law, this Statement shall be deemed modified to be consistent with such local law. Under such local law, certain disclaimers and limitations of this Warranty Statement may not apply to the customer.

GPL Info

For GNU General Public License (GPL) related information, go to <https://opensource.screenbeam.com>.

Technical Support

For FAQs, troubleshooting tips, documentation, firmware update and support, visit:

<https://support.screenbeam.com>

To open a ticket for support, visit:

<https://support.screenbeam.com/ticket>

Website: www.screenbeam.com

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. Use only the supplied antenna.

IC Warning

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- this device may not cause interference,
- this device must accept any interference, including interference that may cause undesired operation of the device.

This Class [B] digital apparatus complies with Canadian ICE-003.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- l'appareil ne doit pas produire de brouillage, et
- l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada.

L'appareil a été évalué pour répondre aux exigences générales d'exposition RF.

L'appareil peut être utilisé dans des conditions d'exposition fixes / mobiles.

La distance de séparation minimale est de 20 cm.

Caution:

Operating Frequency Range band 5150-5250 MHz "for indoor use only."

CE Statement

Manufacturer's Name: Actiontec Electronics, Inc.

Product Name: ScreenBeam 1000

Trade Mark: ScreenBeam

Model number: SBWD1000

Operating Temperature: 0°C to 40°C



This device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. All essential radio test suites have been carried out.

Detailed DOC file please visit our website:

<http://www.screenbeam.com/>

Testing standards:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

EN 62311:2008

(Draft) ETSI EN 301 489-1 V2.2.0 (2017-03)

(Final Draft) ETSI EN 301 489-3 V2.1.1 (2017-03)

(Draft) ETSI EN 301 489-17 V3.2.0 (2017-03)

EN 300 328 V2.1.1:2016-11

EN 301 893 V2.1.1:2017-05

EN 300 440 V2.1.1:2017-03

EN 55032:2015

EN 55035:2017

EN 61000-3-2:2014

EN 61000-3-3:2013

☒ The device complies with RF specifications when the device used at 20cm from your body.

Operating Frequency Range band 5150-5350 MHz “for indoor use only.”

Care for the environment! Must not be discarded with household waste!

RF Specification:

Wi-Fi Module 802C2447

Function	Operation Frequency	Max RF output power:	Limit
5.2G WI-FI 802.11a/ac(HT20, HT40,HT80) /n(HT20,HT40)	802.11a/n20/ ac20: 5180~5240MHz; 802.11n40/ ac40: 5190~5230MHz; 802.11 ac80: 5210MHz;	802.11a: ANT 0: 22.20dBm; ANT 1: 22.40dBm; ANT 2: 22.60dBm 802.11n20: ANT 0: 22.80dBm; ANT 1: 22.90dBm; ANT 2: 22.80dBm 802.11n20: ANT 0: 22.80dBm; ANT 1: 22.90dBm; ANT 2: 22.80dBm 802.11n40: ANT 0: 22.90dBm; ANT 1: 22.70dBm; ANT 2: 22.90dBm 802.11ac40: ANT 0: 22.70dBm; ANT 1: 22.70dBm; ANT 2: 22.90dBm 802.11ac80: ANT 0: 22.90dBm; ANT 1: 22.80dBm; ANT 2: 22.70dBm	23 dBm.
5.8G WI-FI 802.11a/ac(HT20, HT40,HT80) /n(HT20,HT40)	802.11a/n20/ac20: 5745-5825 MHz 802.11n40/ac40: 5755-5795 MHz 802.11 ac80: 5775MHz	802.11a: ANT 0: 13.60dBm; ANT 1: 13.90dBm; ANT 2: 13.80dBm 802.11n20 MIMO: 13.96dBm; 802.11ac20 MIMO: 13.96dBm; 802.11n40 MIMO: 13.90dBm; 802.11ac40 MIMO: 13.90dBm; 802.11ac80 MIMO: 13.92dBm;	13.98 dBm

Function	Operation Frequency	Max RF output power:	Limit
BLE	2402~2480 MHz	-0.31 dBm.	20 dBm.

Wi-Fi Module 802R8822

Function	Operation Frequency	Max RF output power:	Limit
2.4G WI-FI 802.11b/g/n (HT20,HT40)	802.11b/g/n(20MHz): 2412~2472MHz; 802.11n(40MHz): 2422~2462MHz	802.11b: ANT A: 18.20dBm; ANT B: 18.30dBm 802.11g: ANT A: 19.90dBm; ANT B: 19.90dBm 802.11n20MIMO:19.96dBm; 802.11n40MIMO:19.98dBm;	20 dBm.
5.2G WI-FI 802.11a/ac(HT20, HT40,HT80) /n(HT20,HT40)	802.11a/n20/ ac20: 5180~5240MHz; 802.11n40/ ac40: 5190~5230MHz; 802.11 ac80: 5210MHz;	802.11a: ANT A: 22.50dBm;ANT B: 21.80dBm 802.11n20 MIMO: 22.50dBm; 802.11ac20 MIMO: 22.5dBm; 802.11n40 MIMO: 22.93dBm; 802.11ac40 MIMO: 22.93dBm; 802.11ac80 MIMO: 22.77dBm;	23 dBm.
5.3G WI-FI 802.11a/ac(HT20, HT40,HT80) /n(HT20,HT40)	802.11a/n20/ ac20: 5260~5320MHz; 802.11n40/ ac40: 5270~5310MHz; 802.11 ac80: 5290MHz;	802.11a: ANT A: 21.70dBm;ANT B: 21.00dBm 802.11n20 MIMO: 21.97dBm; 802.11ac20 MIMO: 21.97dBm; 802.11n40 MIMO: 22.97dBm; 802.11ac40 MIMO: 22.97dBm; 802.11ac80 MIMO: 22.98dBm;	23 dBm
5.6G WI-FI 802.11a/ac(HT20, HT40,HT80) /n(HT20,HT40)	802.11a/n20/ ac20: 5500~5700MHz; 802.11n40/ ac40: 5510~5670MHz; 802.11 ac80: 5530~5610MHz;	802.11a: ANT A: 22.40dBm;ANT B: 22.20dBm 802.11n20 MIMO: 22.36dBm; 802.11ac20 MIMO: 22.36dBm; 802.11n40 MIMO: 22.95dBm; 802.11ac40 MIMO: 22.95dBm; 802.11ac80 MIMO: 22.93dBm;	23 dBm
5.8G WI-FI 802.11a/ac(HT20, HT40,HT80) /n(HT20,HT40)	802.11a/n20/ac20: 5745-5825 MHz 802.11n40/ac40: 5755-5795 MHz 802.11 ac80: 5775MHz	802.11a: ANT A: 13.90dBm;ANT B: 13.90dBm 802.11n20 MIMO: 13.96dBm; 802.11ac20 MIMO: 13.96dBm; 802.11n40 MIMO: 13.93dBm; 802.11ac40 MIMO: 13.96dBm; 802.11ac80 MIMO: 13.96dBm;	13.98 dBm

This product can be used across EU member states.