



**ECB6250 Wall Mounting Template**  
PN 0535-0112-001

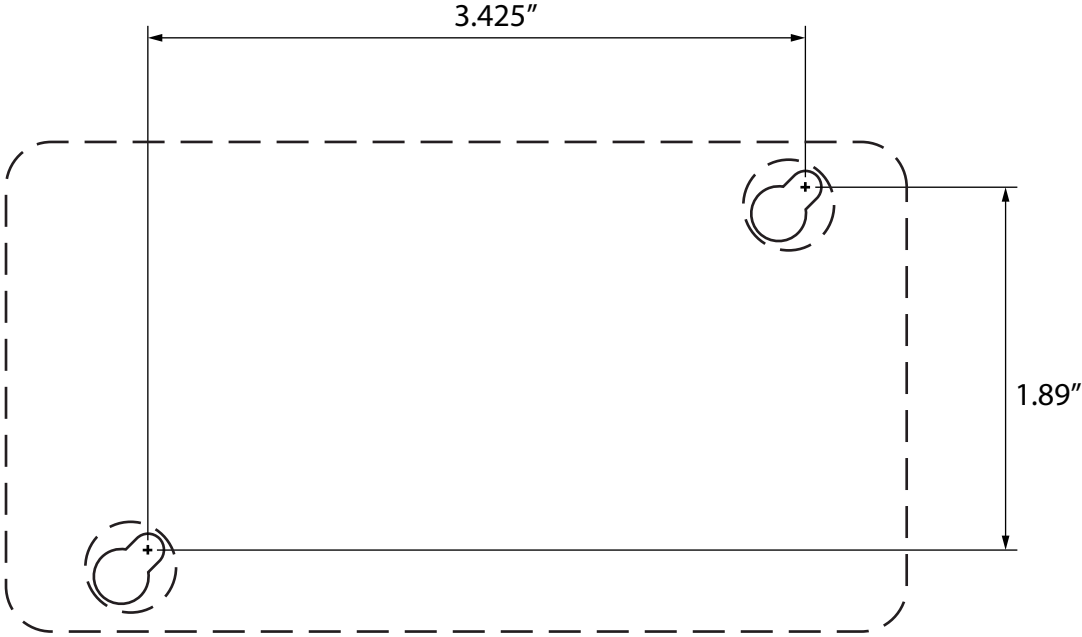

1. Place the template on the wall in the position the network extender will be mounted.
2. Mark the mounting holes. If mounting on wood, drill holes for the screws. If mounting on drywall, drill holes to accept drywall anchors.
3. Leave screws extended about 0.2 inches from the wall.
4. Locate the network extender keyhole openings over the screw heads and push down lightly on the network extender to lock it onto the screws.

### Fasteners

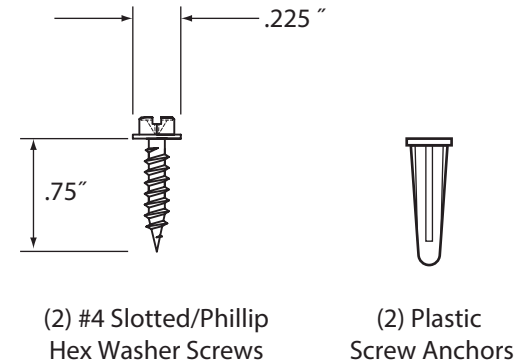

Illustrations Not to Scale

