


Wall Mounting Template

Rev 001


Applicable to:

- ScreenBeam 1000 EDU Gen 2 (Catalog # SBWD1000EDUG2)
- ScreenBeam 1100 FLEX (Catalog # SBWD1100F)
- ScreenBeam 1100 Plus (Catalog # SBWD1100)

Arranging screws horizontally

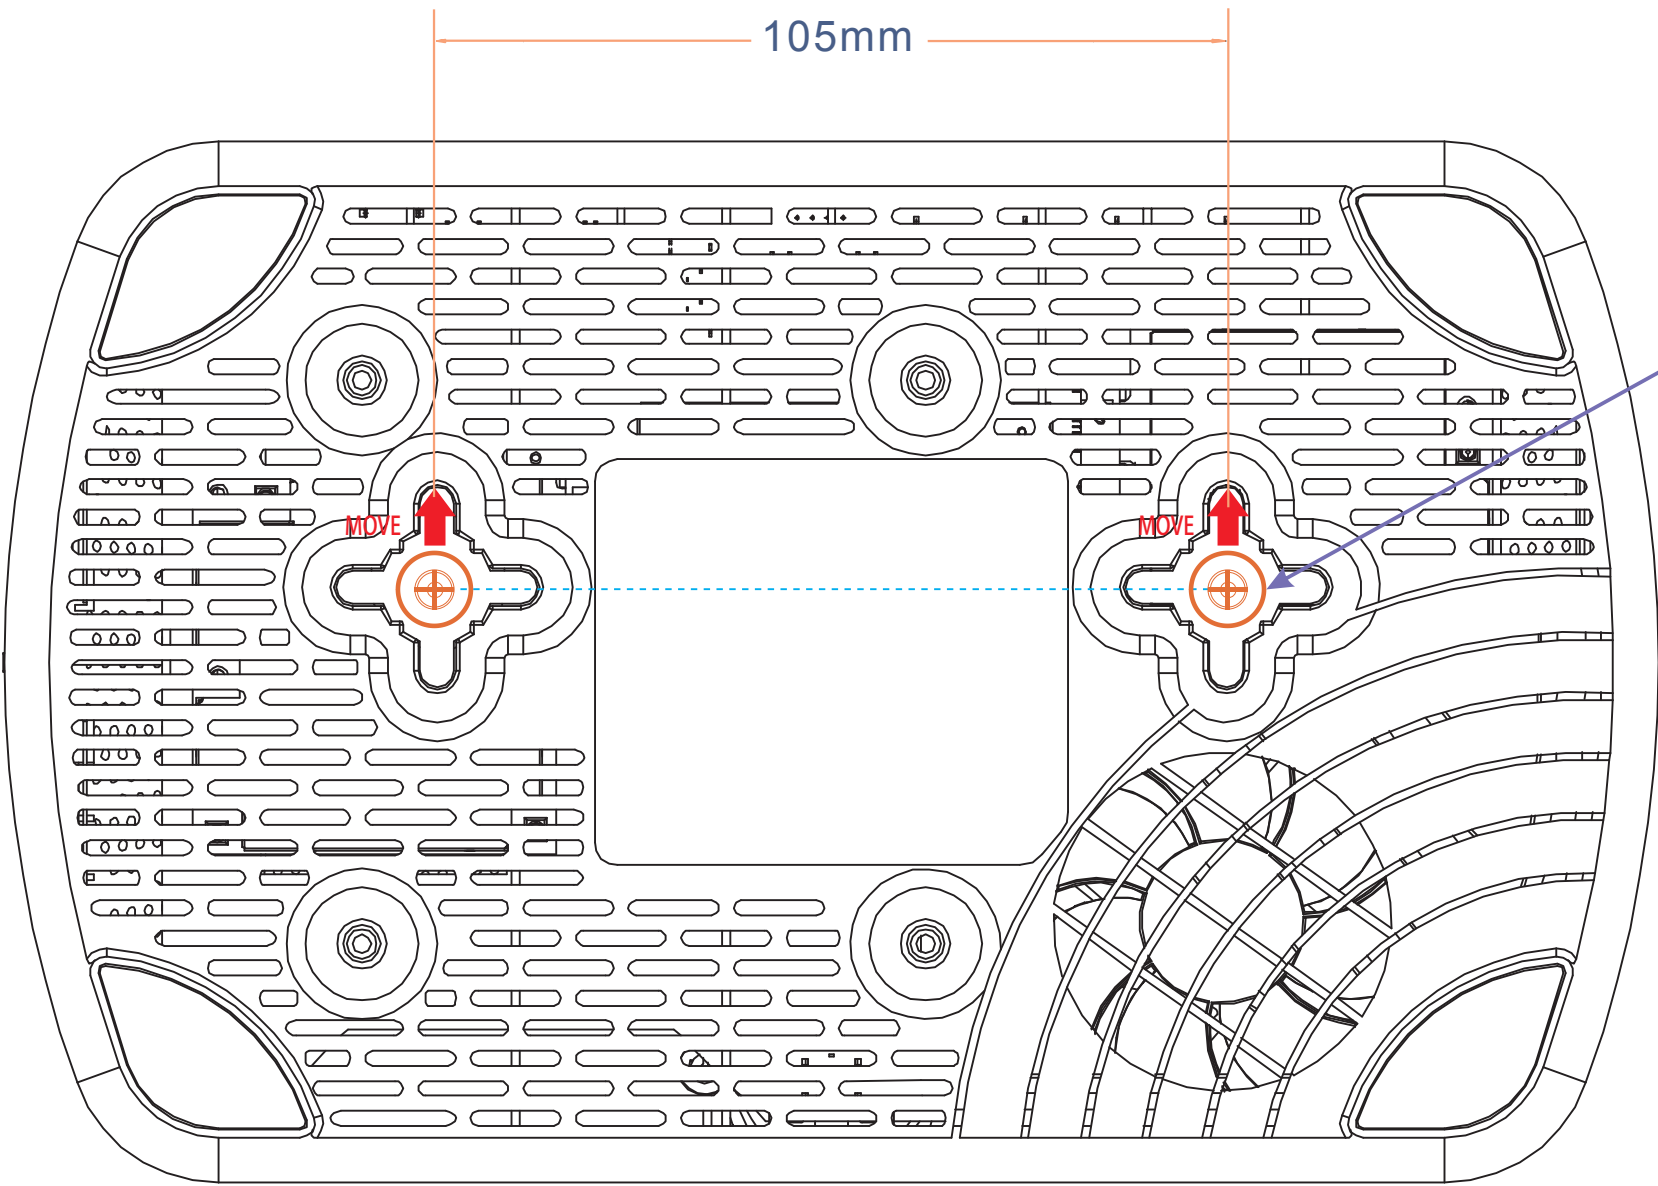


Arranging screws vertically

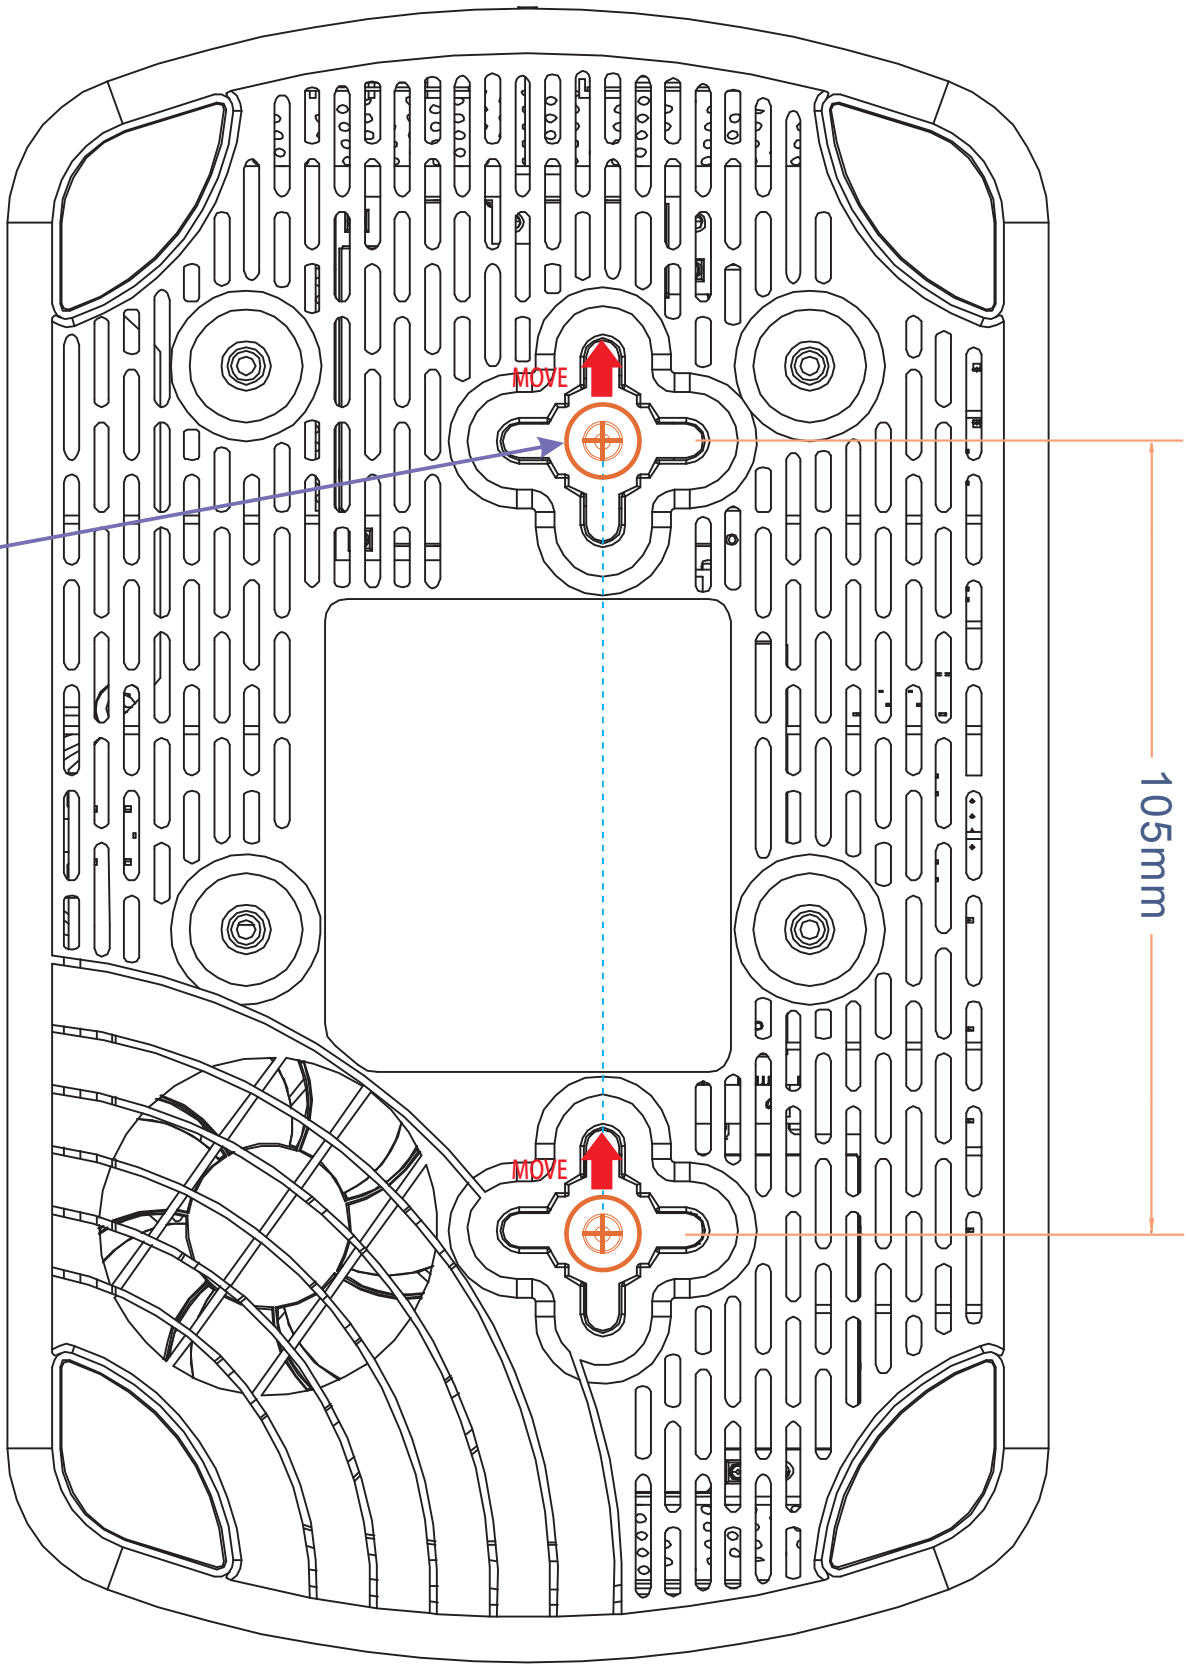


#6 Screw

1. Place the template on the wall in the position the receiver will be mounted.
2. Mark the mounting holes. If mounting on wood, drill holes for the screws. If mounting on drywall, drill holes to accept drywall anchors.
3. Leave screws extended about 3mm from the wall.
4. Locate the receiver keyhole openings over the screw heads and push down lightly on the receiver to lock it onto the screws.


Arranging screws horizontally

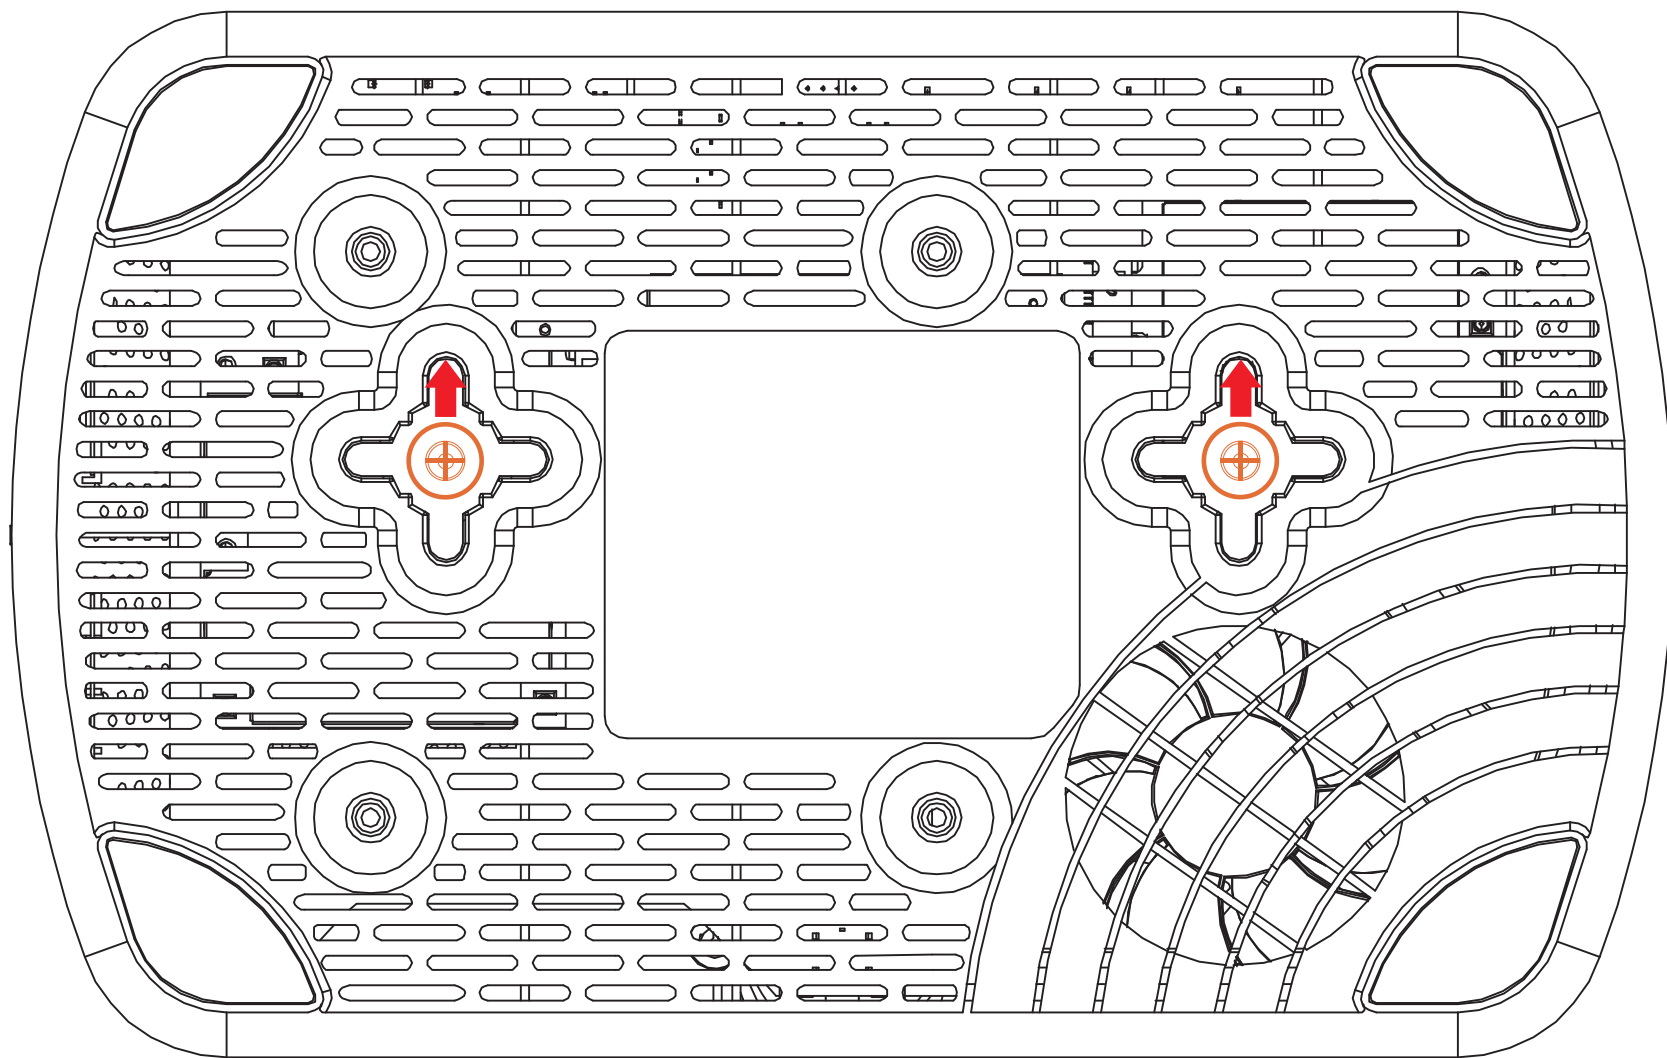



#6 s c r e w s p e c i f i c a t i o n

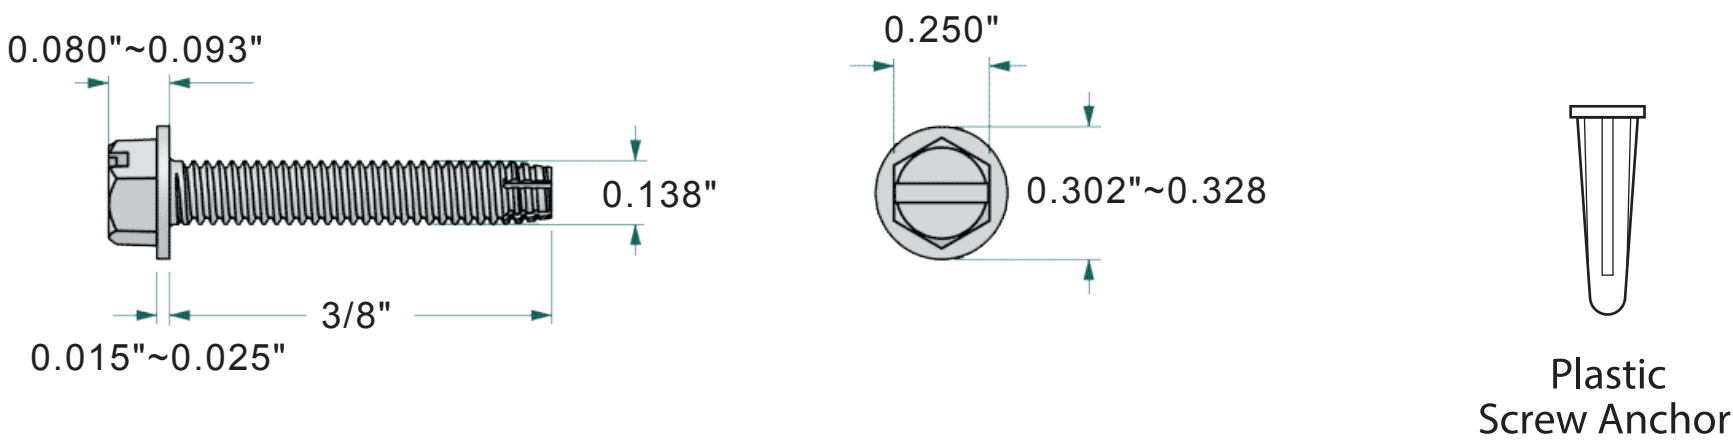

Illustrations Not to Scale

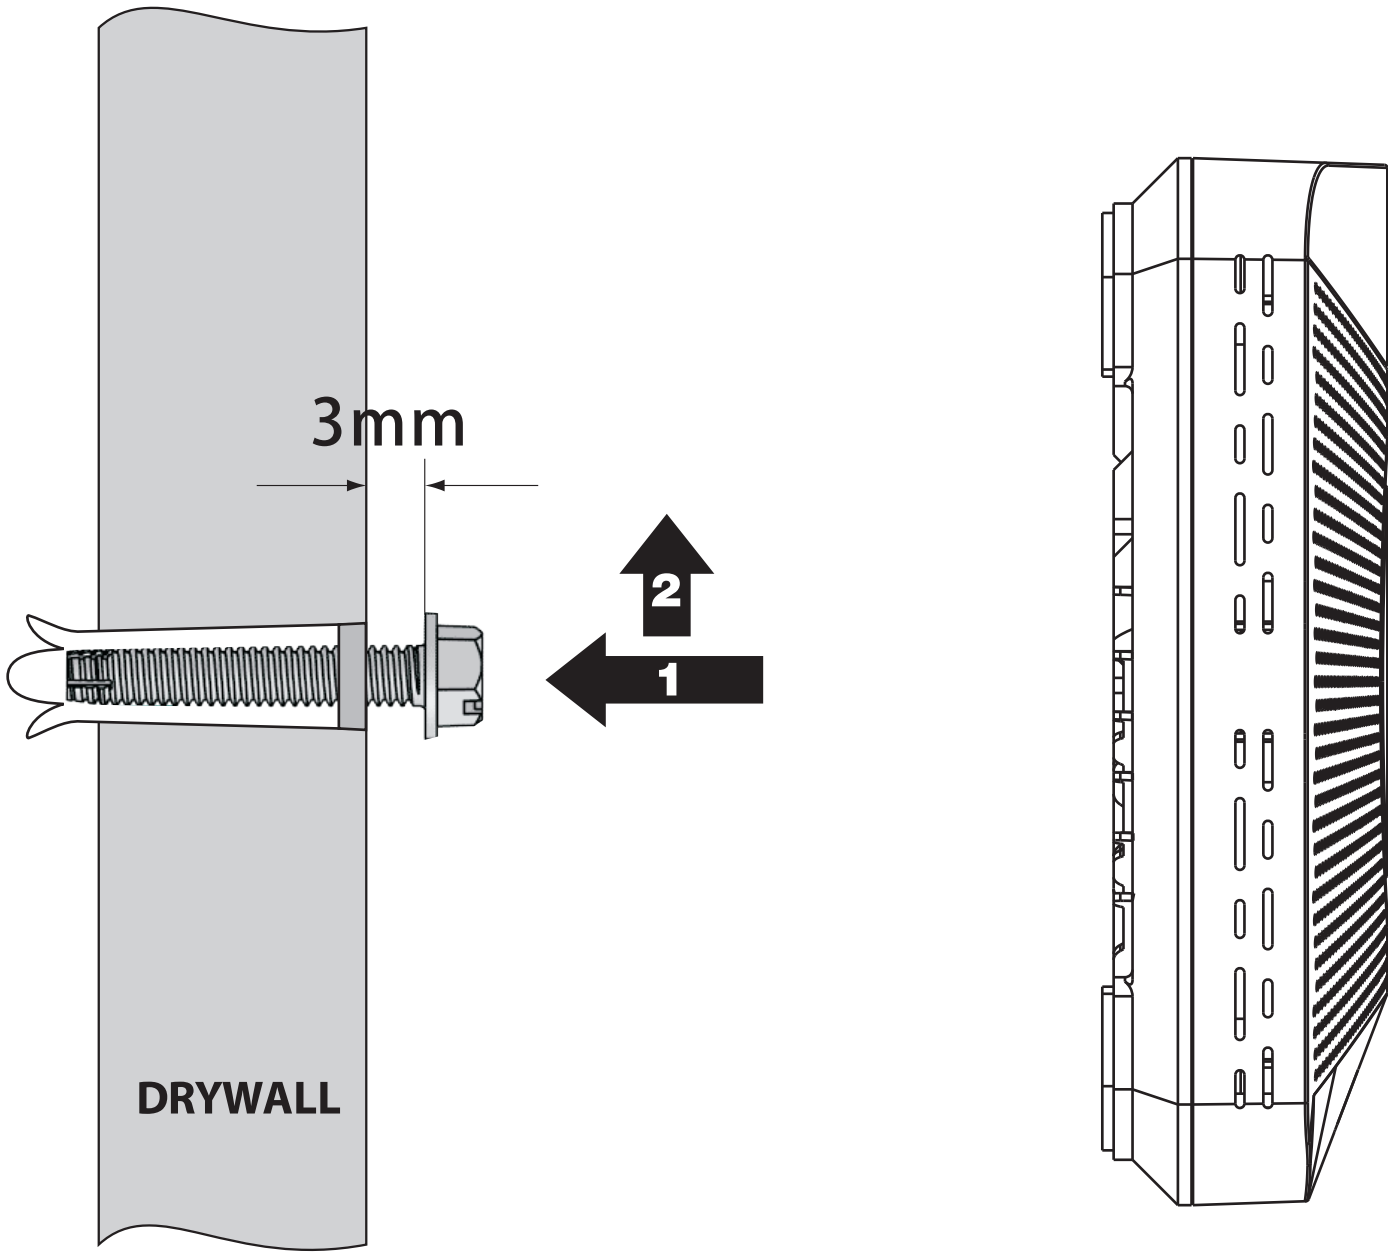

Arranging screws vertically

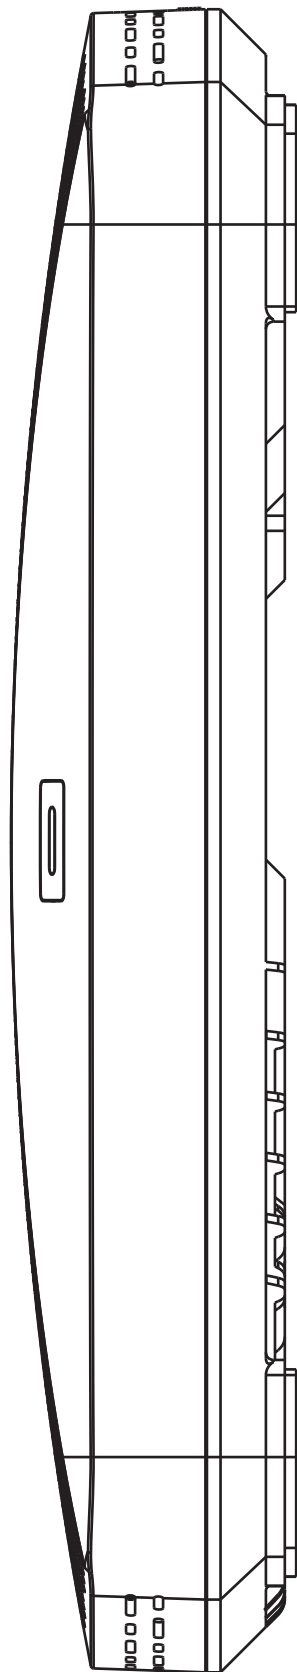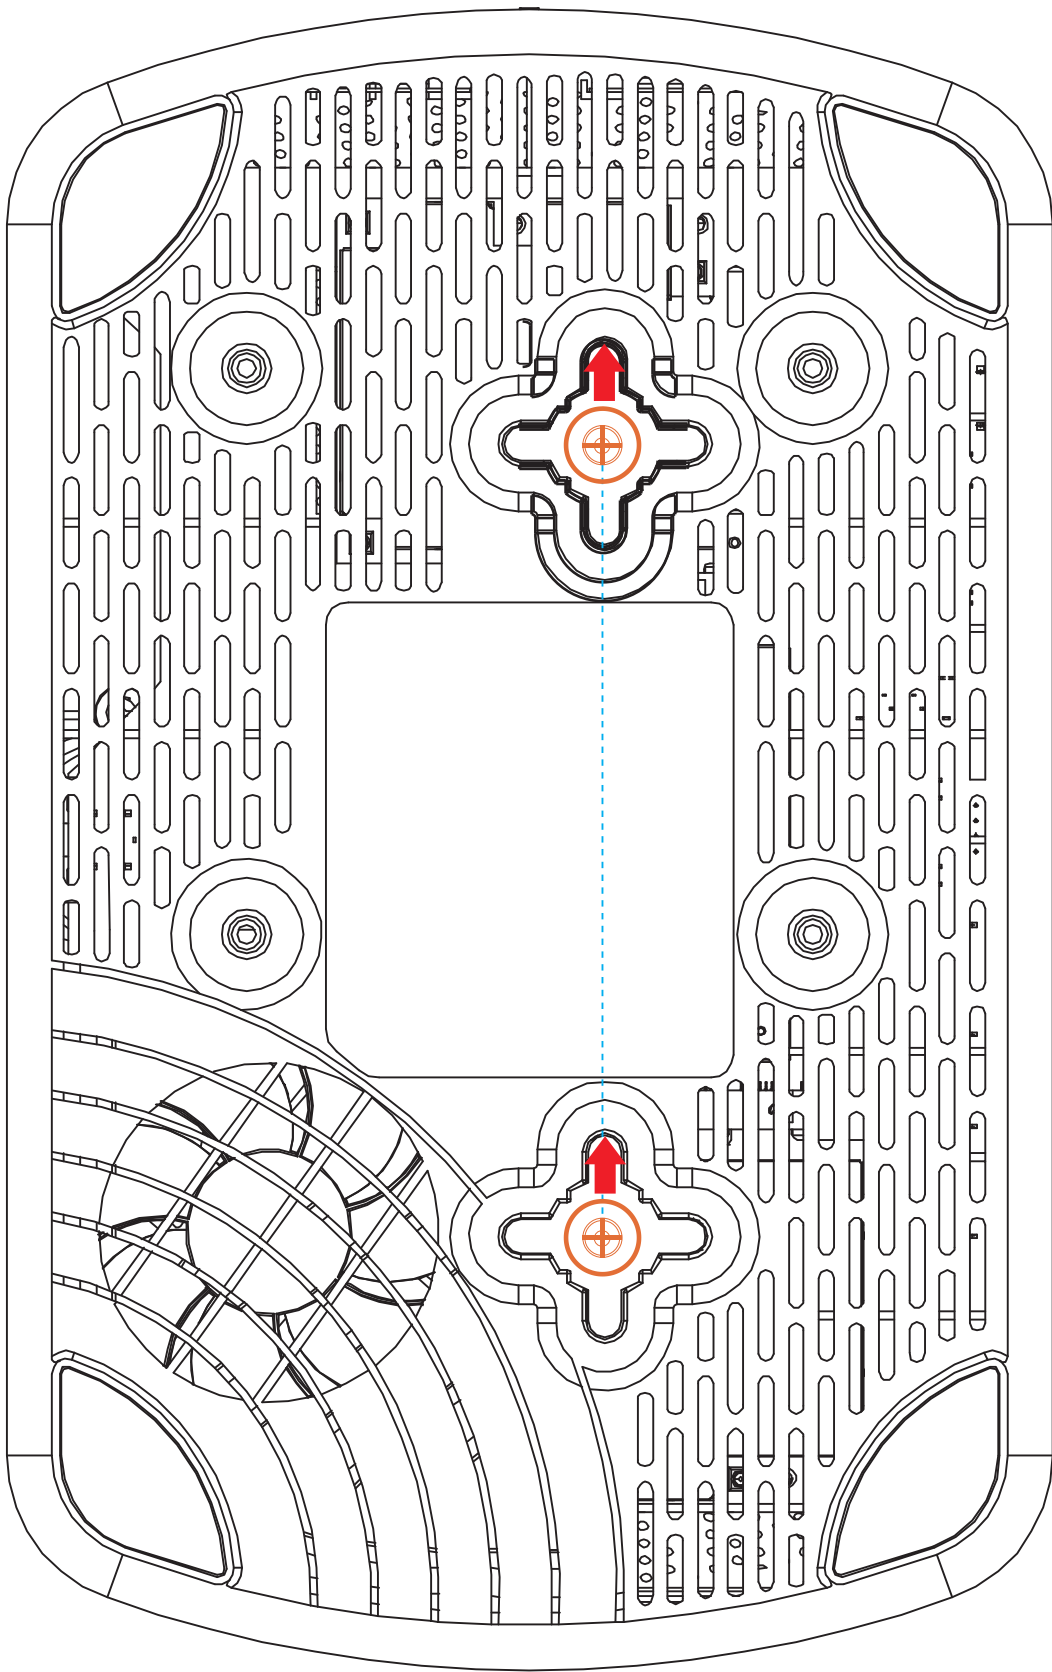

Illustrations Not to Scale

